

Part Number	Condition Code	Description
A01404-205	NE	SCREW
A03C11	OH	REGULATOR ASSY
A100717-101	OH	DISPENSER MOUNT ASSY
A102882-101	OH	CABLE ASSY
A102884-101	OH	CABLE ASSY
A103028-101	OH	CABLE ASSY
A1077B	NS	RELAY
A-1077V	OH	RELAY
A-1077V	OH	RELAY
A11C30	OH	IGNITION UNIT
A11C30	OH	IGNITION UNIT
A11C30-1	OH	IGNITION UNIT
A125-1B	OH	DIMMING CONTROL
A125-1B	OH	DIMMING CONTROL
A125-1B	OH	DIMMING CONTROL
A13D61	OH	NOZZLE HOLDER
A1400	OH	IND. TURN & SLIP
A15008	OH	FAN, VANEAXIAL
A15008	OH	FAN, VANEAXIAL
A15008	OH	FAN, VANEAXIAL
A15008	OH	FAN, VANEAXIAL
A15923	OH	DUCT ASSY, TRANSITION
A15923	OH	DUCT ASSY, TRANSITION
A1605	OH	IND. TURN SLIP
A16060	OH	HOUSING
A1-H60BB-460-400	OH	VALVE SELECTOR
A-20080-265	OH	VALVE, HYD RELIEF
A20152-3	OH	BLOWER ASSY
A21495	OH	INPUT VALVE, DUAL
A218-101117-05	NS	SWITCH
A2325-3A	SV	STRUT ASSY
A2337-4	SV	STRUT ASSY.
A-2376-21	NS	LENS
A24569	SV	TRANSFER TUBE
A301-61A	OH	ICS CONTROL
A301-61ACR	SV	CONTROL, ICS
A301-61CVR	OH	CONTROL, ICS
A301-6W	OH	CONTROL UNIT, COMM.
A301-6W	OH	CONTROL UNIT, COMM.
A301-6W	OH	CONTROL UNIT, COMM.
A301-6W	OH	CONTROL UNIT, COMM.
A301-6WCR	OH	CONTROL, COMM
A301-6WCVR	OH	CONTROL UNIT, COMM.
A-3044A	NE	RF FILTER
A3-1085	NS	SWITCH, TOGGLE
A3135-017-24A	NE	WASHER

A337-1	NS	STRUT ASSY
A39930-1	NE	CYLINDER ASSY
A39930-2	NE	CYLINDER ASSY
A413AHDACF14-28	OH	POWER SUPPLY
A506	NS	PINS
A51B27098-59C	OH	PANEL
A51B40001-5	OH	FAIRING ASSY
A51B40001-6	NS	FAIRING ASSY, WING
A51B92260-9	NS	PANEL ASSY
A5217	OH	CONTACT BLOCK
A524-1	OH	CONTROL, COCKPIT TEMP
A5930-02	OH	TURN & SLIP IND
A6120-61226-001	NS	TRACK ASSY/ WINDOW
A6120-72509-003	OH	FITTING FWD
A6120-72509-004	OH	FITTING AFT
A6120-72518-023	OH	POST ASSY
A6120-72519-015	NE	ROD END
A6125-51205-001	OH	STRUT ASSY
A6130-80215-002	NE	CLAMP ASSY
A6135-64003-003	OH	DRIVE SHAFT T/R #3
A6135-64003-041	OH	DRIVE SHAFT T/R #3
A6135-64028-004	NE	SHIM
A6135-64129-004	OH	DRIVE SHAFT
A6165-63161-041	OH	UPLOCK
A6230-62044-043	NE	CABLE ASSY
A6585A	NE	WORM & SHAFT ASSY
A691/2	OH	AMPLIFIER E.M.
A696/3	AR	SIMULATED CARBON AMP
A700AP	OH	RELAY, REV CURRENT
A-700AW	OH	CONTACTOR
A700ZC-7	OH	RELAY
A-700ZF	OH	RELAY
A-711JDC	OH	RELAY
A715-1	OH	LANDING LIGHT
A7700	OH	CONTACTOR
A770N	OH	RELAY, START
A770N	OH	RELAY, START
A770Q	OH	RELAY, START
A770Q	OH	RELAY, START
A770Q	OH	RELAY, START
A772XT	OH	RELAY
A81-16	OH	MONITOR, PANEL
A81-34-1	OH	STATION INTERCOM
A81-34-1	OH	STATION INTERCOM
A814	NS	VENT BREATHER
A81-59	OH	PANEL, MONITOR
A81-59	OH	PANEL, MONITOR

A81-59	OH	PANEL, MONITOR
A-8970B-2-327	NS	LIGHT, INSTRUMENT
A-927C	OH	CONTACTOR
A-927C	OH	CONTACTOR
A-957C	NE	RELAY
A-957E	OH	CONTACTOR
A-957E	OH	CONTACTOR
A-957E	OH	CONTACTOR
A-957E	OH	CONTACTOR
A-957E	OH	CONTACTOR
A-957E	OH	CONTACTOR
A-957G	OH	CONTACTOR
A-957G	OH	CONTACTOR
A-957G	OH	CONTACTOR
A-957G	OH	CONTACTOR
A98D580-1	OH	MANIFOLD
AA-1020-24-160-CS	OH	INVERTER
AA-6-07-1150	OH	HYDRALIC RELIEF VALV
AA-65321-R2A	OH	PUMP, AXIAL
AA7FA3440	NS	MANIFOLD
AA7-FA-3440	NE	MANIFOLD
AA95-488	SV	PANEL, AUDIO
AA95-489	NE	PANEL, AUDIO
AB44-12	SV	VALVE, PRESS RELIEF
AB44-12	SV	VALVE, PRESS RELIEF
AB44-12	SV	VALVE, PRESS RELIEF
AB44-12	SV	VALVE, PRESS RELIEF
ABMS-A-C	NE	MOUNT
ABSC5009627OB9R945	NE	LINERS
AC-089F-347	NE	FILTER ELEMENT
AC291	NE	SPARK PLUG
AC291	NE	SPARK PLUG
AC3258-109	OH	FILTER FLUID
ACSB17284	NE	FILTER PACK
AD-804D-0006	SV	NAV/COMP
AD-B258-10	OH	FILTER ASSY
AD-B258-10	AR	FILTER ASSY
AE3660003M0190	NE	HOSE ASSY
AE3908K0226-065	NE	HOSE
AE3908K0226	NE	HOSE
AE-4825-161	OH	FILTER ASSY
AE70-002	NS	FIRE EXTINGUISHER
AE80948N	OH	COUPLING HALF
AE82605R	OH	REFUEL VALVE
AE85893M	NS	VALVE
AE86844Z	OH	VALVE ASSY, FUEL
AE86844Z	OH	VALVE ASSY, FUEL
AE92125H	SV	COUPLING ASSY

AE98148N	NS	ADAPTER
AE98778N	OH	CONNECTOR HALF
AE98921G	OH	SWIVEL ASSY
AE98921G	NE	SWIVEL ASSY
AF33-657-7128	OH	GAS GENERATOR ASSY
AG34	OH	TACH GENERATOR
AHSE53896-301	OH	MOUNTING PLATE- HOIST
AHSE55835-001	OH	HOLDER ASSY DAVIT - HOIST
AHSE55987-001	OH	MOUNTING ARM FWD DAVIT
AHSE55987-002	OH	MOUNTING ARM AFT DAVIT
AHSE55989-001	OH	DAVIT STRUT
A-IA8X	NE	CAMM LOCK
AIS200-35	SV	SWITCH UNIT, REMOTE
AJ6-70	NE	LOCK STUD
AL1018-11-00	NS	COVER, SEAT BOTTOM
AL369G	SV	TEMP CONTROL
ALK111	NE	GREASE TIP
AM-711JE	OH	CONTACTOR
AMS-43	SV	PANEL, AUDIO CONTROL
AN100041	AR	COVER
AN174-17	SV	BOLT
AN174-23	SV	BOLT
AN175-16	SV	BOLT
AN175-17	SV	BOLT
AN175-H11	SV	BOLT
AN176H7A	SV	BOLT
AN23-29	SV	BOLT
AN25-20	SV	BOLT
AN25-24	SV	BOLT
AN310-9	SV	NUT
AN3217-1	OH	MICRO SWITCH
AN3350-2	OH	RELAY
AN3362-1	NE	RELAY
AN3381-2	OH	RELAY
AN3-H16A	SV	BOLT
AN4-21A	SV	BOLT
AN4-22A	SV	BOLT
AN505-4-7	NE	SCREW
AN509-416	FN	SCREW
AN5547-2	OH	TACH GENERATOR
AN5730-2A	OH	MAGNESYN IND
AN5771-4C	OH	HYD. PRESS GAUGE
AN5771T4B	OH	HYD. PRESSURE GAUGE
AN5816-2	OH	PITOT TUBE
AN6014-1	OH	CHECK VALVE
AN6293-4	OH	SELECTOR
AN735-56	OH	CLAMP

AN775-12D	NS	BOLT
AN818-5J	OH	NUT
AN833-16D	NS	ELBOW
AN935-4L	NE	WASHER
AN938D8	NE	TEE
AN960-2	NE	WASHER
AN960-3L	NE	WASHER
AN960-4L	NE	WASHER
A-NS/4	SV	CONTROL
APC23032-1380	NE	BRUSH
APT-40KBS-1000-200G	NE	XTMR, PRESS
APT-47KBS-1000-5000S	NE	XTMR, PRESS
APT-51DT-1000-100D	NE	XMTR, PRESS
APTE-138-150G	SV	TRANSDUCER, PRESS
APTE-138-150G	NS	TRANSDUCER, PRESS
APTE-138A-100G	SV	TRANSDUCER, PRESS
APTE-138A-150G	NE	OIL PRESSURE SWITCH
AR-1290	NE	VALVE KIT
AR133	SV	-
AR133-5	OH	HANDLE
AR-204A-55	OH	INDICATOR, FUEL FLOW
AR209-11	OH	FLOW RATE IND.
AR209-11	OH	FLOW RATE IND.
AR209-11	NE	FLOW RATE IND.
AR209-8	OH	IND. FUEL FLOW
AR34	SV	HANDLE
AS1B27098-59C	OH	PANEL ASSY
AS-2108A/ARN-89	SV	ANTENNA
AS-2108A/ARN-89	OH	ANTENNA
AS3223	AR	COVER
AS355F1	OH	END CAP FORMER
ASB-60	SV	HF
ASH671-1	OH	INVERTER
ASI-6409	SV	2 SEAT
AT-209-NL	OH	INDICATOR, TOTALIZER
ATC3401-1R	OH	TRANSPONDER
AU900SA	SV	BOLT
AV-14B1136	OH	VALVE
AV-14B1136	OH	VALVE
AV14C1162	OH	VALVE
AV16B1382	OH	VALVE ASSY
AV16B1568D	NE	VALVE, SHUTOFF
AV16B1591C	OH	SHUTOFF VALVE
AV16B1667D	OH	VALVE, GATE
AV16B1674B	OH	VALVE, SHUTOFF
AV16B1822D	OH	VALVE
AV16B1847D	AR	VALVE ASSY

AV16E1217C	OH	VALVE, INTERCONNECT
AV16E1217C	OH	VALVE, INTERCONNECT
AV1A3506	OH	SOLENOID
AV1B1474B	OH	VALVE
AV1B1501	OH	SOLENOID VALVE
AV200	NE	ANTENNA
AV24B1119B	OH	VALVE FUEL
AV24B1119B	OH	VALVE FUEL
AV24B1119B	OH	VALVE FUEL
AV24B1119B	OH	VALVE FUEL
AV24B1119B	OH	VALVE FUEL
AV24B1119B	OH	VALVE FUEL
AV24B1139B	OH	VALVE ASSY
AV24B1179B	OH	VALVE, GATE
AV24B1179B	OH	VALVE, GATE
AVR-869	OH	RELAY,PHASE SEQUENCE
AVR-869C	OH	RELAY
AVR-869E	OH	RELAY
AW-3-10-A	OH	GAGE, MANIFOLD
AZ375-3A	OH	STRUT
B07D634BC2-0051	NS	RELAY
B07D634BC2-0051	NS	RELAY
B07D634BC2-0051	NS	RELAY
B09D58	OH	FUEL NOZZLE ASSY.
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B-138BH	OH	CONTACTOR
B199ABM	OH	CALCULAEUR
B20C67	OH	HEATER ADAPTOR
B23D27	OH	SHROUD
B3152110007	OH	TACHOMETER
B3181	SV	PLUG
B3228	NS	CHIP DETECTOR
B4041142-1	SV	MOUNTING BASE
B4041380-1	OH	BATTERY BOX
B4041380-1	OH	BATTERY BOX
B40413821-1	OH	BATTERY BOX
B40-8812911	SV	RING
B40-881291-1	NE	RING
B40-88-1291-1	NS	CONE

B4443A	SV	CHIP DETECTOR
B4515210002	OH	ALTIMETER
B518ATC35	OH	BEARING
B538A-3	SV	DETECTOR, CHIP
B544DDFS464	NS	BEARING
B54C00	OH	CONTROL ASSY
B-61890-A	SV	SOLENOID
B691/732	OH	STATION BOX
B7584-2	NE	BAFFLE
B-7633-10	NE	LENS
B-7669B	SV	CHIP DETECTOR
B-7669B	SV	CHIP DETECTOR
B90C13	AR	CABIN HEATER ASSY
B9T8B	NE	RESTRICTOR
BAS-76-150G	NE	PRESSURE TRANSDUCER
BB025A-1	OH	MOTOR
BB2060	NE	ROTARY CUTTER
BB-755-212	OH	NOSE FAIRING ASSY
BELL 206L-3	OH	LONGRANGER
BELL 412	OH	AIRFRAME
BH185R154B	OH	INDICATOR, T5
BH185R154B	OH	INDICATOR, T5
BH185R154B	OH	INDICATOR, T5
BK117-21221-02	NE	R/H ROOF WDW CLEAR
BL-1206	OH	COUPLING
BL1315-11	OH	HOIST ASSY
BL1315-11	OH	HOIST ASSY
BL-13800-2	NE	TRACTION SHEAVES
BL1525	NE	DRUM ASSY
BL4000-5	SV	WINCH ASSY
BO5D97	OH	LIMIT SWITCH
BRACKET	NE	76070-20005-108
BS18ATC35	NS	BEARING
BT06EC16-26S	NE	CONNECTOR
BTI600-3A-1	OH	BATTERY TEMP INDICATOR
BV0953B	OH	PUMP, HAND
C060-052-090-50	SV	FIBER SCOPE
C1160-3	AR	LINER PITCH CONTROL
C325980	SV	TEST SENSOR LOOP
C325980	SV	TEST SENSOR LOOP
C-63535-4	SV	CABLE JOINT ASSY.
C65C30	OH	CONTROL ASSY, HEATER
C73730	SV	VHF-COMP
C81386-1	NS	CONTROL ASSY
C81475-1	OH	CONTROL ASSY
C81591-1	OH	CONTROL ASSY
C81592-1	OH	CONTROL ASSY

C-823A/AIC-10	SV	CONTROL, AUDIO
CA11835-2	OH	SOLENOID
CA-1896	NE	CAPACITOR
CA-39761	OH	CONTACTOR
CC12038	SV	NAVY/CONTROL/HEAD
CCW	NE	WRENCH SET
CD4123	NS	IGNIGHTER
CD4128	OH	IGNITORS
CE-5100	SV	HF/CONTROL
CE-510-D	OH	INTERCOM/CONTROL
CE7060-14	SV	AUDIO/BOX
CE806D-3M	OH	CONTROL, ICS
CE806-OI3M	SV	CONTROL
CG471-9	NE	STEP PLATE
CH34168	NE	IGNITER
CH34269	NS	IGNITOR
CHRISTMAS	-	2017 WEEK 51 AND 52
CHRISTMAS - 2010	-	WEEK 51 AND 52
CHRISTMAS - 2011	-	WEEK 51 AND 52
CHRISTMAS - 2013	-	WEEK 51 AND 52
CHRISTMAS - 2014	-	WEEK 51 AND 52
CHRISTMAS - 2015	-	WEEK 51 AND 52
CHRISTMAS - 2016	-	WEEK 51 AND 52
CHRISTMAS - 2017 WEEK 51 AND 52	-	-
CHRISTMAS -2009	-	WEEK 51 AND 52
CJ8E12-54	NE	BUSHING
CJ8E12-6	NE	BUSHING
CL260	SV	LOCK ASSY
CL50PL	OH	CLAMP
CM20.9021.MMS	AR	PORTABLE PARTICLE COUNTER
CMDC-SW-DP	SV	POWER UNIT
CMS400-1-B5	OH	AUDIO CHECKLIST CONTROL
CR2795B105A1	OH	VOLT. REGULATOR
CR2795E100A1	OH	VOLTAGE REGULATOR
CR2795E100A1	OH	VOLTAGE REGULATOR
CR2795E100A1	OH	VOLTAGE REGULATOR
CREDIT	NE	CREDIT MEMO
CREDIT	-	CREDIT MEMO
CREDIT	OH	CREDIT MEMO
CREDIT	-	CREDIT MEMO
CREDIT	-	CREDIT MEMO
CS259	OH	SPRING
CSV1829-7	OH	VOLTAGE REGULATOR
CT7-7A	SV	ENGINE
CV09609087	OH	SYNCRONIZE
CYLZ7655-1	OH	CONTROL BOX
DOC2006	SV	NAV/GS CROSSOVER



D10055-060608	NE	TEE
D201199	OH	MOTOR CONTVERTER
D2053	NE	CLAMP
D24652-102	NE	FLOAT COVER
D-300-08	NE	CAP
D3150-9	OH	LIGHT LIGHTING
D3150-9	OH	LIGHT LIGHTING
D3150-9	OH	LIGHT LIGHTING
D3150-9	OH	LIGHT LIGHTING
D3152710008	OH	TACHOMETER
D3801-2	OH	SEAT, CREW, ARMORED CRASHWORTHY
D3801-2	OH	SEAT, CREW, ARMORED CRASHWORTHY
D51508	OH	CVFDR, VOICE/DATA RECORDER
D51521-010-112	OH	RECORDER
D51543-011	SV	SOLID STAT CVFDR PANEL
D-56B	OH	CONTRACTOR RELAY
D60268MK11122	OH	AIR DATA COMPUTER
D60350MK221200	OH	AIR DATA SENSOR
D66-108-00	SV	NAV/RECEIVER
D-7T	SV	RELAY
D-7T	SV	RELAY
DB12-3	NE	BOLT, BAYONET
DB470-1	NE	LOCKPIN
DC109	NE	FITTING ASSY
DD11-A	NS	CIRCUIT BOARD
DF-2001-5-1A	NS	COUPLING
DH-7B	SV	CONTACTOR
DH-7B	OH	CONTACTOR
DH-7B	SV	CONTACTOR
DH-7B	SV	CONTACTOR
DH-7B	SV	CONTACTOR
DH-7B	SV	CONTACTOR
DH-7B	SV	CONTACTOR
DH-7B	SV	CONTACTOR
DH-7BC	OH	RELAY
DH7N	SV	CONTACTOR
DHR7BG	NE	RELAY
DL1028M21	OH	ACTUATOR, LINEAR
DLA500-87M-HC66	SV	NUT
DLA500-88-M-R751	NS	SLEEVE
DL-A90078	OH	RELAY
DMN41-1	OH	G/S ANTENNA
DMYNO-83324-097	NE	STUD
DMYNO-70628-023	NE	DUCT
DMYNO-83324-097	NE	STUD
DPP6	NS	BEARING
DR1724M17-1	OH	ROTARY ACTUATOR
DR1724M17-2	SV	ROTARY ACTUATOR

DS-935616	NE	RETAINER, COUPLING
DS-935616	NE	RETAINER, COUPLING
DS-935616	NE	RETAINER, COUPLING
DS-935979	NE	CAM
DS-935979	FN	CAM
DS-935980	NE	COUPLING, DRIVE
DS-935980	NE	COUPLING, DRIVE
DS-935980	NE	COUPLING, DRIVE
DSA770075MU246	NE	CAP, FILLER
DSP4	NS	BEARING
DSP5	NS	BEARING
DST29-2	OH	INDICATOR TEMP
DV-8-40	NS	THERMOSTAL ASSY
DW4 FS160	NS	BEARING
DW4FS160	NS	BEARING
DW5	NS	BEARING
DYLM529-4	SV	DISC ACTUATOR
E-28	OH	PUMP, AIR
E-28	OH	PUMP, AIR
E32-0-3	NE	RACCORD
E855M7-5	NS	HANDLE, FIRE PULL
EA1261-1	OH	UP LOCK
EA470-3587	OH	TANK UNIT
EAB700-47	OH	CLAMP
EC14190-1	OH	CABLE ASSY
EC-8	NE	CAP PLUGS
EP9W6414930	NS	PUMP, FUEL
ES49026-8	NE	TEE
ES53	SV	SIGHT PLUG
ES73171-4	NE	MOTOR, BLOWER
EV12	OH	LIFEJACKET
EXPANDABLE 2 1/2"	NE	EXPANDABLE 2 1/2"
EXPANDABLE 3 1/2"	NE	EXPANDABLE 3 1/2"
F07C05	OH	RING CLAMPS
F103STV	OH	FILLER PLUG/OIL
F1-5	NE	SPACER
F501STV	SV	FILLER
F502SC	OH	FILLER
F503ST-I	OH	FILLER, OIL TANK
F506A	OH	FILLER CAP
F-80	NS	NOZZLE, FUEL
F8300-114	OH	FLOAT SWITCH
F8300-134	NS	SWITCH
F913200-22	OH	CONTROL
F913200-23	OH	VALVE
FB6A	NS	FEED THRU
FC3731	SV	CAP ASSY

FC3731	NE	CAP ASSY
FCC54913	SV	ADAPTER
FCD41993	OH	BRACKET
FD102CV-TS	OH	DISPLAY,COCKPIT MISS
FDC3120M2	NS	BUCKLE
FDC3120M2	NS	BUCKLE
FDC3140-M3	NS	FITTING
FLYWEIGHT	NE	206B CARPET KIT
FM10-276	OH	ANTENNA UNIT,VHF/FM
FM10323D	OH	FAIRING ANTENNA
FM20-265D	OH	FM ANTENA COUPLER
FMB10-272	OH	ANTENNA, MARER BEACON
FMH12-524	OH	ANTENNA VHF/FM
FREIGHT	NS	-
FREIGHT	NS	-
FREIGHT	AR	-
FT1141	OH	TRANSFORMER
FWB22810	SV	BOLTS
G02C12	SV	IGNITER
G-2038	OH	CONTROL
G-2600	NS	COMM PANEL
G-2752A	OH	CONTROL PANEL
G28-100-0015A	OH	DIMMER ASSY
G-4217-003	OH	GAGE, PRESS.
G-4433A	OH	CONTROL HEAD
G-4434A	OH	COM CONTROL, ADF
G-4518	OH	NAV / DME CONTROL
G-4670	OH	PANEL, SWITCHING
G4710A-11	OH	LANDING LIGHT
G4710A-11	OH	LANDING LIGHT
G4710A-11	OH	LANDING LIGHT
G4710A-11	OH	LANDING LIGHT
G-5294	OH	TRANSPONDER
G-5400-5	OH	LANDING LIGHT
G-5400-6	OH	LANDING LIGHT
G6250-4	OH	SEARCH LIGHT
G6250-4	OH	SEARCH LIGHT
G6250-4	OH	SEARCH LIGHT
G6250-5	OH	LANDING LIGHT
G6570-B-58	NE	SEAT BELT
G719782	OH	MOTOR ASSY
G722061	OH	BLOWER
G727A	NS	FLIP CHIP
G8385-1	OH	SEARCHLIGHT
G8385-1	OH	SEARCHLIGHT
G8385-1	OH	SEARCHLIGHT
G8400A-21-24	OH	LIGHT ASSY

G8400A-8-24S	OH	LIGHT ASSY
GA3870	OH	BUSHING,BEARING
GB-1212	NS	ROLLER BEARING
GC-1010-24-3B	NE	GENERATOR CONTROL
GC233019AA	OH	PARTS KIT, AIRCRAFT
GC-66	NS	TRANSFORMER
GC-66	OH	TRANSFORMER
GE4596	NE	LAMP
GE635E316G1	OH	GEAR ASSY
GE635E316P1	OH	GEAR ASSY
GEU7/A	OH	TACH GENERATOR
GG2472AJ01	OH	RATE GYRO
GG2479AA03	OH	RATE GYRO
GG2479AB03	OH	GYRO, RATE
GX1250S	NE	RADIO
GYLC50507	OH	VALVE, ACTULATOR
GYLC831	NS	GEAR ASSY
H10-36	NE	HEAD SET
H11-375	NS	CONTROL SWITCH
H1PS1EWB22-10H34	SV	BOLT
H2563-35	NE	LATCH ASSY
H2639-1	OH	LATCH
H2639-1	OH	LATCH
H2719-1	SV	LATCH
H2719-1	SV	LATCH
H2729-3	SV	LATCH
H321AFM1	OH	INDICATOR HORIZON
H38K1652	NE	LATCH ASSY.
H-47	OH	LOAD CELL
H-5000-2	NS	LATCH
H5010-125-188	NE	LATCH
H5100-2	NS	LATCH
H5960031	OH	HYD VALVE
H59G0031	OH	VALVE
H60-050	OH	TACH. GENERATOR
H605S-063-A123	NS	LATCH
H61G0020M1	OH	MOTOR
HELICOPTER PARTS	AR	PARTS
HMN1056D	NS	MICROPHONE
HP298100-6	OH	SHUTTLE VALVE
HP610100-2C10-1	OH	MANIFOLD, HYDRAULIC
HP610100-2C10-1	OH	MANIFOLD, HYDRAULIC
HP610100-3N10	AR	MANIFOLD, HYD
HP610100-3N10	AR	MANIFOLD, HYD
HP796100	OH	SPEED BRAKE SELECTOR
HP848420-600	OH	VALVE ASSY
HP848420-600	OH	VALVE ASSY

HR30-3	OH	REEL
HS96690	OH	MODULE
HSAS01851-007	OH	TUBE ASSY - HOIST
HSAS01851-011	OH	TUBE ASSY - HOIST
HSAS01851-013	OH	TUBE ASSY - HOIST
HSAS01851-803	OH	TUBE ASSY - HOIST
HSAS01851-805	OH	TUBE ASSY - HOIST
HSAS02340-101	OH	BRACKET
HSR83P	NS	SPARK PLUG
IBIS-12606-1	OH	HARNESS
IBIS-12607-1	OH	HARNESS
ID-1003/ARC	NS	RATIO METER
ID-257A-APN-22	OH	ALTIMETER
ID-5044/APN503(V)	OH	IND. GRD SPEED
ID-5051/AYN	SV	ATTITUDE IND.
ILC82259	SV	CONTROLLER
INVENTORY	AR	PARTS, HELICOPTER
INVENTORY	SV	PARTS, HELICOPTER
IPT-24RT1-1000-190G	NE	XMTR, PRESS
ITBI-1	OH	SWITCH
J-5294-20	NE	MOUNT, SWCH BONDED
JANTX1N1206A	NE	DIODE
JBS2015-2	NE	EVAP. ASSY
J-D4A-008	NS	RELAY
JG206D2	OH	ALTIMETER, RADAR
JG206D4	OH	RADAR ALTITUDE IND
JG206D4	OH	RADAR ALTITUDE IND
JG206D4	OH	RADAR ALTITUDE IND
JV-26	NE	ACTUATOR
K15371	OH	BOTTLE, NITROGEN
K1610B	OH	CHECK VALVE
K26571-9	NE	PANEL
K33N2	OH	MOTOR
K374042-11	NS	COVER
K604041-7	NS	SCREEN ASSY
K616274-11	NS	SUPPORT VALVE FLAP
K616703-15	NS	CAP LAG SIDE TAIL
K618272-11	NS	CLAMP
K633079-9	NS	BRACKET & ROLLER
K660043-11	NS	BUSHING
K671319-11	NS	LINER
K671423-11	NS	PUMP H-2 IGB
K671425-11	OH	TUBE ASSY
K671443-11	NS	LINER
K671447-11	NS	LINER
K671634-21	NS	BUSHING
K674049-11	NS	BUSHING

K674071-1	NS	NOZZLE ASSY
K674253-11	NS	FITTING
K674364-13 OSB	NS	LINER, OVERSIZE
K674727-1	NS	HSG SEAL
K674898-13	NS	RETAINER PLATE
K682714-25	NS	STRIKER
K682771-1	NS	FITTING ASSY
K684418-3	NS	SUPPORT ASSY
KFC30403	NE	KFC30403
KM30006840CA	NE	T/R SERVO MOD. KIT
KP10A-FS464	OH	BEARING
KP12A-H	NE	BEARING
KP16A	NS	BEARING
KP16A-H	NS	BEARING
KP3A	NS	BEARING
KP4AFS464	NS	BEARING
KP4FS464	NS	BEARING
KP5A	NS	BEARING
KP5A	NS	BEARING
KP6A	NS	BEARING
KP8A	NS	BARRINGS
KR10MEAR	NE	ROD END
KSP4FS464	NS	BEARING
KSP5	NS	BEARING
KSP6A-FS464	NS	BEARING
KWB5D1	NE	BEARING
KWPB57	SV	BEARING
L108BDM	OH	ARTIFICIAL FEEL UNIT
L109BBM	OH	ACTUATOR
L109BBM	OH	ACTUATOR
L109BDM	OH	ARTIFICIAL FEEL UNIT
L109CDM	OH	ACTUATOR
L109CDM	OH	ACTUATOR
L109DAM	OH	TRIM ACTUATOR
L109DAM	OH	TRIM ACTUATOR
L109DAM	OH	TRIM ACTUATOR
L109DAM	OH	TRIM ACTUATOR
L109DAM	OH	TRIM ACTUATOR
L305610XX	OH	BEARING
L44-AA-5	NS	MOUNT
L507949	NS	BEARING
L5202050-007	NE	LEVER ASSY
L5203019-017	NS	SHAFT ASSY
L5222015-005	NE	L5222015-005
L5305333-161	NS	BRACKET ASSY
L8528061	OH	COOLER, OIL
L92D25-202	OH	VALVE/ELECTRO

L92D25-202	OH	VALVE/ELECTRO
LE-049D-9MW	NE	KIT, DOOR LOCK
LJ497	NE	SPACER
LLC12047	OH	GAS PRODUCER METER
LLSSVV-4	SV	BRG
LM307-27	AR	SHEILD
LM-307A7	SV	MOUNTING/BASE
LM-307-SA6	OH	MOUNT, INBOARD
LM-307-SA6	OH	MOUNT, INBOARD
LM-307-SA7	OH	MOUNT, OUTBOARD
LM-307-SA7	OH	MOUNT, OUTBOARD
LM-307-SA7	OH	MOUNT, OUTBOARD
LM-307-SA7	OH	MOUNT, OUTBOARD
LM-307-SA7	OH	MOUNT, OUTBOARD
LM-307-SA7	OH	MOUNT, OUTBOARD
LP353-2	NE	PIN
LQ32	OH	SEDAMENT BOWL
LR327-2	NE	LOCKBAR
L-RB14-56-4G	SV	SWIVEL FITTING
L-RB56-57-4G	OH	SWIVEL FITTING
L-RB56-57-4G	NE	SWIVEL FITTING
LT-100	NE	LIGHT, DIMMER
LT-103	OH	LIGHT DIMMER SUPPLY
LT-103	OH	LIGHT DIMMER SUPPLY
M1045J762ESC3	OH	AUDIO SELECT PANEL
M1045J762ESC3	OH	AUDIO SELECT PANEL
M1050-B426-01	OH	PA AMPLIFIER
M1052	OH	INTERPHONE AMPLIFIER
M1052	OH	INTERPHONE AMPLIFIER
M1391	OH	PANEL, MONITOR
M1391	OH	PANEL, MONITOR
M203	NE	OIL GAUGE
M25988/1-010	NE	PACKING
M27426-1220D	OH	RETAINER
M27426-1225D	OH	RETAINER
M27426-3150C	OH	RETAINER
M27426-3175C	OH	RETAINER
M27426-3183D	OH	RETAINER
M27426-3213B	OH	RETAINER
M27426-3213D	OH	RETAINER
M27426-3229D	OH	RETAINER
M369H-500-2	NE	WINDOW, R/H FWD
M38449-4	OH	AMPLIFIER, AERIAL REFUELING
M39029/4-12-12	NE	PIN
M-400-00000	OH	BOOST BATTERY
M4000B	OH	PASSENGER BREIFING SYSTEM
M524568-D1	SV	RELAY

M528126-2	OH	CONVERTER
M591-405-AID	SV	MOUNTING/TRAY
M7950-15	OH	PAGING AMPLIFIER
M83726/29-3002P	NE	RELAY
MASS/S-61N/L	NE	BATTERY MASS
MASS/S-61N/L	NE	BATTERY MASS
MBG62537	OH	BRACKET
MD500	SV	STRETCHER
ME-0708	OH	MOBILE ENCODERS
MF40-3918-S242-4	OH	HYD MOTOR
MF60-3913-S215-2	OH	HYDRAULIC MOTOR
MGE93-200	OH	INVERTER
MGH159-200A	OH	MOTOR/GEN
MGH159-200A	OH	MOTOR/GEN
MGH159-200A	OH	MOTOR/GEN
MGH229-100	OH	MOTOR-GENERATOR
MI-585135-2	SV	RCVR XMTR
MI-585301-2	OH	DIGITAL INDICATOR, RADAR
MI585397-2	OH	DATA NAV COMP. INTERFACE
MIL-S-7832A	SV	SEAT, PILOT
MKSP3L	NS	BEARING
MKSP4-400	NE	BEARING
MOBIL254	NE	OIL, TURBINE ENGINE
MODEL 34B	SV	VIBREX, TRACK & BALA
MP73	NE	PLUG
MS1007W0606	OH	VALVE
MS124698	OH	INSERT
MS14102-8	NS	BEARING
MS16624-1018	OH	RING
MS18029-14L-16	OH	COVER, TERMINAL BOARD
MS20219-002	NE	PULLEY
MS20220-2	NS	PULLEY, GROOVE
MS20220-2	NS	PULLEY, GROOVE
MS20253P2-387	OH	PIN
MS20392-1C29	NE	PIN
MS20392-1C29	OH	PIN
MS20392-2C43	SV	PIN
MS20392-3C35	OH	PIN
MS21045L4	SV	NUT
MS21045L8	NS	NUT
MS21091-3006	NE	SCREW
MS21151-008	NE	ROD END
MS21151-8C	NS	BEARING
MS21241-14CO18	SV	BUSHING
MS21250-12	NS	BOLT
MS21919WCF6	NE	CLAMP
MS21919WCF9	NE	CLAMP



MS21953-1	OH	INVERTER
MS24140-D1	SV	RELAY
MS24166-D1	NS	RELAY
MS24166-D1	NS	RELAY
MS24171-D1	—	RELAY
MS24181-D1	OH	RELAY
MS24193-D1	NS	RELAY
MS24266R14B4S6	NE	CONNECTOR
MS24331-1	NS	CONTROL SWITCH
MS24331-1	NS	CONTROL SWITCH
MS24391D4L	SV	PLUG
MS24397D1	OH	REDUCER
MS24523-33	NE	SWITCH
MS24568-D1	NE	RELAY
MS24585-1283	NE	SPRING
MS24638-22G	SV	SWITCH
MS24658-24E	NS	SWITCH TOGGLE
MS24659-21E	NE	SWITCH
MS24660-3N	NE	MO-GEN
MS24665-376	OH	COTTER PIN
MS24678-11	NE	SCREW
MS24693BB4	OH	SCREW
MS25002-1	NS	SWITCH
MS25027-1	SV	LIGHT ASSY
MS25038-1	OH	TACH/GENERATOR
MS25038-4	OH	TACH GENERATOR
MS25038-4	OH	TACH GENERATOR
MS25038-4	OH	TACH GENERATOR
MS25041-005	NE	POSITION LIGHT
MS25041-008	NE	POSITION LIGHT
MS25089-1F	NE	SWITCH
MS25281-R4	OH	CLAMP
MS25358-2	NS	LIGHT ASSY
MS25358-7	SV	DOME LIGHT ASSY
MS25358-7	OH	DOME LIGHT ASSY
MS25383-001	SV	SWITCH
MS25383-1	NE	SWITCH
MS25395-A2	SV	RELAY CH
MS27409-2M	NE	SWITCH
MS27473T10B99P	NS	CONNECTOR
MS2761-3	—	BEARING
MS27640-006	NE	BEARING
MS27641-016	NE	BEARIN
MS27641-4	NS	BEARING
MS27975-2	NS	CLEVIS
MS28005-8	OH	XMTR, PRESSURE HYD
MS28010-1	OH	INDICATOR, PRESS



N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N00383-86-C-5212-3-87	NS	NUT, SPECIAL
N004-3000	OH	CP3 SATCOM
N004-5000-AWT	OH	SATCOM SYSTEM
N156-39615	OH	ROTOR
N-29003	OH	VALVE
N4309S5-350	SV	CLAMP ASSY
N48-1-2	OH	ANTENNA
N48-1-2	OH	ANTENNA
N5000-75	NE	SNAP RING
NAS100310	OH	BOLT
NAS1193K5C	NE	LOCKING DEVICE
NAS1305-300	SV	BOLT
NAS1306-27DH	NE	BOLT
NAS1306-31D	SV	BOLT
NAS1306-34D	SV	BOLT
NAS1351C4H12	NE	CAP
NAS1351C4H14	OH	SCREW
NAS1354DS7S25F	SV	CONTROL TUBE
NAS221-10	OH	SCREW
NAS303R251055	OH	CABLE ASSY
NAS3106-14-13	OH	BOLT
NAS315-13-101	NE	CABLE ASSY
NAS316-13-1010	NE	CABLE ASSY
NAS325-12-480	NE	CABLE ASSY
NAS356-64-2380	NS	TUBE ASSY CONTR
NAS35760-1096	NS	ROD ASSY
NAS364-2FF707	NS	TUBE ASSY
NAS365-4F-1240	NE	TUBE ASSY
NAS428K311	OH	BOLT
NAS42HT8-14	OH	SPACER
NAS42HTS14	OH	SPACER
NAS43HT628	OH	SPACER
NAS43HTS44	OH	SPACER
NAS45HTS10	OH	SPACER
NAS464-10-32	SV	BOLT
NAS464-10-41	OH	BOLT
NAS464-12	SV	BOLT
NAS464P10-60	OH	LANDING GEAR BOLT
NAS464P4A4	OH	Bolt,Shear
NAS467632	OH	BOLT

NAS520-16-7	SV	COUPLING
NAS537-10P053	NE	BUSHING
NAS537-4P025	NE	BUSHING
NAS557-8A	NE	GROMMET
NAS558-606-3	NE	KEY
NAS558-808-3	NE	KEY
NAS561C411	OH	PIN
NAS564-61	NS	BOLT
NAS620-4L	NE	WASHER
NAS6216-32D	NS	SUPERIOR AIR CRANK
NAS6216-32D	NS	SUPERIOR AIR CRANK
NAS6216-32D	NS	SUPERIOR AIR CRANK
NAS6216-32D	NS	SUPERIOR AIR CRANK
NAS62822	OH	BOLT
NAS632-57	NS	BOLT
NAS680C3	NE	NUT PLATE
NAS816-72	OH	CAP
NDN10761-01	SV	ASE COMPUTER
NDN10762-01	OH	FPC COMPUTER
NDN10912-01	AR	FPC COMPUTER
NDN9856-01	OH	HOVER TRIM CONTROLLER
NH1002183-10	SV	CLAMP
NJ172301	OH	TUBE ASSY FIRE EXT
NP104401-1	NS	WINDSHIELD, LH MAIN
NP104401-1	NE	WINDSHIELD, LH MAIN
NP104401-2	NE	WINDSHIELD, RH MAIN
NPN779	NE	KIT, LANDING GEAR
NPN-797	NE	KIT
NPN-806	NE	KIT, REPAIR
NPN833	NE	KIT
NSN53930-00-981-4698	OH	PRESSURE SWITCH
NYLC583	NE	PLATE
O66-3018-00	SV	DME-IND
O66-3032-11	SV	INDICATOR
O7639-AGH958-1	OH	AC GEN
O98051-O100	SV	TRANSPONDER
OHS76-D11-041	SV	CONTROL
OMPC2275-5	OH	MASTER CYL, R/B
P0030M032C	SV	CAP PLUG
P10A-29362-2	SV	BATTERY
P1421230-2	OH	SWITCH
P172-395	OH	VALVE, FUEL SHUTOFF
P21CC-101	OH	PRESS TRANSDUCER
P21CC-101	OH	PRESS TRANSDUCER
P29-705	OH	VALVE
P-309-N-12	NS	VALVE
P3-500	OH	VALVE, RELIEF

P63A00N	OH	BAT CABLE
P9574	NE	END BELL
PBE-A-2	OH	HOT ROD ICE DETECTOR
PC-125	OH	STATIC INVERTER
PC-17-3	OH	INVERTER
PC-50	OH	INVERTER
PC6410	OH	TORQUE TRANSMITTER
PC820-132	OH	SIGNAL CONDITIONING UNIT
PD40	NE	CAP PLUG
PD532	NE	NUT
PDG0190	NE	MANIFOLD
PF36390930ZE2	OH	HYDRAULIC PUMP
PH500	NS	PITOT TUBE
PH500	OH	PITOT TUBE
PI3001TSO-C91	NS	ELT/ANTENNA
PK1069	OH	MOUNT
PP005-2A	SV	DECTOR
PROPAQ106EL	OH	MONITOR
PROPAQ202EL	OH	MONITOR
PROPAQ202EL	-	MONITOR
PROPAQ202EL	SV	MONITOR
PS-1930	OH	POWER SUPPLY
PS51E	NE	WINDOW-OIL LEVEL
PSS 50902-3-4-4	NS	TOOL, PITOT STATIC TEST
PU543A	OH	INVERTER
PV3-044-8	OH	PUMP, HYDRAULIC
PV3-044-8	AR	PUMP, HYDRAULIC
PV3-044-8A	OH	PUMP, HYDRAULIC
PV3-300-1G	OH	PUMP
PV3-300-1G	OH	PUMP
PWA9890-9	SV	TOOL
PYLB51573	OH	VALVE, SHUTOFF
PYLB51573	AR	VALVE, SHUTOFF
PYLB52191	OH	VALVE, SHUTOFF
R121	NE	CONNECTOR
R16RS	NS	BEARING
R3011-1	NS	LINER
R3393-4	OH	HOUSING ASSY
R3466-1	OH	FAN AND TURBINE ASSY
R3466-5	AR	FAN AND TURBINE ASSY
R3466-5	OH	FAN AND TURBINE ASSY
R3466-5	OH	FAN AND TURBINE ASSY
R3466-5	SV	FAN AND TURBINE ASSY
R3466-5	BER	FAN AND TURBINE ASSY
R3466-5	BER	FAN AND TURBINE ASSY
R3466-5	OH	FAN AND TURBINE ASSY
R3466-5	OH	FAN AND TURBINE ASSY

R3467-1	NS	SHAFT
R3467-1	OH	SHAFT
R3648-1	SV	RETAINER
R-430M12	OH	ROTARY ACTUATOR
R543PO711	SV	BOLT
R6110-24004-001	NE	RETAINER BEARING
R6110-24064-002	NE	SPACER
R6110-24070-000	NS	BRACKET ASS
R6110-24070-001	NE	BRACKET
R6110-24085-001	NE	BUSHING
R6110-26032-001	NS	BOOT
R6110-26406-002	NE	LUG
R6110-33406-101	NE	SPINDLE ROT RUDDER
R6120-60901-005	NS	CABLE ASSY
R6125-50587-001	NE	CYLINDER ASSY
R6125-50602-001	NE	PIN
R6130-62010-007	NS	CLAMP
R6130-62014-001	NE	SHAFT ASSY
R6130-62014-002	NE	SHAFT ASSY
R6130-80087-000	NE	BUMPER
R6135-64210-101	NE	COUPLING, FLEX
R6135-64210-101	NE	COUPLING, FLEX
R6137-66709-001	NE	TAIL ROTOR PITCH KEY
R6140-61419-002	NS	COLLET
R6140-62701-001	NE	CABLE ASSY
R6165-63157-4	OH	WASHER
R706E-8-48	SV	DIODE ADAPTER
R844A/ARN-58	OH	RECEIVER, RADIO
R9004-IYD	NE	YELLOW FILTER
R9W1645-826/00736	NE	FILTER
RB107581	NE	PLUG
RB10953	SV	REPAIR KIT
RB122548	NE	IMPELLER
RB12254-8	OH	IMPELLER,PUMP,FUEL
RB12475	NE	CAP
RB124845	NE	SHIM
RB124846	NE	SHIM
RB36342	NE	SPRING
RC-30-V	OH	VERTICAL SPEED IND
RC-30-V	OH	VERTICAL SPEED IND
RC-30-VIL	OH	RATE OF CLIMB
RC-30-VIL	OH	RATE OF CLIMB
RC-60-MS-AAU-9/A	OH	IND. VERTICAL SPEED
RCA2	OH	TURN AND SLIP IND
RCA2	OH	TURN AND SLIP IND
RCA90-1	OH	GYRO, RATE SWITCHING
RD12475	OH	CAP

RD17352	NS	IMPELLER
RD18455	NE	PUMP
RD21872-1	NE	ENDBELL
RD-56151	OH	DC MOTOR
RE-12GA/ARA-25	OH	INTER CONNECT
RE4H8	NS	BEARING
RENT	AR	RENTAL CHARGES
REP4H8-2	NS	BRG BALL ROD END
REP4H8-FS464	NE	BEARING
REP4M6-8F	NE	BEARING
REP4M6A1172	NS	ROD END
REP4M6A1172	NS	ROD END
REP4M6FS464	NS	BEARING
REPLACE DATA PLATE	OH	-
RF9908-13	NS	ROSAN FLUID FITTING
RG11260-A3	OH	PUMP, BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG11920-2	OH	PUMP, FUEL BOOST
RG12470	OH	PUMP, FUEL BOOST
RG17020-A1	OH	PUMP/MOTOR ASSY
RG24726	NE	HOUSING,BEARING ASSE
RH21-13	OH	COOLER, OIL
RH-50-21	OH	RESISTOR
RI0-EI-X2-V700	NS	RELAYS
RJ1710SA-9	NE	INSERT
RJ1713SA-10	NS	INSERT
RL00-18/24	OH	FAN ASSY
RL24SB-7E0238	NE	RING/LOCK
RL350	NS	RELAY
RL350	NS	RELAY





S1610-23018	OH	LOCK NUT
S1610-23018	OH	LOCK NUT
S1610-23018	OH	LOCK NUT
S1610-26000-005	OH	DAMPER, M/R
S1610-26022-002	OH	SHOCK ABSOR
S1610-33109-000	SV	NUT, OUTER
S1610-34003-001	NS	LINK
S16120-74190-009	OH	BRACKET
S1612-64117-000	OH	ELEVATOR
S16140-61115-000	OH	BELLCRANK SUPPORT
S1615-20014-000	OH	CAP
S1615-20014-000	OH	CAP
S1615-20218-001	OH	BUSHING
S1620-05219-001	OH	RETAINER
S1620-63244-000	OH	FITTING ASSY
S1620-63244-000	OH	FITTING ASSY
S1620-63244-001	OH	BRACKET ASSY
S1620-64117-001	OH	HORIZONTAL STABILIZER
S1620-64123-005	OH	BRACKET
S1620-65205-000	NS	SPRING
S1625-50105	NS	FITTING ASSY
S1625-52126-002	OH	CORE
S1625-61011-000	OH	VALVE PARK BRAKE
S1625-61011-000	OH	VALVE PARK BRAKE
S1630-61631-063	OH	CABLE ASSY
S1630-62120-003	OH	FUEL CELL
S1630-62139-000	OH	CONNECTOR
S1635-20055-C	NS	SPACER
S1635-63350-004	OH	FLANGE
S1635-64041	NS	SIGHT GLASS
S1635-91008-001	NE	COVER ASSY
S1635-91008-001	OH	COVER ASSY
S1635-91073-000	NS	RING CLAMP
S1635-91086-1	OH	CONE
S1640-61131-001	OH	TUBE ASSY
S1640-61137-002	OH	BELLCRANK
S1640-61462-000	OH	SUPPORT
S1640-61464-000	OH	LEVER
S1640-62115-004	OH	SHAFT ASSY
S1640-63521-001	NS	CYLINDER ASSY
S1640-63521-001	NS	CYLINDER ASSY
S1640-63521-001	OH	CYLINDER ASSY
S1650-61712-011	OH	HOIST ASSY
S16-6D	OH	FITTING
S1670-10201-001	OH	BLOCK
S1670-10201-001	OH	BLOCK
S1822502-02	SV	ELT

S1KDD	NS	BEARING
S20	OH	PLUG, SIGHT
S21	OH	PLUG, SIGHT
S-24-AR-C	OH	ASH TRAY
S4000-3	OH	PASSENGER BREIFING SYSTEM
S51	NE	SIGHT PLUG
S-53	NS	SIGHT PLUG
S-55T	SV	SIKORSKY HELICOPTER
S61 AUX SERVO	NE	CONTAINER
S6103-63040-002	OH	FUEL CHAMBER SUBASSY
S6105-20054-001	NE	FRAME REPAIR
S6107-21115-043	OH	DEFLECTOR ASSY
S6107-21115-043	OH	DEFLECTOR ASSY
S6107-21193-041	OH	SPONSON ASSY, LH
S6107-21193-042	OH	SPONSON ASSY, RH
S6109-20058-000	OH	FITTING ASSY
S6109-20058-007	OH	FITTING ASSY
S6109-45028-001	OH	SUPPORT ASSY
S6109-50039-307	OH	LIGHT ASSY
S6109-50106-016	OH	SEAT, INSTALL, JUMP
S6109-90000-001	OH	FLIGHT DIRECTOR
S6110-21037-001	AR	ROD ASSY
S6110-21059-000	OH	CONE ASSY, SPLIT
S6110-21073-000	OH	PLATE, PRESSURE
S6110-21082-000	OH	NUT, SHAFT
S6110-21082-000	OH	NUT, SHAFT
S6110-21219-101	AR	ADAPTOR
S6110-21377-017	OH	FAIRING
S6110-21377-041	OH	FAIRING ASSY
S6110-21377-041	OH	FAIRING ASSY
S6110-21377-042	OH	COVER ASSY
S6110-23000-005	OH	MAIN ROTOR HEAD
S6110-23129-001	OH	WASHER
S6110-24000-002	OH	SWASHPLATE
S6110-24001-003	OH	SWASHPLATE,SUB ASSY
S6110-24001-003	NS	SWASHPLATE,SUB ASSY
S6110-24001-003	NS	SWASHPLATE,SUB ASSY
S6110-24009-001	NS	SPACER SET
S6110-24012-003	OH	SWASHPLATE SUB ASSY
S6110-24017-000	NS	RING
S6110-24035-002	OH	SCISSORS, STATIONARY
S6110-24035-002	OH	SCISSORS, STATIONARY
S6110-24035-002	OH	SCISSORS, STATIONARY
S6110-24035-002	OH	SCISSORS, STATIONARY
S6110-24038-000	OH	LINK, UPPER
S6110-24040-000	OH	BRACKET ASSY
S6110-24045-000	NE	LINK, LOWER

S6110-24047-000	NE	LINK, STATIONARY
S6110-24047-000	NE	LINK, STATIONARY
S6110-24049-000	NE	LINK ASSY, LOWER
S6110-24049-000	NS	LINK ASSY, LOWER
S6110-24050-001	OH	ROTATING SCISSORS
S6110-24050-042	NS	SCISSORS ASSY
S6110-24052-000	OH	LINK ASSY ROT/ SCISSORS
S6110-24055-001	NS	LINK ASSY ROT/ SCISSORS
S6110-24056-000	OH	LINK, UPPER
S6110-24064-002	NS	INNER RACE
S6110-24071-000	OH	BRACKET
S6110-24085-001	NS	BUSHING
S6110-25088-000	NS	TENSION SPRING
S6110-25091-001	NE	SPRING
S6110-26000-006	OH	DAMPER ASSY
S6110-26089-001	OH	STRAINER
S6110-26340-001	OH	TANK, DAMPER
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-041	OH	DAMPER ASSY
S6110-26400-043	OH	DAMPER ASSY
S6110-26410-001	SV	DOWEL PLATE
S6110-31004-002	SV	WEIGHT
S6110-31400-001	OH	HEAD ASSY, T/R
S6110-31400-002	OH	HUB ASSY, T/R
S6110-34203-002	OH	LINK ASSY
S6110-34203-002	OH	LINK ASSY
S6110-34203-002	OH	LINK ASSY
S6110-34203-003	OH	LINK ASSY
S6112-21007-041	OH	ROD ASSY, ADJUSTMENT
S6112-21007-041	OH	ROD ASSY, ADJUSTMENT
S6112-21007-041	OH	ROD ASSY, ADJUSTMENT
S6112-21007-041	OH	ROD ASSY, ADJUSTMENT
S6112-21007-041	OH	ROD ASSY, ADJUSTMENT
S6112-23022-002	NE	HINGE
S6112-23027-001	NE	SPINDLE
S6112-23039-017	OH	BIFILAR INSTALLATION
S6112-23040-045	OH	SUPPORT ASSY, BIFILAR
S6112-23041-041	OH	WEIGHT ASSY, BIFILAR
S6112-23045-102	SV	BUSHING

S6112-23047-041	OH	COVER ASSY
S6112-23047-041	OH	COVER ASSY
S6112-23047-041	NE	COVER ASSY
S6112-23047-042	OH	COVER ASSY
S6112-23047-042	SV	COVER ASSY
S6112-23047-044	NE	SUPPORT ASSY, COVER
S6112-23047-044	SV	SUPPORT ASSY, COVER
S6112-23047-106	SV	SUPPORT, COVER
S6112-23071-042	OH	EYEBOLT ASSY
S6112-23071-042	OH	EYEBOLT ASSY
S6112-23071-042	OH	EYEBOLT ASSY
S6112-23072-041	OH	EYEBOLT SUBASSY
S6112-23310-007	OH	PLATE ASSY
S6112-31500-005	OH	TAIL ROTOR HEAD ASSY
S6112-31500-005	OH	TAIL ROTOR HEAD ASSY
S6112-31510-002	OH	RESERVOIR AND COVER ASSEMBLY
S6112-31510-002	OH	RESERVOIR AND COVER ASSEMBLY
S6112-33506-003	OH	SPINDLE ASSY
S6115-20107-009	NE	POCKET ASSY
S6115-20255-001	NS	TIP SEAL KIT ASSY
S6115-20255-001	NS	TIP SEAL KIT ASSY
S6115-20422-030	NE	FAIRING
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-001	OH	INDICATOR, BIM
S6115-20520-003	OH	BIM INDICATOR
S6117-30101-045	OH	BLADE, T/R
S6120-20096-024	OH	FLOOR BOARD
S6120-60900-012	OH	PLATFORM, MGB
S6120-60900-014	OH	PLATFORM INSTALL
S6120-60900-015	OH	PLATFORM INSTALL
S6120-60900-023	OH	PLATFORM, SERVICE
S6120-60900-024	OH	PLATFORM, SERVICE
S6120-60907-001	NS	LATCH ASSY
S6120-60907-001	OH	LATCH ASSY
S6120-60908-004	NS	ROD END
S6120-60908-006	NS	SPINDLE, LATCH
S6120-60912-001	NS	CHANNEL
S6120-61002-001	OH	BEAM
S6120-61002-001	NS	BEAM
S6120-61002-002	NE	BEAM
S6120-61003-008	SV	SUPPORT CHANNEL

S6120-61003-025	OH	VIB SUPPORT ASSY BAT
S6120-61003-031	NE	SHIM
S6120-61004-032	OH	BATTERY SUPPORT ASSY
S6120-61004-033	NE	BRACKET
S6120-61004-034	NE	BRACKET ASSY
S6120-61004-040	OH	CHANNEL
S6120-61005-002	OH	ABSORBER, VIB. BAT.
S6120-61005-002	OH	ABSORBER, VIB. BAT.
S6120-61005-002	OH	ABSORBER, VIB. BAT.
S6120-61005-002	OH	ABSORBER, VIB. BAT.
S6120-61005-002	OH	ABSORBER, VIB. BAT.
S6120-61014-002	OH	PLATE, TUNING
S6120-61181-011	OH	DOOR ASSY, NOSE
S6120-61189-022	OH	HOVER LIGHT
S6120-61220-016	NE	SEAL
S6120-61220-027	OH	WINDOW ASSY,JETTISON
S6120-61220-028	AR	WINDOW ASSY,JETTISON
S6120-61220-028	AR	WINDOW ASSY,JETTISON
S6120-61220-028	AR	WINDOW ASSY,JETTISON
S6120-61220-029	OH	WINDOW ASSY, JETTISON LH
S6120-61220-029	OH	WINDOW ASSY, JETTISON LH
S6120-61220-029	OH	WINDOW ASSY, JETTISON LH
S6120-61220-030	OH	WINDOW ASSY, JETTISON
S6120-61220-030	OH	WINDOW ASSY, JETTISON
S6120-61220-030	OH	WINDOW ASSY, JETTISON
S6120-61220-030	OH	WINDOW ASSY, JETTISON
S6120-61220-030	OH	WINDOW ASSY, JETTISON
S6120-61221-028	NE	FRAME ASSY
S6120-61221-032	NS	PAD
S6120-61235-003	OH	WINDOW, STATIONARY
S6120-61236-006	NE	FRAME
S6120-61236-007	NE	SPACER
S6120-61237-005	NE	SPACER
S6120-61237-009	NS	TRACK
S6120-61237-009	NE	TRACK
S6120-61262-001	NE	FITTING
S6120-61262-001	NS	FITTING
S6120-61328-005	OH	FRAME
S6120-61329-006	NS	LEVER
S6120-61329-008	NE	NUT
S6120-61329-008	NS	NUT
S6120-61329-009	NS	PLATE
S6120-61329-009	NS	PLATE
S6120-61330-001	OH	WINDOW ASSY
S6120-61330-001	OH	WINDOW ASSY
S6120-61330-002	OH	WINDOW ASSY
S6120-61330-002	OH	WINDOW ASSY

S6120-61330-007	NS	SEAL
S6120-61331-004	NS	LEVER
S6120-61331-004	NS	LEVER
S6120-62120-001	OH	FITTING ASSY
S6120-62128-003	OH	DOUBLER
S6120-62136-004	OH	SUPPORT
S6120-62141-021	OH	ROD
S6120-62262-006	OH	HANDGRIP ASSY
S6120-62263-003	NE	PAN
S6120-62289-001	OH	BRACKET
S6120-62404-043	NS	ANGLE BRACKETS
S6120-62406-001	OH	COWLING ASSY
S6120-62406-002	OH	COWLING ASSY
S6120-62406-035	OH	COWLING ASSY
S6120-62406-035	OH	COWLING ASSY
S6120-62406-036	OH	COWLING ASSY
S6120-62406-036	OH	COWLING ASSY
S6120-62610-038	OH	PANEL ASSY, RH
S6120-62610-045	OH	FAIRING INSTALLATION
S6120-62610-046	OH	FAIRING INSTALLATION
S6120-62611-060	OH	COVER ASSY, ACCESS RH
S6120-62616-007	OH	DOOR ASSY R/H
S6120-62617-003	NS	FITTING
S6120-62634-083	OH	DUCT
S6120-63136-021	OH	FLOOR PANEL
S6120-63136-025	NS	PANEL ASSY
S6120-63137-025	OH	FLOOR PANEL ASSY
S6120-63140-161	NS	PANEL
S6120-63212-117	OH	FLOOR, PANEL ASSY
S6120-63300-041	OH	SUPPORT COLLAR
S6120-64123-005	OH	BRACKET
S6120-64126-005	NE	BRACKET
S6120-64126-006	NE	BRACKET
S6120-64126-007	NE	BRACKET
S6120-64126-008	NE	BRACKET
S6120-64126-009	NE	BRACKET
S6120-64126-015	NE	BRACKET
S6120-64126-016	NE	BRACKET
S6120-64126-017	NE	BRACKET
S6120-64126-018	NE	BRACKET
S6120-64126-019	NE	BRACKET
S6120-64126-020	NE	BRACKET
S6120-64126-021	NE	BRACKET
S6120-64126-024	NE	BRACKET
S6120-64130-001	NE	BRACKET
S6120-64130-002	NE	BRACKET
S6120-64130-003	NE	BRACKET

S6120-64130-004	NE	BRACKET
S6120-64131-004	NE	FAIRING ASSY
S6120-65103-003	NE	FAIRING ASSY
S6120-65103-005	NE	FAIRING ASSY
S6120-65104-011	NE	BALL
S6120-65105-001	OH	SUPPORT INST BEARING
S6120-65114-001	NS	FRAME, LH
S6120-65114-002	NS	FRAME, RH
S6120-65135-004	NE	BRACKET
S6120-65135-005	NE	BRACKET
S6120-65135-006	NE	BRACKET
S6120-65135-007	NE	BRACKET
S6120-65135-008	NE	BRACKET
S6120-65135-009	NE	BRACKET
S6120-65135-010	NE	BRACKET
S6120-65135-011	NE	BRACKET
S6120-65135-012	NE	BRACKET
S6120-65135-017	NE	BRACKET
S6120-65135-018	NE	BRACKET
S6120-65135-019	NE	BRACKET
S6120-65135-020	NE	BRACKET
S6120-65135-021	NE	BRACKET
S6120-65135-022	NE	BRACKET
S6120-65178-003	NE	BRACKET
S6120-65178-004	NE	BRACKET
S6120-65205-000	NS	SPRING
S6120-65228-003	NE	BRACKET
S6120-66100-000	SV	PYLON ASSY
S6120-66117-000	NE	FITTING ASSY
S6120-66152-001	NE	FAIRING
S6120-70323-003	OH	SUPPORT
S6120-72247-010	OH	BRACKET ASSY LH
S6120-72247-011	OH	BRACKET ASSY RH
S6120-72260-020	NE	WINDOW
S6120-72267-027	NS	COVER ASSY
S6120-72267-075	OH	HATCH, EMERGENCY L/H
S6120-72267-075	OH	HATCH, EMERGENCY L/H
S6120-72267-075	AR	HATCH, EMERGENCY L/H
S6120-72267-076	OH	HATCH, EMERGENCY R/H
S6120-72333-009	OH	DRIP PAN ASSY
S6120-72333-009	OH	DRIP PAN ASSY
S6120-72340-011	OH	FITTING ASSY
S6120-72340-012	OH	FITTING ASSY, RH
S6120-72400-001	OH	BULKHEAD INSTALL
S6120-72400-001	OH	BULKHEAD INSTALL
S6120-72400-001	OH	BULKHEAD INSTALL
S6120-72401-001	OH	STRUT ASSY

S6120-72401-001	OH	STRUT ASSY
S6120-72402-001	AR	FITTING ASSY
S6120-72402-001	OH	FITTING ASSY
S6120-72402-001	OH	FITTING ASSY
S6120-72402-003	OH	FITTING,ENGINE MOUNT
S6120-72439-002	OH	RAMP ASSY RH
S6120-72439-003	OH	RAMP ASSY LH
S6120-72500-010	OH	AIRSTAIR DOOR
S6120-72501-001	OH	DOOR ASSY PASSENGER
S6120-72501-014	OH	DOOR ASSY PASSENGER
S6120-72501-014	OH	DOOR ASSY PASSENGER
S6120-72503-001	NS	LATCH ASSY
S6120-72506-003	NS	FITTING ASSY
S6120-72506-009	NS	BELLCRANK
S6120-72506-029	NE	ROD ASSY
S6120-72506-036	NE	SPINDLE
S6120-72509-003	OH	FITTING FWD
S6120-72509-004	OH	FITTING AFT
S6120-72518-001	OH	POST ASSY FWD
S6120-72518-002	OH	POST ASSY AFT
S6120-72518-007	NS	ROD END
S6120-72518-007	NS	ROD END
S6120-72518-022	OH	POST ASSY FWD
S6120-72518-023	OH	POST ASSY AFT
S6120-72518-023	OH	POST ASSY AFT
S6120-72518-026	OH	POST ASSY
S6120-72518-027	OH	TUBE ASSY,WELDED FWD
S6120-72519-002	OH	TUBE ASSY
S6120-72519-007	NE	TUBE ASSY
S6120-72519-034	AR	TUBE ASSY TELESCOPIC
S6120-72519-034	AR	TUBE ASSY TELESCOPIC
S6120-72519-043	OH	TUBE ASSY, FOLDING
S6120-72525-001	NS	SPRING
S6120-72600-003	OH	HINGE STOP ASSY
S6120-72601-001	OH	DOOR ASSY, SLIDING BAGGAGE
S6120-72603-021	OH	TRACK & SUPPORT INST
S6120-72603-021	OH	TRACK & SUPPORT INST
S6120-72603-021	AR	TRACK & SUPPORT INST
S6120-72603-022	AR	TRACK & SUPPORT INST
S6120-72603-022	OH	TRACK & SUPPORT INST
S6120-72603-022	OH	TRACK & SUPPORT INST
S6120-72605-011	NE	SPACER, BALL
S6120-72606-023	NE	BEARING PLATE
S6120-72612-007	NE	HINGE FTG ASSY
S6120-72612-007	NE	HINGE FTG ASSY
S6120-72612-008	NE	HINGE ASSY
S6120-72613-003	NS	CAM ASSY



S6120-72614-002	OH	HINGE LINK
S6120-72621-001	OH	DOOR ASSY, HINGED
S6120-72625-007	OH	FITTING, HINGE
S6120-72625-008	OH	FITTING, HINGE
S6120-73128-020	NE	STRINGER
S6120-73128-052	NE	STRINGER
S6120-73128-058	NE	STRINGER
S6120-73134-021	OH	PANEL ASSY, FLOOR
S6120-73134-022	OH	PANEL ASSY
S6120-73137-019	OH	PANEL ASSY, FLOOR
S6120-73165-001	OH	COVER ASSY
S6120-73165-001	OH	COVER ASSY
S6120-73165-001	OH	COVER ASSY
S6120-73400-001	SV	COVER ASSY
S6120-73400-004	NS	COVER ASSY
S6120-73401-003	OH	COVER, BAGGAGE COMP.
S6120-73408-019	OH	FLOOR PANEL
S6120-73410-006	OH	FLOOR PANEL
S6120-73411-003	OH	FLOOR PANEL
S6120-73422-006	NE	SHIELD
S6120-73422-008	OH	SHIELD
S6120-73442-009	OH	FLOOR ASSY
S6120-73443-001	OH	FLOOR INSTALLATION
S6120-73444-014	OH	FLOOR PANEL
S6120-73444-015	OH	FLOOR PANEL
S6120-73731-041	OH	PANEL, FLOOR
S6120-74107-001	OH	DOOR ASSY
S6120-74107-001	OH	DOOR ASSY
S6120-74107-001	OH	DOOR ASSY
S6120-74116-003	OH	PANEL ASSY
S6120-74140-001	NE	BRACKET
S6120-74140-002	NE	BRACKET
S6120-74140-003	NE	BRACKET
S6120-74140-004	NE	BRACKET
S6120-74140-006	NE	BRACKET
S6120-74140-007	NE	BRACKET
S6120-74140-008	NE	BRACKET
S6120-74140-009	OH	BRACKET
S6120-74140-010	NE	BRACKET
S6120-74140-011	NE	BRACKET
S6120-74140-012	NE	BRACKET
S6120-74140-013	NE	BRACKET
S6120-74140-014	NE	BRACKET
S6120-74143-007	NE	BRACKET
S6120-74143-008	NE	BRACKET
S6120-74190-009	NS	BRACKET
S6120-75110-131	OH	TUSELOGE ASSY, REAR

S6120-75116-007	NE	BRACKET
S6120-75116-008	NE	BRACKET
S6120-76150-071	OH	STABALIZER, HORIZONT
S6120-76210-002	OH	STAB FITTING
S6120-76214-001	OH	STAB FITTING
S6120-76214-002	OH	STAB FITTING
S6120-76216-001	OH	STAB FITTING
S6120-76246-001	OH	STAB STRUT FITTING
S6120-76265-001	SV	PYLON ASSY.
S6120-76286-001	OH	FITTING ASSY
S6120-76286-002	OH	FITTING
S6120-76287-001	OH	STRUT ASSY
S6120-76287-001	OH	STRUT ASSY
S6120-76292-004	OH	FAIRING
S6120-76293-002	NE	FAIRING ASSY
S6120-76293-010	OH	PIN
S6120-76293-015	OH	5 DRIVE SHFT FAIRING
S6120-76293-016	OH	FAIRING ASSY
S6120-76293-025	NE	5 DRIVE SHFT FAIRING
S6120-76293-025	OH	5 DRIVE SHFT FAIRING
S6120-76295-001	OH	INT. GEARBOX
S6120-76295-002	OH	SCREEN ASSY
S6120-76298-001	OH	CHANNEL ASSY
S6120-76302-001	OH	COVER ASSY
S6120-79292-004	OH	FAIRING
S6122-23047-041	OH	COVER ASSY FWD
S6122-23047-042	OH	COVER ASSY AFT
S6122-81109-002	OH	PANEL ASSY
S6122-81109-002	OH	PANEL ASSY
S6122-81201-000	AR	HELICOPTER
S6122-82310-005	NE	COVER ASSY
S6122-82310-022	NE	Y ASSY
S6122-82400-002	OH	PERSONNEL DOOR ASSY
S6122-82406-031	OH	LADDER ASSY
S6122-82411-002	OH	FIREWALL
S6122-82415-031	OH	SUPPORT INST
S6122-82415-031	OH	SUPPORT INST
S6122-82415-033	OH	SUPPORT INSTAL
S6122-82417-024	OH	FIREWALL ASSY
S6122-82419-002	OH	FAIRING ASSY
S6122-82419-101	OH	FAIRING ASSY
S6122-82424-008	NE	LINK, CONNECTING
S6122-82430-122	OH	FAIRING ASSY, LH
S6122-82450-003	NS	FITTING
S6122-82490-035	OH	PLATFORM ASSY
S6122-83133-007	OH	COVER
S6122-83150-134	OH	PANEL ASSY

S6122-83151-132	OH	PANEL ASSY
S6122-83152-103	OH	PANEL ASSY
S6122-83153-102	OH	PANEL ASSY
S6122-83153-103	OH	PANEL ASSY
S6122-83153-104	OH	PANEL ASSY
S6122-83154-132	OH	PANEL ASSY
S6122-83155-103	OH	PANEL ASSY
S6122-83156-103	OH	PANEL ASSY
S6122-83157-101	OH	COVER ASSY
S6122-83157-102	OH	COVER ASSY
S6122-83157-102	OH	COVER ASSY
S6122-83157-103	OH	COVER ASSY
S6122-83157-103	OH	COVER ASSY
S6122-83157-104	OH	COVER ASSY
S6122-83254-001	OH	RING, TIEDOWN
S6122-84124-003	OH	PANEL ASSY
S6122-85157-104	OH	COVER ASSY
S6122-85200-001	OH	RAMP ASSY, AFT
S6122-85240-000	OH	FITTING
S6122-86150-004	OH	STABILIZOR HORIZONTAL
S6122-86204-003	OH	FAIRING ASSY
S6122-86205-003	OH	FAIRING ASSY
S6122-86205-004	OH	FAIRING ASSY
S6122-86207-019	OH	FAIRING ASSY
S6122-86210-002	OH	PYLON ASSY
S6122-86300-011	OH	STRUT ASSY, STAB
S6122-87262-001	OH	FITTING, HOIST
S6122-87276-001	OH	FITTING, HOIST, FWD
S6122-87276-002	OH	FITTING,HOIST,AFT
S6122-87330-002	OH	PANEL ASSY
S6122-87331-014	OH	PANEL ASSY
S6122-87734-001	OH	RESERVOIR ASSY
S6122-87734-019	OH	RESERVOIR
S6122-91006-006	OH	RADOME SUPPORT
S6122-91038-002	OH	LADDER ASSY
S6122-91104-000	OH	PANEL ASSY
S6122-91104-067	OH	PANEL ASSY
S6122-91104-067	OH	PANEL ASSY
S6122-91104-083	OH	PANEL ASSY
S6122-91104-084	OH	PANEL ASSY
S6122-91104-084	OH	PANEL ASSY
S6125-50100-003	NS	DRAG LINK ASSY
S6125-50100-003	NS	DRAG LINK ASSY
S6125-50100-003	OH	DRAG LINK ASSY
S6125-50100-003	OH	DRAG LINK ASSY
S6125-50100-004	OH	LINK ASSY
S6125-50104-003	OH	LINK ASSY

S6125-50104-003	OH	LINK ASSY
S6125-50104-003	OH	LINK ASSY
S6125-50104-003	OH	LINK ASSY
S6125-50104-003	OH	LINK ASSY
S6125-50121-000	OH	SPRING
S6125-50122-001	NS	YOKE
S6125-50122-002	NS	PIN
S6125-50122-003	NS	CAM FOLLOWER
S6125-50130-001	OH	FITTING ASSY
S6125-50130-001	OH	FITTING ASSY
S6125-50130-001	OH	FITTING ASSY
S6125-50130-001	OH	FITTING ASSY
S6125-50130-001	OH	FITTING ASSY
S6125-50130-001	OH	FITTING ASSY
S6125-50130-002	OH	FITTING ASSY
S6125-50130-002	OH	FITTING ASSY
S6125-50130-002	OH	FITTING ASSY
S6125-50130-003	OH	FITTING INBOARD
S6125-50130-005	OH	FITTING
S6125-50134-003	OH	UP-LOCK ASSY, MECH. LH
S6125-50137-001	OH	SUPPORT, UP LOCK
S6125-50137-001	OH	SUPPORT, UP LOCK
S6125-50137-001	OH	SUPPORT, UP LOCK
S6125-50138-002	OH	LINKAGE ASSY
S6125-50138-002	OH	LINKAGE ASSY
S6125-50157-002	OH	BRACKET
S6125-50158-000	OH	TOWING LUG
S6125-50158-000	OH	TOWING LUG
S6125-50158-001	OH	LUG, NM WHEEL
S6125-50160-000	OH	CAP
S6125-50202-002	OH	STRUT ASSY
S6125-50203-001	OH	WHEEL ASSY
S6125-50204-001	OH	STRUT ASSY
S6125-50204-001	OH	STRUT ASSY
S6125-50204-001	OH	STRUT ASSY
S6125-50204-001	OH	STRUT ASSY
S6125-50204-001	OH	STRUT ASSY
S6125-50204-001	OH	STRUT ASSY
S6125-50219-001	OH	DRAG BRACE ASSY
S6125-50219-001	OH	DRAG BRACE ASSY
S6125-50219-001	OH	DRAG BRACE ASSY
S6125-50219-001	OH	DRAG BRACE ASSY
S6125-50241-000	OH	STRUT ASSY
S6125-50241-010	NS	CONNECTOR
S6125-50266-001	OH	LOWER DRAG
S6125-50267-001	OH	BRACE ASSY, DRAG
S6125-50267-001	OH	BRACE ASSY, DRAG
S6125-50267-001	OH	BRACE ASSY, DRAG
S6125-50267-001	OH	BRACE ASSY, DRAG

S6125-50267-001	OH	BRACE ASSY, DRAG
S6125-50267-001	OH	BRACE ASSY, DRAG
S6125-50301-001	OH	STRUT AND FAIRING ASSY
S6125-50303-001	OH	STRUT ASSY
S6125-50500-001	OH	TAIL WHEEL INSTALL
S6125-50501-005	OH	STRUT AND SUPPORT
S6125-50504-005	OH	SUPPORT ASSY
S6125-50504-010	OH	SUPPORT ASSY
S6125-50506-000	OH	CAP, CENTERING
S6125-50509-000	OH	AXLE ASSY
S6125-50515-000	OH	SPACER
S6125-50526-000	NS	PISTON
S6125-50530-000	OH	CYLINDER ASSY
S6125-50530-000	OH	CYLINDER ASSY
S6125-50530-000	OH	CYLINDER ASSY
S6125-50530-006	OH	SELF CENTERING CYL
S6125-50532-000	NE	CYLINDER ASSY SUB
S6125-50541-000	OH	BRACKET ASSY
S6125-50542-002	OH	RING, TIE DOWN
S6125-50580-002	OH	TLG
S6125-50581-001	OH	WHEEL INSTALL, TAIL
S6125-50582-003	OH	STRUT ASSY
S6125-51204-003	OH	FAIRING
S6125-51205-001	OH	STRUT ASSY
S6125-51205-001	OH	STRUT ASSY
S6125-51205-001	OH	STRUT ASSY
S6125-51205-001	OH	STRUT ASSY
S6125-51205-001	OH	STRUT ASSY
S6125-51205-001	OH	STRUT ASSY
S6125-51212-001	OH	TUBE ASSY
S6125-51212-004	OH	TUBE ASSY
S6125-51212-005	OH	TUBE ASSY
S6125-51213-001	OH	TUBE ASSY
S6125-51213-001	OH	TUBE ASSY
S6125-51213-001	OH	TUBE ASSY
S6125-51214-003	OH	TUBE ASSY
S6125-51214-004	OH	TUBE ASSY
S6125-51214-004	OH	TUBE ASSY
S6125-51225-006	OH	FAIRING ASSY MIDDLE RH
S6125-51226-003	OH	FAIRING ASSY FWD LH
S6125-51226-004	OH	FAIRING ASSY FWD RH
S6125-51226-005	OH	FAIRING ASSY LH
S6125-51226-006	OH	FAIRING ASSY RH
S6125-55004-101	OH	FLOAT BAG
S6125-55004-101	OH	FLOAT BAG
S6125-55004-101	OH	FLOAT BAG
S6125-55004-101	OH	FLOAT BAG
S6125-55004-101	OH	FLOAT BAG

S6125-55004-101	OH	FLOAT BAG
S6125-55011-001	OH	CYLINDER ASSY
S6125-5504-101	OH	FLOAT BAG
S6125-61052-000	OH	MASTER BRAKE CYL.
S6125-61052-000	OH	MASTER BRAKE CYL.
S6125-61052-000	OH	MASTER BRAKE CYL.
S6126-50101-003	NE	RIB
S6126-50101-007	OH	FAIRING ASSY
S6127-50100-013	OH	MAIN GEAR ASSY, LH
S6127-50100-014	OH	MAIN GEAR ASSY, RH
S6127-50102-000	OH	STRUT ASSY
S6127-50102-002	OH	MAIN STRUT ASSEMBLY
S6127-50102-002	OH	MAIN STRUT ASSEMBLY
S6127-50102-002	OH	MAIN STRUT ASSEMBLY
S6127-50102-002	OH	MAIN STRUT ASSEMBLY
S6127-50103-001	OH	LINK ASSY, LOWER
S6127-50103-041	OH	LINK ASSY
S6127-50103-041	OH	LINK ASSY
S6127-50104-041	OH	LINK ASSY,UPPER
S6127-50104-041	OH	LINK ASSY,UPPER
S6127-50104-042	OH	LINK, UPPER DRAG
S6127-50104-042	OH	LINK, UPPER DRAG
S6127-50105-041	OH	UPPER LINK ASSEMBLY
S6127-50105-041	OH	UPPER LINK ASSEMBLY
S6127-50105-042	OH	LINK ASSY
S6127-50106-001	OH	LOWER LINK ASSEMBLY
S6127-50106-001	OH	LOWER LINK ASSEMBLY
S6127-50106-004	OH	LINK, LOWER
S6127-50106-004	OH	LINK, LOWER
S6127-50107-001	OH	FITTING, DRAG LINK
S6127-50107-001	OH	FITTING, DRAG LINK
S6127-50107-001	OH	FITTING, DRAG LINK
S6127-50107-002	OH	FITTING, DRAG LINK
S6127-50107-002	OH	FITTING, DRAG LINK
S6127-50108-001	OH	FITTING ASSY
S6127-50108-001	OH	FITTING ASSY
S6127-50108-005	OH	FITTING, TRUNNION
S6127-50108-006	OH	FITTING, TRUNNION
S6127-50108-006	OH	FITTING, TRUNNION
S6127-50109-002	OH	PISTON ASSY
S6127-50114-001	OH	RETAINER
S6127-50114-001	OH	RETAINER
S6127-50114-002	OH	RETAINER
S6127-50118-003	OH	UNLOCK HOOK ASSEMBLY
S6127-50118-004	OH	UNLOCK HOOK ASSEMBLY
S6127-50119-003	OH	ARM ASSY
S6127-50127-001	OH	LOWER LINK ASSEMBLY

S6127-50138-103	OH	ARM EXTENSION MLG
S6127-50138-104	OH	ARM, EXT
S6127-50140-101	OH	BRACKET, EXT ARM
S6127-50301-005	NE	STRUT FAIRING
S6127-50302-002	OH	STRUT ASSY
S6127-50304-002	SV	HOUSING
S6127-50500-002	OH	NLG ASSY
S6127-50501-002	OH	STRUT ASSY
S6127-50501-003	OH	STRUT AND WHEEL ASSY
S6127-50501-004	OH	STRUT ASSY
S6127-50503-001	OH	CAP
S6127-50504-002	OH	STRUT
S6127-50551-000	OH	NOSEGEAR/SHIM WASHER
S6127-63101-010	OH	RH CYLINDER ASSEMBLY
S6130-60031-001	OH	TRANSDUCER
S6130-62017-004	NE	PLATE
S6130-62017-004	SV	PLATE
S6130-62027-003	NE	CONTROL, PUSH PULL SPEED
S6130-62030-001	NS	LOCK
S6130-62030-001	NE	LOCK
S6130-62031-001	NS	WORM GEAR ASSY
S6130-62031-001	OH	WORM GEAR ASSY
S6130-62031-001	OH	WORM GEAR ASSY
S6130-62031-002	NS	WORM
S6130-62032-001	OH	BOX ASSY, SPEED CONTROL
S6130-62032-001	OH	BOX ASSY, SPEED CONTROL
S6130-62032-001	OH	BOX ASSY, SPEED CONTROL
S6130-62032-001	OH	BOX ASSY, SPEED CONTROL
S6130-62032-001	OH	BOX ASSY, SPEED CONTROL
S6130-62032-001	OH	BOX ASSY, SPEED CONTROL
S6130-62033-001	OH	HOUSING ASSY, LH
S6130-62055-003	OH	CONTROL ASSY
S6130-62055-003	OH	CONTROL ASSY
S6130-62119-000	OH	ADAPTER
S6130-62119-000	OH	ADAPTER
S6130-62119-002	OH	FITTING, FUEL
S6130-62119-002	OH	FITTING, FUEL
S6130-62122-001	OH	HOUSING, CHECK VALVE
S6130-62127-001	OH	FLANGE
S6130-62164-001	OH	VALVE, SHUT OFF
S6130-62164-001	OH	VALVE, SHUT OFF
S6130-63007-004	OH	FUEL CELL
S6130-63010-002	OH	POPPET, DRAIN
S6130-63015-002	OH	BOOST PUMP
S6130-63020-000	OH	EJECTOR, FUEL
S6130-63020-000	NE	EJECTOR, FUEL
S6130-63020-000	OH	EJECTOR, FUEL

S6130-63021-000	OH	CHAMBER
S6130-63021-000	OH	CHAMBER
S6130-63024-000	NS	BOLT
S6130-63032-001	NS	TANK UNIT
S6130-63032-001	OH	TANK UNIT
S6130-63033-001	OH	TRANSMITTER, FUEL
S6130-63033-001	OH	TRANSMITTER, FUEL
S6130-63033-001	OH	TRANSMITTER, FUEL
S6130-63039-000	OH	BRACKET
S6130-63040-002	OH	FUEL CHAMBER SUB ASY
S6130-63046-002	OH	VALVE, FUEL PRESS
S6130-63047-000	OH	VALVE, HIGH LEVEL
S6130-63047-000	OH	VALVE, HIGH LEVEL
S6130-63047-000	OH	VALVE, HIGH LEVEL
S6130-63047-000	OH	VALVE, HIGH LEVEL
S6130-63047-000	OH	VALVE, HIGH LEVEL
S6130-63049-000	OH	VALVE, FUEL-DEFUEL
S6130-63049-000	RD	VALVE, FUEL-DEFUEL
S6130-63053-000	OH	SCREEN
S6130-63067-002	OH	POPPET DRAIN VALVE
S6130-63096-001	OH	CELL, FUEL TANK FWD
S6130-63096-002	OH	CELL, FUEL TANK AFT
S6130-63097-001	OH	CELL, FUEL TANK CENTER
S6130-63097-001	OH	CELL, FUEL TANK CENTER
S6130-63203-004	OH	FUEL CELL, AFT
S6130-63204-000	OH	BOLT
S6130-63204-155	OH	PIPE
S6130-63210-000	OH	MANIFOLD
S6130-63213-001	OH	PROBE, FUEL
S6130-63213-001	OH	PROBE, FUEL
S6130-63213-001	SV	PROBE, FUEL
S6130-63214-002	OH	TANK UNIT
S6130-63231-002	OH	CELL, FUEL TANK CENTER
S6130-63231-003	OH	CELL, FUEL TANK FWD
S6130-63231-004	OH	CELL, FUEL TANK AFT
S6130-63247-041	OH	ACCESS COVER
S6130-63247-041	OH	ACCESS COVER
S6130-63247-041	OH	ACCESS COVER
S6130-63403-001	OH	FUEL CELL
S6130-63403-001	OH	FUEL CELL
S6130-63404-001	OH	FUEL CELL
S6130-63414-001	OH	CONNECTOR ASSY
S6130-63417-001	OH	TUBE ASSY
S6130-80042-001	OH	TOPPING GEAR BOX
S6130-80050-007	OH	PLATFORM INSTALL
S6130-80050-008	OH	PLATFORM INSTALL
S6130-80050-008	SV	PLATFORM INSTALL



S6130-80065-000	OH	HANDLE ASSY
S6130-80076-001	OH	TUBE ASSY LATCH MECH
S6130-80081-001	OH	FITTING ASSY
S6130-80081-001	OH	FITTING ASSY
S6130-80082-002	NE	HOOK
S6130-80098-001	NE	FUEL CONTROL BRACKET
S6130-80117-001	NE	RETAINER
S6130-80117-002	NS	SUPPORT
S6130-80117-002	NE	SUPPORT
S6130-80140-002	OH	ENGINE SERV. RH
S6130-80140-003	OH	ENGINE SERV. LH
S6130-80142-004	OH	PLATFORM ASSY
S6130-80142-005	OH	PLATFORM ASSY
S6130-80169-001	OH	EXHAUST DUCT
S6130-80169-001	OH	EXHAUST DUCT
S6130-80169-001	OH	EXHAUST DUCT
S6130-80175-001	NE	TUBE
S6130-80175-002	OH	ISOLATOR
S6130-80205-014	OH	OIL TANK
S6130-80205-030	OH	TANK, OIL
S6130-80205-030	OH	TANK, OIL
S6130-80205-032	OH	TANK ASSY
S6130-80215-002	NE	CLAMP ASSY
S6130-80221-000	OH	RING, OIL
S6130-80306-000	OH	SUPPORT
S6130-80510-001	OH	COVER ASSY, ENGINE STARTER
S6130-80510-001	OH	COVER ASSY, ENGINE STARTER
S6130-80510-001	OH	COVER ASSY, ENGINE STARTER
S6130-80510-001	OH	COVER ASSY, ENGINE STARTER
S6130-80603-000	OH	EXHAUST,
S6130-80603-000	OH	EXHAUST,
S6131-62151-001	SV	FITTING
S6132-61001-008	OH	QUADRANT ASSY
S6132-62000-001	OH	EMER. FUEL THROTTLE
S6132-62001-001	OH	FUEL THROTTLE, EMER.
S6132-62104-001	OH	PRESSURE SWITCH
S6132-62104-001	AR	PRESSURE SWITCH
S6132-62104-001	AR	PRESSURE SWITCH
S6132-62108-001	OH	VALVE ASSY
S6132-62108-001	OH	VALVE ASSY
S6132-62108-001	OH	VALVE ASSY
S6132-62108-001	OH	VALVE ASSY
S6132-62605-001	OH	SHUTOFF VALVE
S6132-62623-012	NS	DECAL
S6132-63004-001	OH	TUBE ASSY
S6132-63007-004	OH	FUEL CELL
S6132-63018-001	OH	SHIELD

S6132-63031-001	OH	RELIEF VALVE
S6132-63033-001	OH	CROSS CONNECTOR
S6132-63033-001	OH	CROSS CONNECTOR
S6132-63037-001	OH	TUBE ASSY
S6132-80166-001	OH	APU STRUT
S6134-62107-002	SV	TANK UNIT
S6134-62107-002	SV	TANK UNIT
S6134-62107-003	OH	TANK UNIT
S6134-62107-004	OH	TANK UNIT
S6135-20030-000	NE	GEAR, SUN
S6135-20050-008	NE	RETAINER
S6135-20053-009	SV	NUT
S6135-20069-000	OH	LINER
S6135-20081-000	OH	SPACER
S6135-20106-000	OH	GEAR, TAKE OFF
S6135-20106-000	OH	GEAR, TAKE OFF
S6135-20108-101	OH	TAKE OFF COUPLING
S6135-20116-002	OH	PLATE
S6135-20117-003	OH	PLATE
S6135-20125-001	NS	PLATE-PLANETARY BUFFER
S6135-20126-001	OH	RING
S6135-20128-001	NE	PIN
S6135-20148-006	OH	THRU SHAFT
S6135-20148-006	OH	THRU SHAFT
S6135-20176-002	OH	GEAR
S6135-20181-002	OH	GEAR
S6135-20184-001	NE	RETAINER
S6135-20248-003	OH	SERVO MOUNT BRACKET
S6135-20277-000	NE	STUD
S6135-20388-000	NE	SWITCH, PRESS
S6135-20407-169	NE	TUBE ASSY
S6135-20407-208	NE	TUBE ASSY
S6135-20433-002	OH	MANIFOLD ASSY
S6135-20433-002	OH	MANIFOLD ASSY
S6135-20601-024	OH	HOUSING
S6135-20603-001	NE	HOUSING & LINER ASSY, TAKE-OFF
S6135-20603-001	OH	HOUSING & LINER ASSY, TAKE-OFF
S6135-20606-012	OH	HOUSING, INPUT
S6135-20606-041	OH	HOUSING & COVER ASSY, INPUT
S6135-20606-046	OH	HOUSING INPUT ASSY
S6135-20606-046	OH	HOUSING INPUT ASSY
S6135-20608-001	NS	GEAR SPUR
S6135-20611-003	OH	CAMSHAFT ASSY
S6135-20611-004	OH	CAM ASSY
S6135-20619-001	OH	CAP
S6135-20626-001	NE	SPACER
S6135-20633-001	OH	PISTON-TORQUE METER

S6135-20634-000	NE	HOUSING
S6135-20634-001	OH	HOUSING-TORQUE METER
S6135-20634-002	OH	HOUSING-TORQUE METER
S6135-20634-004	OH	HOUSING ASSY-TORQUE METER
S6135-20634-005	OH	HOUSING ASSY-TORQUE METER
S6135-20639-101	OH	HOUSING, INPUT
S6135-20648-002	NE	RETAINER
S6135-20648-003	NE	RETAINER
S6135-20658-001	OH	SPACER
S6135-20668-003	NE	SHIM
S6135-20674-003	OH	GEAR SET
S6135-20695-004	NE	HOUSING GEAR
S6135-20699-001	NE	PIN/PISTON
S6135-20699-101	NE	PIN
S6135-20701-003	OH	SUPPORT ASSY
S6135-20701-003	OH	SUPPORT ASSY
S6135-20701-003	OH	SUPPORT ASSY
S6135-20702-000	OH	GIMBAL RINGS
S6135-20702-000	OH	GIMBAL RINGS
S6135-20755-022	NE	PIN
S6135-20768-001	NS	HOUSING ASSY
S6135-20773-002	NE	ELBOW ASSY
S6135-20797-019	OH	DUCT ASSY LH
S6135-20797-020	OH	DUCT ASSY RH
S6135-20797-020	OH	DUCT ASSY RH
S6135-20851-001	NE	SHAFT, GEN
S6135-20852-001	OH	DAMPER ASSY
S6135-20852-007	OH	FLANGE
S6135-20852-009	OH	BRACKET
S6135-20860-001	OH	SHAFT ASSY
S6135-20860-001	OH	SHAFT ASSY
S6135-20860-001	NE	SHAFT ASSY
S6135-20860-001	NE	SHAFT ASSY
S6135-20860-001	NE	SHAFT ASSY
S6135-20951-001	OH	HOUSING ASSY
S6135-20952-001	OH	HOUSING
S6135-20953-001	OH	HOUSING ASSY
S6135-20957-002	OH	SHAFT, COUPLING
S6135-20968-005	OH	CAP ASSY - LWR
S6135-20971-001	NE	PIN
S6135-22011-001	NE	PLATE, PLANETARY MATCHSET
S6135-22011-002	OH	PLATE ASSY/MATCHED SET
S6135-22017-003	NE	RING GEAR
S6135-22017-003	OH	RING GEAR
S6135-22021-001	OH	NUT
S6135-22022-001	OH	PLATE
S6135-22032-001	OH	NUT

S6135-22048-005	OH	HOUSING
S6135-22074-014	NS	FITTING
S6135-50602-001	NE	PIN
S6135-61044-105	OH	ROTOR BRAKE ASSY
S6135-64001-000	OH	TAIL DRIVE SHAFT
S6135-64001-001	OH	DRIVE SHAFT
S6135-64001-001	OH	DRIVE SHAFT
S6135-64001-041	OH	SHAFT ASSY, #1
S6135-64001-041	OH	SHAFT ASSY, #1
S6135-64002-000	OH	SHAFT ASSY, SECT 2
S6135-64002-000	OH	SHAFT ASSY, SECT 2
S6135-64002-000	OH	SHAFT ASSY, SECT 2
S6135-64002-041	OH	SHAFT ASSY, #2
S6135-64002-041	OH	SHAFT ASSY, #2
S6135-64002-041	OH	SHAFT ASSY, #2
S6135-64002-041	OH	SHAFT ASSY, #2
S6135-64003-000	OH	DRIVE SHAFT T/R #3
S6135-64003-003	OH	DRIVE SHAFT, #3
S6135-64013-000	OH	FLANGE
S6135-64013-002	OH	FLANGE COUPLING
S6135-64027-000	OH	PLATE, MOUNTING
S6135-64032-000	NS	PLATE
S6135-64034-000	OH	SUPPORT ASSY, RADIATOR
S6135-64034-000	OH	SUPPORT ASSY, RADIATOR
S6135-64038-002	OH	BLOWER INSTALLATION
S6135-64038-002	AR	BLOWER INSTALLATION
S6135-64038-002	OH	BLOWER INSTALLATION
S6135-64041-000	OH	COOLER, OIL
S6135-64041-001	OH	OIL COOLER
S6135-64129-004	OH	DRIVE SHAFT, #4
S6135-66246-001	SV	SIGHT GLASS
S6135-66248-001	SV	WINDOW ASSY.
S6135-66248-002	NS	WINDOW
S6135-66300-002	OH	INTERMEDIATE GEARBOX
S6135-66300-002	OH	INTERMEDIATE GEARBOX
S6135-66303-001	OH	HOUSING
S6135-66306-001	OH	INPUT HOUSING
S6135-66307-001	OH	HOUSING, OUTPUT
S6135-66320-002	OH	SPIRAL, OIL TRANSFER
S6135-66321-002	OH	FLANGE, INPUT
S6135-66501-001	OH	DRIVESHAFT
S6135-66501-001	OH	DRIVESHAFT
S6135-66605-000	OH	HOUSING ASSY
S6135-66606-000	OH	HOUSING SUBASSY
S6135-66607-000	OH	HOUSING SUBASSY, INNER
S6135-66629-000	OH	SPUR, GEAR
S6135-66705-001	OH	PITCH BEAM

S6135-66706-001	OH	SHAFT, PITCH CONTROL
S6137-23000-019	OH	MAIN GEAR BOX
S6137-23000-019	OH	MAIN GEAR BOX
S6137-23008-004	NE	COVER ASSY
S6137-23023-001	NE	GEAR SHAFT
S6137-64308-002	OH	SHAFT ASSY
S6137-64308-005	OH	SHAFT SUB-ASSY
S6137-64314-007	OH	SHAFT ASSY
S6137-64323-002	OH	BEARING ASSY
S6137-64323-002	OH	BEARING ASSY
S6137-64323-043	OH	SUPPORT, BEARING
S6137-64361-001	OH	SHAFT, ADAPTER
S6137-66500-001	OH	GEAR BOX
S6137-66500-001	OH	GEAR BOX
S6137-66500-001	OH	GEAR BOX
S6137-66700-001	OH	TAIL GEAR BOX
S6137-66700-001	OH	TAIL GEAR BOX
S6137-66702-001	OH	HOUSING ASSY
S6137-66704-001	OH	PITCH BEAM
S6137-91000-015	OH	CLUTCH ASSY
S6137-91000-018	OH	CLUTCH, APP
S6140-10001-1D	OH	SUPPORT
S6140-1137	OH	BELLCRANK
S6140-20004-000	OH	SUPPORT ASSY
S6140-20004-000	OH	SUPPORT ASSY
S6140-20004-003	OH	SUPPORT ASSY
S6140-20004-008	OH	SUPPORT ASSY
S6140-20004-008	OH	SUPPORT ASSY
S6140-20006-000	OH	BELLCRANK ASSY
S6140-20006-000	OH	BELLCRANK ASSY
S6140-20006-000	OH	BELLCRANK ASSY
S6140-20006-000	OH	BELLCRANK ASSY
S6140-20006-005	OH	BELLCRANK ASSY
S6140-20006-005	OH	BELLCRANK ASSY
S6140-20008-000	OH	LINK ASSY
S6140-20009-002	SV	LINK ASSY
S6140-61101-006	OH	STICK ASSY, CYCLIC
S6140-61101-006	OH	STICK ASSY, CYCLIC
S6140-61106-13AK	OH	CYCLIC CTRL STICK
S6140-61108-000	OH	CYCLIC HOUSING ASSY
S6140-61108-000	OH	CYCLIC HOUSING ASSY
S6140-61109-000	OH	HOUSING ASSY, CYCLIC
S6140-61109-000	OH	HOUSING ASSY, CYCLIC
S6140-61110-000	OH	YOKE ASSY, CYCLIC
S6140-61111-000	OH	SOCKET, CYCLIC
S6140-61111-000	OH	SOCKET, CYCLIC
S6140-61112-000	OH	ROD ASSY

S6140-61113-000	OH	STOP
S6140-61113-038	OH	TUBE ASSY
S6140-61114-000	OH	BELLCRANK LEFT
S6140-61114-000	OH	BELLCRANK LEFT
S6140-61114-000	OH	BELLCRANK LEFT
S6140-61114-000	OH	BELLCRANK LEFT
S6140-61114-001	OH	BELLCRANK
S6140-61115-000	OH	BELLCRANK SUPPORT
S6140-61115-000	OH	BELLCRANK SUPPORT
S6140-61115-000	OH	BELLCRANK SUPPORT
S6140-61117-000	OH	BELLCRANK ASSY
S6140-61117-000	OH	BELLCRANK ASSY
S6140-61118-000	OH	SUPPORT ASSY
S6140-61118-000	OH	SUPPORT ASSY
S6140-61118-000	AR	SUPPORT ASSY
S6140-61119-000	OH	ARM ASSY, CYCLIC
S6140-61121-001	OH	FLANGE
S6140-61130-000	OH	TUBE
S6140-61130-001	OH	ROD ASSY
S6140-61130-005	OH	ROD ASSY
S6140-61130-005	OH	ROD ASSY
S6140-61130-005	NS	ROD ASSY
S6140-61130-006	OH	ROD ASSEMBLY
S6140-61130-006	OH	ROD ASSEMBLY
S6140-61130-006	AR	ROD ASSEMBLY
S6140-61130-006	OH	ROD ASSEMBLY
S6140-61130-007	OH	ROD ASSY
S6140-61130-007	OH	ROD ASSY
S6140-61130-007	NS	ROD ASSY
S6140-61130-007	NS	ROD ASSY
S6140-61130-007	OH	ROD ASSY
S6140-61130-007	OH	ROD ASSY
S6140-61130-008	OH	CONTROL ROD
S6140-61130-008	OH	CONTROL ROD
S6140-61130-009	OH	ROD ASSEMBLY
S6140-61130-009	OH	ROD ASSEMBLY
S6140-61130-009	OH	ROD ASSEMBLY
S6140-61130-009	OH	ROD ASSEMBLY
S6140-61130-011	OH	CONTROL ROD ASSY
S6140-61130-011	OH	CONTROL ROD ASSY
S6140-61130-011	OH	CONTROL ROD ASSY
S6140-61130-011	AR	CONTROL ROD ASSY
S6140-61130-012	OH	ROD ASSY
S6140-61130-012	OH	ROD ASSY
S6140-61130-012	AR	ROD ASSY
S6140-61130-013	NS	ROD ASSY
S6140-61130-013	OH	ROD ASSY

S6140-61130-014	OH	ROD ASSEMBLY
S6140-61130-014	OH	ROD ASSEMBLY
S6140-61130-016	OH	ROD ASSY
S6140-61130-017	OH	ROD ASSEMBLY
S6140-61130-017	OH	ROD ASSEMBLY
S6140-61130-018	OH	ROD ASSY
S6140-61130-018	OH	ROD ASSY
S6140-61130-018	OH	ROD ASSY
S6140-61130-019	OH	TUBE ASSY, YAW
S6140-61130-019	OH	TUBE ASSY, YAW
S6140-61130-020	NE	ROD ASSY
S6140-61130-021	NS	ROD ASSY
S6140-61130-022	OH	ROD ASSY
S6140-61130-022	OH	ROD ASSY
S6140-61130-022	OH	ROD ASSY
S6140-61130-024	OH	ROD ASSY
S6140-61130-024	OH	ROD ASSY
S6140-61130-026	OH	ROD ASSY
S6140-61130-026	OH	ROD ASSY
S6140-61130-037	OH	TUBE
S6140-61130-071	OH	TUBE ASSY
S6140-61130-074	OH	ROD ASSY
S6140-61130-074	NS	ROD ASSY
S6140-61130-104	OH	TUBE ASSY
S6140-61151-002	OH	TUBE ASSEMBLY
S6140-61402-004	OH	STICK ASSY, PILOTS COLLECTIVE
S6140-61402-904	AR	STICK ASSY PILOT
S6140-61405-003	OH	SUPPORT
S6140-61405-003	OH	SUPPORT
S6140-61406-003	OH	SUPPORT
S6140-61407-000	OH	BELLCRANK SUPPORT
S6140-61407-000	OH	BELLCRANK SUPPORT
S6140-61407-001	OH	BELLCRANK,COIL,PITCH
S6140-61407-001	OH	BELLCRANK,COIL,PITCH
S6140-61408-000	NS	SUPPORT ASSY
S6140-61408-000	OH	SUPPORT ASSY
S6140-61408-001	OH	SUPPORT
S6140-61411-002	OH	SUPPORT ASSY
S6140-61411-002	OH	SUPPORT ASSY
S6140-61413-000	OH	SOCKET
S6140-61413-000	OH	SOCKET
S6140-61413-000	OH	SOCKET
S6140-61415-000	OH	BELLCRANK ASSY
S6140-61415-000	OH	BELLCRANK ASSY
S6140-61415-001	OH	BELLCRANK,COIL,PITCH
S6140-61417-000	OH	SLEEVE
S6140-61418-002	OH	FITTING

S6140-61419-002	NS	COLLET
S6140-61426-000	OH	SUPPORT ASSY
S6140-61426-001	OH	BELLCRANK SUPPORT
S6140-61428-001	OH	BELLCRANK COLLECTIVE
S6140-61428-001	OH	BELLCRANK COLLECTIVE
S6140-61431-001	OH	SPRING INSTALLATION
S6140-61433-004	AR	ROD ASSY
S6140-61433-004	AR	ROD ASSY
S6140-61453-000	OH	BRACKET DRAG
S6140-61463-000	OH	LEVER
S6140-61600-001	OH	TAIL ROTOR CONTROLS
S6140-61601-001	OH	SUPPORTS
S6140-61607-000	OH	PEDAL CONTROL ASSY
S6140-61610-000	OH	BELLCRANK, YAW
S6140-61610-000	OH	BELLCRANK, YAW
S6140-61610-000	OH	BELLCRANK, YAW
S6140-61610-002	OH	BELLCRANK
S6140-61610-003	OH	LEVER
S6140-61611-000	OH	BELLCRANK SUPPORT
S6140-61611-000	OH	BELLCRANK SUPPORT
S6140-61613-001	OH	BELLCRANK ASSY
S6140-61613-001	OH	BELLCRANK ASSY
S6140-61613-001	OH	BELLCRANK ASSY
S6140-61613-002	OH	BELLCRANK ASSY
S6140-61613-002	OH	BELLCRANK ASSY
S6140-61613-003	OH	HOUSING
S6140-61613-004	OH	HOUSING
S6140-61614-000	OH	ARM,PEDAL
S6140-61614-000	OH	ARM,PEDAL
S6140-61614-001	OH	ARM ASSY
S6140-61614-005	OH	ARM ASSY
S6140-61615-000	OH	ARM ASSY
S6140-61615-001	OH	ARM, PEDAL, ADJ
S6140-61615-001	OH	ARM, PEDAL, ADJ
S6140-61615-002	OH	ARM,PEDAL,ADJ
S6140-61615-002	OH	ARM,PEDAL,ADJ
S6140-61615-004	OH	ARM
S6140-61615-009	OH	ARM
S6140-61616-000	OH	FITTING
S6140-61617-001	OH	SUPPORT ASSY
S6140-61618-000	OH	HOUSING, SPRING
S6140-61621-000	OH	FLANGE ASSY
S6140-61621-001	OH	FLANGE
S6140-61621-001	OH	FLANGE
S6140-61621-001	OH	FLANGE
S6140-61624-000	OH	HOUSING, SPRING
S6140-61624-003	OH	HOUSING ASSY



S6140-61627-003	OH	ARM ASSY L/H
S6140-61627-003	AR	ARM ASSY L/H
S6140-61627-003	OH	ARM ASSY L/H
S6140-61628-000	OH	PEDAL ASSY
S6140-61628-000	OH	PEDAL ASSY
S6140-61628-001	OH	PEDAL ASSY
S6140-61629-000	OH	ARM ASSY, BRAKE
S6140-61629-001	OH	ARM, BRAKE
S6140-61629-001	OH	ARM, BRAKE
S6140-61638-002	OH	LINK ASSY
S6140-62102-000	OH	MIXING INSTALLATION
S6140-62102-000	OH	MIXING INSTALLATION
S6140-62102-000	OH	MIXING INSTALLATION
S6140-62103-001	OH	MIXER ASSY
S6140-62105-000	OH	SUPPORT ASSY
S6140-62105-000	OH	SUPPORT ASSY
S6140-62105-007	OH	SUPPORT ASSY
S6140-62112-000	OH	IDLER ASSY
S6140-62112-001	OH	IDLER ASSY
S6140-62112-005	OH	IDLER ASSY
S6140-62113-000	OH	SUPPORT ASSY, RH LAT
S6140-62113-001	OH	SUPPORT
S6140-62113-001	AR	SUPPORT
S6140-62113-005	OH	SUPPORT ASSY
S6140-62113-005	OH	SUPPORT ASSY
S6140-62115-004	OH	SHAFT ASSY
S6140-62115-005	OH	IDLER ASSY
S6140-62115-005	OH	IDLER ASSY
S6140-62116-000	OH	SUPPORT
S6140-62116-001	OH	SUPPORT
S6140-62116-008	OH	SUPPORT ASSY
S6140-62116-008	OH	SUPPORT ASSY
S6140-62118-000	OH	SHAFT ASSY
S6140-62118-001	OH	BELLCRANK
S6140-62118-001	OH	BELLCRANK
S6140-62118-004	OH	TORQUE SHAFT
S6140-62118-005	OH	SHAFT ASSY
S6140-62118-005	OH	SHAFT ASSY
S6140-62120-000	OH	SUPPORT, BELLCRANK
S6140-62121-000	OH	BELLCRANK ASSY
S6140-62121-005	OH	BELLCRANK ASSEMBLY
S6140-62121-005	OH	BELLCRANK ASSEMBLY
S6140-62122-000	NS	BELLCRANK
S6140-62122-000	NS	BELLCRANK
S6140-62123-001	OH	BELLCRANK
S6140-62124-004	OH	BELLCRANK
S6140-62124-005	OH	BELLCRANK

S6140-62125-007	OH	ARM ASSY
S6140-62126-001	OH	LEVER
S6140-62127-005	OH	ARM ASSY
S6140-62127-008	OH	MIXER
S6140-62128-000	OH	BELLCRANK ASSY
S6140-62128-000	AR	BELLCRANK ASSY
S6140-62128-003	OH	BELLCRANK ASSY
S6140-62128-003	OH	BELLCRANK ASSY
S6140-62129-000	OH	BELLCRANK PITCH
S6140-62129-001	OH	BELLCRANK ASSY
S6140-62129-004	OH	BELLCRANK
S6140-62129-004	OH	BELLCRANK
S6140-62129-004	OH	BELLCRANK
S6140-62129-005	OH	BELLCRANK,FORE-AFT
S6140-62129-005	OH	BELLCRANK,FORE-AFT
S6140-62129-005	OH	BELLCRANK,FORE-AFT
S6140-62129-005	OH	BELLCRANK,FORE-AFT
S6140-62131-000	OH	IDLER ASSY
S6140-62131-000	OH	IDLER ASSY
S6140-62131-001	OH	IDLER
S6140-62131-005	OH	IDLER ASSY
S6140-62131-005	OH	IDLER ASSY
S6140-62132-000	OH	BELLCRANK
S6140-62132-000	OH	BELLCRANK
S6140-62132-005	OH	BELLCRANK MIXER
S6140-62132-005	OH	BELLCRANK MIXER
S6140-62133-017	OH	ROD ASSY
S6140-62133-017	OH	ROD ASSY
S6140-62133-021	OH	ROD ASSY
S6140-62133-021	OH	ROD ASSY
S6140-62133-021	OH	ROD ASSY
S6140-62133-021	OH	ROD ASSY
S6140-62133-022	OH	ROD ASSY
S6140-62133-022	OH	ROD ASSY
S6140-62133-023	OH	ROD ASSY
S6140-62133-023	OH	ROD ASSY
S6140-62133-025	OH	ROD ASSY
S6140-62133-025	OH	ROD ASSY
S6140-62133-025	OH	ROD ASSY
S6140-62133-025	OH	ROD ASSY
S6140-62133-026	OH	CONTROL ROD
S6140-62133-027	OH	CONTROL ROD
S6140-62133-030	NS	TUBE ASSY
S6140-62134-011	OH	CONTROL ROD
S6140-62134-012	OH	TUBE ASSY
S6140-62134-012	NS	TUBE ASSY
S6140-62136-000	OH	SUPPORT ASSY

S6140-62136-004	OH	SUPPORT, RH
S6140-62136-005	NS	SUPPORT ASSY
S6140-62137-001	OH	LINK ASSY
S6140-62137-002	OH	LINE ASSY
S6140-62137-003	OH	LINK
S6140-62137-004	OH	LINK
S6140-62138-000	OH	LINK, MIXER UNIT
S6140-62138-000	NS	LINK, MIXER UNIT
S6140-62138-000	NS	LINK, MIXER UNIT
S6140-62139-000	OH	PLATE ASSY
S6140-62139-001	OH	SUPPORT
S6140-62139-002	OH	SUPPORT
S6140-62139-003	OH	SUPPORT
S6140-62139-012	OH	SUPPORT ASSY
S6140-62140-000	NE	SHAFT
S6140-62141-000	NS	ADAPTER
S6140-62141-011	OH	TUBE ASSY
S6140-62142-000	OH	ROD ASSY
S6140-62144-000	NS	SHAFT ASSY
S6140-62144-005	NS	SHAFT ASSY
S6140-62144-005	SV	SHAFT ASSY
S6140-62144-005	OH	SHAFT ASSY
S6140-62145-004	OH	BELLCRANK SUPPORT
S6140-62145-009	OH	SUPPORT ASSY
S6140-62145-009	OH	SUPPORT ASSY
S6140-62145-009	OH	SUPPORT ASSY
S6140-62147-000	NE	SHIM
S6140-62503-001	AR	IDLER & SUPPORT INST
S6140-62504-001	OH	TUBE ASSY
S6140-62504-001	OH	TUBE ASSY
S6140-62504-001	OH	TUBE ASSY
S6140-62504-002	OH	ROD ASSY
S6140-62504-003	NE	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-003	OH	ROD ASSY
S6140-62504-004	OH	ROD ASSY
S6140-62504-004	OH	ROD ASSY
S6140-62504-006	OH	ROD ASSY
S6140-62504-006	OH	ROD ASSY
S6140-62504-007	OH	ROD ASSY
S6140-62504-007	OH	ROD ASSY
S6140-62504-007	OH	ROD ASSY

S6140-62504-502	OH	CONTROL ROD ASSY
S6140-62505-001	OH	ROD ASSY
S6140-62505-001	OH	ROD ASSY
S6140-62505-001	OH	ROD ASSY
S6140-62505-002	OH	ROD ASSY
S6140-62505-002	OH	ROD ASSY
S6140-62505-002	OH	ROD ASSY
S6140-62516-006	OH	CLAMP BOOT
S6140-62602-000	OH	BELLCRANK ASSY
S6140-62602-000	OH	BELLCRANK ASSY
S6140-62602-005	OH	BELLCRANK ASSY
S6140-62602-005	OH	BELLCRANK ASSY
S6140-62602-005	OH	BELLCRANK ASSY
S6140-62604-000	OH	QUADRANT ASSY
S6140-62604-003	OH	QUADRANT
S6140-62604-004	AR	QUADRANT
S6140-62616-000	NS	YOKE
S6140-62616-008	OH	YOKE ASSY
S6140-62616-008	NS	YOKE ASSY
S6140-62619-000	OH	ROD ASSY
S6140-62619-000	OH	ROD ASSY
S6140-62619-000	NE	ROD ASSY
S6140-62619-001	NS	ADAPTER, CONTROL MIXER
S6140-62620-000	OH	BELLCRANK ASSY
S6140-62620-000	OH	BELLCRANK ASSY
S6140-65602-001	OH	QUADRANT
S6140-65602-005	NE	QUADRANT ASSY
S6140-65602-005	NE	QUADRANT ASSY
S6140-65602-005	NE	QUADRANT ASSY
S6140-65603-000	OH	SUPPORT ASSY
S6140-66103-004	OH	SUPPORT ASSY
S6140-66104-001	OH	SUPPORT ASSY
S6140-66105-001	OH	SUPPORT ASSY
S6140-66107-004	OH	IDLER ASSY
S6140-66604-020	OH	CYLINDER ASSY
S6140-66604-020	OH	CYLINDER ASSY
S6140-66605-000	NS	SPRING
S6140-66608-006	OH	BELLCRANK
S6140-86618-000	OH	HOUSING, SPRING
S6142-61101-001	OH	CYCLIC STICK ASSY
S6142-61402-004	OH	COLL STICK ASSY
S6142-61402-006	OH	STICK ASSY
S6142-61403-003	OH	COLL STICK ASSY
S6142-66604-016	OH	GRADIANT
S6142-66604-016	OH	GRADIANT
S6142-66607-002	OH	QUADRANT
S6142-66608-003	OH	BELL CRANK

S6145-61044-001	OH	INDICATOR TORQUE
S6145-61044-001	OH	INDICATOR TORQUE
S6145-61159-101	NS	INDICATOR, L/G
S6145-61246-001	OH	FUEL QTY IND.
S6145-61390-001	OH	INDICATOR, FUEL QTY
S6145-61390-001	OH	INDICATOR, FUEL QTY
S6145-61409-001	OH	SWITCH PANEL
S6145-61430-002	OH	INDICATOR, FUEL QTY
S6145-61430-002	OH	INDICATOR, FUEL QTY
S6145-61431-001	OH	FUEL QUANTITY IND
S6145-61432-001	OH	FUEL QUANTITY IND
S6145-61432-001	OH	FUEL QUANTITY IND
S6145-61445-001	OH	RATE OF CLIMB
S6145-62016-019	OH	CLAMP ASSY
S6145-62023-017	OH	PITOT MAST
S6145-62024-003	OH	PITOT TUBE ASSY
S6145-62024-003	SV	PITOT TUBE ASSY
S6147-61050-002	OH	DUAL AUTOSYN IND
S6147-61053-101	OH	IND. ATTITUDE
S6147-61079-101	OH	TRANSMITTER, PRESS
S6150-26244-081	SV	DUCT
S6150-60103-014	OH	ASSY TUBE
S6150-60104-019	OH	ASSY TUBE
S6150-60106-031	SV	TUBE ASSY
S6150-60126-001	NS	TUBE
S6150-61722-000	OH	SUPPORT, HOIST
S6150-62066-001	SV	DUCT
S6150-62084-041	SV	DAMPER ASSY
S6150-62376-001	OH	SUPPORT ASSY, HOIST
S6150-62447-003	NE	EXHAUST ASSY
S6150-62458-007	NE	TUBE ASSY
S6150-62470-002	SV	TUBE ASSY
S6150-62475-001	AR	ADAPTER ASSY
S6150-62477-003	OH	EXHAUST
S6150-62477-016	OH	CLAMP
S6150-62477-019	NE	SHROUD ASSY
S6150-62477-042	OH	SHROUD ASSY
S6150-62479-001	OH	CONNECTOR
S6150-62481-001	OH	SWITCH
S6150-62634-081	OH	TUBE ASSY
S6150-62634-082	OH	TUBE ASSY
S6150-62634-083	OH	TUBE ASSY
S6150-62634-108	SV	SLEEVE
S6150-62634-121	OH	DUCT ASSY
S6150-62635-112	OH	DUCT
S6150-62636-127	NS	SLEEVE
S6150-62644-081	OH	DUCT

S6150-62644-084	OH	DUCT ASSY
S6150-62644-109	SV	DUCT
S6150-62684-041	NS	DAMPER ASSY
S6150-62697-011	NE	DUCT, EXHAUST
S6150-62905-101	SV	SEAT ASSY
S6150-65001-002	OH	DUCT
S6150-65003-001	OH	EXHAUST DUCT
S6150-65007-015	NE	TUBE ASSY
S6150-65007-019	NE	TUBE ASSY
S6150-65007-023	NE	TUBE ASSY
S6150-65007-027	NE	TUBE ASSY
S6150-65008-014	OH	DUCT/FILTER
S6152-61102-001	OH	TRACK ASSY
S6152-61102-020	OH	TRACK SEAT
S6152-62401-001	OH	ADAPTER ASSY
S6152-62401-001	OH	ADAPTER ASSY
S6152-62453-013	OH	DUCT ASSY
S6152-62455-044	OH	COVER (S-61)
S6152-63001-016	OH	TUBE ASSY
S6155-20016-002	NE	CLIP
S6155-61198-102	OH	FREQUENCY SENSOR
S6155-61198-102	OH	FREQUENCY SENSOR
S6155-61198-102	OH	FREQUENCY SENSOR
S6155-61198-102	OH	FREQUENCY SENSOR
S6155-61534-007	OH	PANEL, C OVERHEAD CONSOLE
S6155-61544-000	NS	SHELF ASSY
S6155-61545-000	OH	ROD ASSY
S6155-61560-025	OH	WARNING PNL ASSY
S6155-61560-025	OH	WARNING PNL ASSY
S6155-61562-001	OH	WARNING PNL ASSY
S6155-61579-001	OH	PANEL, CAUTION
S6155-61584-002	OH	CARGO SLING CONTROL
S6155-6303-003	SV	BUS BAR
S6155-63093-018	NE	CABLE ASSY
S6155-63093-041	NE	HARNESS ASSY.
S6155-63104-002	SV	SWITCH LANDING GEAR
S6155-63121-021	OH	SHELF ASSY, BATTERY
S6155-63123-009	AR	SHELF ASSY
S6155-63132-001	OH	LIGHT INST. L/H
S6155-80107-001	OH	CABLE, FIRE SENSING
S6155-80124-001	SV	CABLE, FIRE SENSING
S6155-80124-002	SV	CABLE, FIRE SENSE
S6156-61550-002	OH	PANEL, CONTROL LG
S6156-61550-002	OH	PANEL, CONTROL LG
S6156-61550-002	OH	PANEL, CONTROL LG
S6157-61561-002	OH	COCKPIT CAUTION PNL
S6157-61563-001	OH	BATTERY BUS PNL

S6157-61566-003	OH	FUEL MGMT PNL
S6157-61571-002	OH	APU CONTROL PANEL
S6157-61571-002	OH	APU CONTROL PANEL
S6157-61574-001	OH	RAMP CONTROL PANEL
S6157-61575-001	OH	CONTROL PANEL
S6157-62268-010	OH	PILOTS CB PNL
S6157-62268-015	OH	CO-PILOTS CB PNL
S6157-62401-001	OH	CREW RAMP CONT
S6157-62504-004	OH	LIGHTED PANEL
S6157-62561-103	OH	PANEL
S6160-60073-001	OH	ANTENNA MAST
S6160-60073-001	OH	ANTENNA MAST
S6160-63003-005	OH	TUBE
S6162-60683-001	OH	ANTENNA
S6162-60683-012	NE	ANTENNA
S6162-60683-505	OH	ANTENNA ASSY
S6162-60872-101	OH	DOME, RADAR
S6162-63630-001	OH	RELAY BOX
S6165-20215-000	OH	BEARING
S6165-20218-000	OH	VALVE & SLEEVE/BYPASS
S6165-20239-000	OH	RETAINER
S6165-20245-000	OH	NUT
S6165-20246-000	OH	SLEEVE
S6165-20247-000	OH	RETAINER
S6165-20257-000	SV	KEY
S6165-20257-000	OH	KEY
S6165-20260-153	OH	SERVO CYLINDER
S6165-20260-153	OH	SERVO CYLINDER
S6165-20260-153	OH	SERVO CYLINDER
S6165-20260-154	OH	SERVOCYLINDER
S6165-20260-154	OH	SERVOCYLINDER
S6165-20260-167	OH	SERVO CYLINDER
S6165-20260-167	OH	SERVO CYLINDER
S6165-20260-167	OH	SERVO CYLINDER
S6165-20539-002	SV	FITTING, HYDRAULIC
S6165-20570-041	NE	VALVE ASSY
S6165-20575-000	OH	COVER-DAMPER
S6165-61300-000	OH	MASTER CYLINDER
S6165-61500-058	OH	AUX SERVO
S6165-61500-058	OH	AUX SERVO
S6165-61500-061	OH	AUX SERVO ASSY
S6165-61500-061	OH	AUX SERVO ASSY
S6165-61500-061	OH	AUX SERVO ASSY
S6165-61500-061	OH	AUX SERVO ASSY
S6165-61500-061	OH	AUX SERVO ASSY
S6165-61500-061	OH	AUX SERVO ASSY
S6165-61501-000	OH	HOUSING ASSY
S6165-61506-002	OH	FITTING

S6165-61509-000	OH	PISTON
S6165-61510-000	OH	ADAPTER
S6165-61515-000	OH	CAP
S6165-61519-003	OH	CYLINDER
S6165-61521-004	OH	HOUSING
S6165-61523-103	OH	VALVE
S6165-61523-104	OH	VALVE
S6165-61532-000	OH	SLEEVE
S6165-61549-000	OH	PISTON
S6165-61551-002	OH	VALVE
S6165-61592-000	OH	HOUSING
S6165-61596-002	OH	YOKE
S6165-61601-000	OH	CLEVIS ASSY
S6165-61606-001	OH	HOUSING
S6165-61608-000	OH	PLUG
S6165-61613-001	OH	LINK
S6165-61620-003	OH	LINK
S6165-61623-000	SV	CONNECTOR
S6165-61624-000	OH	STUB
S6165-62063-000	OH	VALVE INSTALLATION
S6165-62085-155	SV	TUBE ASSY
S6165-62110-001	OH	UTILITY TANK
S6165-62131-000	OH	IDLER ASSEMBLY
S6165-62320-000	OH	TANK ASSY
S6165-62320-000	OH	TANK ASSY
S6165-62320-001	OH	TANK ASSY
S6165-62322-000	OH	HOUSING, LOWER
S6165-62322-000	OH	HOUSING, LOWER
S6165-62322-000	OH	HOUSING, LOWER
S6165-62323-000	OH	HOUSING, UPPER
S6165-62323-000	OH	HOUSING, UPPER
S6165-62415-005	OH	PAN
S6165-63101-000	OH	HYDRAULIC CYLINDER
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-007	OH	CYLINDER, RETRACT
S6165-63101-008	OH	CYLINDER, RETRACT
S6165-63101-008	AR	CYLINDER, RETRACT
S6165-63101-008	OH	CYLINDER, RETRACT
S6165-63101-008	OH	CYLINDER, RETRACT



S6165-63101-008	OH	CYLINDER, RETRACT
S6165-63101-009	OH	CYLINDER ASSY
S6165-63101-010	OH	HYDRAULIC CYLINDER
S6165-63107-000	OH	LOCK
S6165-63114-000	OH	NUT
S6165-63151-041	OH	UP LOCK CYL.
S6165-63151-041	OH	UP LOCK CYL.
S6165-63151-041	OH	UP LOCK CYL.
S6165-63151-041	OH	UP LOCK CYL.
S6165-63151-041	NE	UP LOCK CYL.
S6165-63527-001	OH	S6165-63527-1
S6165-63551-003	OH	TRIM VALVE
S6165-63551-003	OH	TRIM VALVE
S6165-63552-211	OH	VALVE, SERVO
S6165-63552-215	OH	VALVE, SERVO
S6165-63552-215	OH	VALVE, SERVO
S6165-63552-216	OH	VALVE, SERVO
S6165-63552-216	OH	VALVE, SERVO
S6165-63552-222	OH	VALVE, SERVO
S6165-63552-222	OH	VALVE, SERVO
S6165-63552-222	OH	VALVE, SERVO
S6165-63552-223	OH	VALVE, SERVO
S6165-63552-226	OH	VALVE, SERVO
S6165-63552-251	OH	VALVE, SERVO
S6165-63552-277	OH	VALVE, SERVO
S6165-63556-001	OH	SOLENOID VALVE
S6165-63557-002	OH	VALVE ASSY
S6165-63557-002	OH	VALVE ASSY
S6165-63559-000	OH	HYD FILTER
S6165-63559-000	OH	HYD FILTER
S6165-63560-000	OH	VALVE
S6165-63560-000	OH	VALVE
S6165-63560-000	OH	VALVE
S6165-63575-000	OH	MASTER BRAKE CYL
S6165-63575-000	OH	MASTER BRAKE CYL
S6165-63575-001	OH	BRAKE, MASTER CYL
S6167-02610-001	OH	HYD TANK ASSY
S6167-62611-002	OH	TANK ASSY HYD
S6167-63030-001	OH	CYLINDER, HYDRAULIC
S6167-63030-001	OH	CYLINDER, HYDRAULIC
S6167-63030-001	OH	CYLINDER, HYDRAULIC
S6167-63603-001	OH	SOLENOID
S6167-63603-001	AR	SOLENOID
S6167-64231-002	OH	HYD CYLINDER
S6170-20004-002	SV	DEPTH GAGE BLOCK
S6170-25001-000	SV	WRENCH ASSY
S6170-50106-001	OH	INTAKE SHIELD

S6170-50107-001	NE	EXHAUST SHIELD
S6170-65019-000	SV	WRENCH ASSY
S6170-65020-000	SV	WRENCH ASSY
S6170-65020-000	SV	WRENCH ASSY
S6170-70157-001	NS	LOCKING TOOL, T/R
S6170-70157-001	NS	LOCKING TOOL, T/R
S6180-63041-007	NE	FITTING
S6180-63051-010	NE	FITTING ASSY
S6180-63074-001	OH	FITTING, SPONSON
S6180-63074-002	OH	FITTING, SPONSON
S6180-63156-003	OH	JACKPAD FITTING
S6180-71000-005	OH	SPONSON ASSY, LH
S6180-71000-005	OH	SPONSON ASSY, LH
S6180-71000-005	OH	SPONSON ASSY, LH
S6180-71000-005	OH	SPONSON ASSY, LH
S6180-71000-006	OH	SPONSON ASSY, RH
S6180-71000-006	OH	SPONSON ASSY, RH
S6180-71000-006	OH	SPONSON ASSY, RH
S6180-71000-006	OH	SPONSON ASSY, RH
S6180-71000-006	OH	SPONSON ASSY, RH
S6180-71000-006	OH	SPONSON ASSY, RH
S6182-80135-005	OH	FITTING
S6182-80135-006	OH	FITTING
S6182-80136-001	OH	FITTING
S6182-80136-002	OH	FITTING UP LOCK CYL
S6188-20032-037	NE	WINDOW
S6188-20032-037	OH	WINDOW
S6188-20032-050	SV	WINDOW
S6188-20036-002	OH	STIFFENER
S6188-20036-003	OH	STIFFENER
S6188-20037-002	NS	TUBE ASSY
S6188-20037-004	NS	TUBE ASSY
S6188-20037-017	NE	FITTINGS
S6188-20037-017	OH	FITTINGS
S6188-20037-020	OH	TELESCOPIC TUBE ASSY AFT
S6188-20037-020	OH	TELESCOPIC TUBE ASSY AFT
S6188-20037-020	OH	TELESCOPIC TUBE ASSY AFT
S6188-20037-020	AR	TELESCOPIC TUBE ASSY AFT
S6188-20037-020	OH	TELESCOPIC TUBE ASSY AFT
S6188-20037-022	OH	TUBE ASSY, FOLDING
S6188-20037-022	OH	TUBE ASSY, FOLDING
S6188-20037-022	OH	TUBE ASSY, FOLDING
S6188-20065-007	OH	WINDOW CHANNEL, LH
S6188-20065-010	SV	WINDOW ASSY, SLIDING LH
S6188-20065-010	OH	WINDOW ASSY, SLIDING LH
S6188-20065-010	OH	WINDOW ASSY, SLIDING LH
S6188-20065-010	NS	WINDOW ASSY, SLIDING LH
S6188-20065-010	OH	WINDOW ASSY, SLIDING LH

S6188-20065-010	SV	WINDOW ASSY, SLIDING LH
S6188-20065-011	SV	WINDOW ASSY, SLIDING RH
S6188-20065-011	SV	WINDOW ASSY, SLIDING RH
S6188-20065-011	NS	WINDOW ASSY, SLIDING RH
S6188-20065-011	OH	WINDOW ASSY, SLIDING RH
S6188-20222-130	NE	ROD
S6188-45104-002	OH	PANEL, EDGE LIT
S6188-55116-509	SV	CONTROL PANEL
S6188-55183-041	OH	CONTROLLER ASSY
S6188-55183-043	OH	CONTROLLER, ANTI-ICE
S6188-55183-043	OH	CONTROLLER, ANTI-ICE
S6188-55183-043	OH	CONTROLLER, ANTI-ICE
S6190-60030-000	OH	SYNCRO ASSY
S6190-60031-001	SV	LINEAR TRANSFORMER
S6190-60045-004	OH	CHANNEL MONITOR
S6190-60045-005	OH	CHANNEL MONITOR
S6190-60045-005	OH	CHANNEL MONITOR
S6190-60060-004	OH	PANEL, AFCS CONTROL
S6190-60060-041	OH	CONTROL PANEL
S6190-61360-000	AR	INST COUPLER ASSY
S6190-62002-002	OH	HOVER TRIM
S6191-60021-002	OH	CHANNEL MONITOR, CONTROL PANEL
S6191-60021-002	OH	CHANNEL MONITOR, CONTROL PANEL
S6192-61002-041	OH	YAW RATE AMPL
S6192-61021-002	OH	A.S.E. AMPLIFIER
S6192-61025-001	OH	AFCS CONTROL PANEL
S6192-61040-001	OH	CHANNEL MONITOR
S6192-61090-001	OH	AMPLIFIER, LAG
S6192-61090-001	OH	AMPLIFIER, LAG
S6192-61090-001	OH	AMPLIFIER, LAG
S6192-61090-002	OH	AMP, CHANNEL LAG
S6192-61090-002	OH	AMP, CHANNEL LAG
S6192-61155-001	OH	PANEL ASSY
S6192-612351-000	OH	WINCH DELAY UNIT
S6192-61250-001	OH	AFCS CONTROL PANEL
S6192-61415-001	OH	NULL UNIT ASSY
S6192-61415-001	OH	NULL UNIT ASSY
S6195-25010-005	NS	BEARING, INNER RING
S6220-63112-069	OH	FLOOR PANEL
S6225-55010-002	OH	BOTTLE, FLOAT
S6230-62044-045	NS	CABLE ASSY
S6230-62044-047	NE	CABLE ASSY
S6230-62044-047	NE	CABLE ASSY
S6230-62135-002	OH	SHUT OFF VALVE
S6230-62135-002	OH	SHUT OFF VALVE
S6230-63010-000	AR	VALVE, DEFUELING
S6230-63010-000	NE	VALVE, DEFUELING

S6230-63010-000	NE	VALVE, DEFUELING
S6230-63010-000	OH	VALVE, DEFUELING
S6230-63010-000	OH	VALVE, DEFUELING
S6230-63010-000	OH	VALVE, DEFUELING
S6230-80215-002	OH	OIL TANK
S6230-80215-006	OH	TANK ASSY, OIL
S6230-80215-006	OH	TANK ASSY, OIL
S6230-80215-006	OH	TANK ASSY, OIL
S6230-80215-006	OH	TANK ASSY, OIL
S6230-80216-000	OH	SLEEVE INDICATOR
S6230-80402-001	NS	BUSHING
S6240-61292-008	OH	TUBE ASSY
S6240-61292-008	AR	TUBE ASSY
S6240-61292-022	OH	ROD ASSY
S6240-61292-022	OH	ROD ASSY
S6240-61292-022	OH	ROD ASSY
S6240-61292-022	OH	ROD ASSY
S6240-61292-022	OH	ROD ASSY
S6240-61292-022	OH	ROD ASSY
S6240-61292-022	OH	ROD ASSY
S6265-62562-000	OH	CYLINDER ASSY
S6265-62562-000	OH	CYLINDER ASSY
S6265-62563-000	AR	ADAPTER
S6430-62014-012	OH	PUMP ASSY
S6435-60205-101	OH	WASHER
S6440-61410-013J	OH	STICK ARM
S6465-62121-101	OH	GUIDE SPRING
S6485-64416-102	OH	SUPPORT
S65-8282-301	OH	SAT COM ANTENNA
S67-1575-863	OH	ANTENNA GPS
S7060-13014-011	OH	VHF ANTENNA
S76-13-6005-001	OH	COMPASS CONTROLLER
S7658-5301-1A	SV	BRACKET
S76-58-5301-5A	NE	STAND OFF BRACKET
S76-COCKPIT	AR	COCKPIT SECTION
S-9212EC-8	NE	HOSE ASSEMBLY
SADF14/28	OH	STROBE LIGHT BEACON
SB1114-4J	NS	BEARING
SB1138-101B57137	NS	BEARING, BA
SB1357-103	NE	BEARING
SB1357-103	NS	BEARING
SB1357-103	NS	BEARING
SB1357-103	NS	BEARING
SB1562-101	OH	BEARING, DUPLEX
SB1562-101	OH	BEARING, DUPLEX
SB1562-SEAL	AR	SEAL
SB3167-101	OH	BEARING CONE
SB3202A2	OH	CONE BEARING
SB3202A2	OH	CONE BEARING
SB3219-101	OH	BEARING CONE

SB3264-102	OH	BEARING, CONE
SB3264-202	OH	BEARING, CUP
SB3307A1	OH	BEARNING/CONE
SB3307B1	OH	BEARNING/CUP
SB3310B-1	NE	BEARING CUP
SB3318-101	OH	BEARING, CONE
SB3318-201	OH	BEARING, CUP
SB3400A1	NS	BEARING
SB5005-1	OH	BEARING
SB5080-101	NE	BEARING
SB5103-12	NS	BEARING
SB5103-20	NS	BEARING
SB5103-20	NS	BEARING
SB5103-21	NS	BEARING
SB5103-21	NE	BEARING
SB5103-21	NS	BEARING
SB5206-102	NE	BEARING
SB5206-104	NE	BEARING, INNER RACE
SB5303-103	NE	BEARING
SB7002-046	OH	BEARING ASSY
SB7003-102	OH	BEARING
SB7003-102	OH	BEARING
SB7003-102	OH	BEARING
SB7003-102	OH	BEARING
SB7004-103	SV	BEARING
SB7004-103	SV	BEARING
SB7004-103	SV	BEARING
SB7004-103	SV	BEARING
SBSH10ATC22ZM	NE	BEARING
SC386	SV	PUMP
SE-16-300	OH	INVERTER
SELO19EL-1	OH	INDICATOR, T5
SELOC19EL	OH	INDICATOR, T5
SELOC19EL-1	OH	INDICATOR, T5
SERVICE	NE	SERVICE CHARGE
SERVICE	OH	SERVICE CHARGE
SF14LU-7	OH	PUMP
SF802	OH	STRAINER
SF91-7	OH	NUT
SFR41PPW/MIL-G-23827	NE	BEARING
SFR7-K13	OH	BEARING
SGT2205	OH	PLATE
SGT520-5	OH	DAMPER ASSY
SH7535SW	OH	AUX GENERATOR SYSTEM
SH7536SW	OH	ECU SYSTEM
SH7536SW	OH	ECU SYSTEM
SIKORSKY S-61	AR	HELICOPTER INVENTORY

SIKORSKY S-61	AR	HELICOPTER INVENTORY
SIKORSKY S-61	SV	HELICOPTER INVENTORY
SIKORSKY S-76A	AR	INVENTORY
SIKORSKY S-76A++	AR	AIRFRAME
SIKORSKY S-76B	AR	AIRFRAME
SIKORSKY S-76B	AR	AIRFRAME
SIKORSKY S-76C	AR	AIRFRAME
SIKORSKY S-76C	AR	AIRFRAME
SIKORSKY S-76C PARTS	OH	INVENTORY
SIKORSKY S-76C PARTS	OH	INVENTORY
SK-016/017/0	NE	COVERS
SK332-086	SV	BUBBLE DOOR R/H
SK3848	NE	DIODE
SK676-2	NE	CONTROL, PUSH PULL SPEED
SL19036S6ALO-500	NS	PIN, QUICK RELEASE
SL300A	NS	SPARK PLUG
SL300A	NS	SPARK PLUG
SL635-000	OH	FLANGES
SL635-000	OH	FLANGES
SLN7080-8F-LH	NE	NUT
SM15AWD1	SV	RELAY
SM600BA-10N1	OH	CIRCUIT BREAKER
SM600BA-10N1	OH	CIRCUIT BREAKER
SM600BA-25N1	OH	CIRCUIT BREAKER
SM600BA-35N1	OH	CIRCUIT BREAKER
SM600BA-5N1	OH	CIRCUIT BREAKER
SM600BA-5N1	OH	CIRCUIT BREAKER
SMB731046	OH	RECEIVER
SM-V-726670	SV	TRANSCEIVER
SP1181-1	OH	TRUNNION
SP-1183-1L	OH	SPRING-PIVOT
SP1471-1	NE	GASKET
SP1471-1	NE	GASKET
SP1544-1	OH	Spacer
SP-1609-1	OH	TRUNNION
SP-1706-1	OH	SPACER
SP-1716-2	OH	STOP
SP-1717-1	OH	ACTUATOR
SP-2545-4	OH	SPRING-RETURN
SP2546-1R	OH	PLATE, PIVOT, REEL
SP2642-14	NE	BOLT
SP-2642-4	OH	BOLT
SP-2642-5	OH	BOLT
SP28052-1	SV	LATCH
SP28120	SV	A.P.U. REGULATOR
SP2965-1	OH	SOLENOID, RETAINER
SP-2972-1	SV	COVER, RELEASE

SP2974-1	NE	RELEASE ARM
SP-2974-1	OH	RELEASE ARM
SP2978-1	OH	LATCH & LEVER
SP-2981-1	OH	LATCH AND LEVER ASSY
SP-2982-1	OH	RETAINER
SP3183-1	OH	CASE & COVER ASSY
SP3185-1	OH	CARGO RELEASE
SP3285-1	OH	LOAD BEAM
SP3291-1	OH	LATCH, RELEASE
SP3419-1	NE	LATCH
SP3420-1	NS	COVER, ELECTRICAL
SP3473-1	OH	Keeper Load Beam
SP3490-1	OH	Latch Load Beam
SP3493-1	OH	KEEPER
SP3494-1	OH	LOAD BEAM
SP-3494-1	OH	LOAD BEAM
SP-3551-1	OH	SOLENOID COVER
SP-3552-1	SV	SOLENOID
SP-3552-1	SV	SOLENOID
SP3553-1	SV	COVER, SOLENOID
SP-397	OH	PLUNGER
SP-406	OH	SPRING
SP-4159	NE	COVER ASSY
SP4220-2	OH	CARGO HOOK
SP4220-2	AR	CARGO HOOK
SP4232-31	OH	CARGO HOOK
SP4232-4	OH	CARGO HOOK
SP4232-5	OH	CARGO HOOK
SP4232-5	OH	CARGO HOOK
SP-4246-15	NS	HOOK ASSY
SP4369-2	OH	BEAM, LOAD
SP4418-2	OH	FILLER HOUSING
SP4419-1	OH	PLATE,FRONT HOUSING
SP4420-2	OH	PLATE REAR HOUSING
SP-4423-1	OH	CASE ASSY
SP4423-10-1	OH	CASE, CARGO RELEASE
SP4424-1	NE	COVER ASSY
SP-4424-1	OH	COVER ASSY
SP4424-10-1	SV	CASE SET
SP458-00	NE	PIN
SP-513	OH	BUMPER LATCH
SP-530	OH	BUMPER
SP7086-1	OH	HOOK, CARGO 10,000 LB
SP7086-1	OH	HOOK, CARGO 10,000 LB
SP7102-1	OH	CARGO HOOK
SP7108-3	OH	CARGO HOOK
SP7109-12	OH	CARGO HOOK

SP7109-41	OH	CARGO HOOK
SP7109-62	NS	CARGO HOOK
SP7109-62	OH	CARGO HOOK
SP-7110-1	OH	CARGO HOOK
SPC-75	OH	INVERTER
SQ0051M10A2	NS	VALVE
SR-150-A	OH	INDICATOR, PRESSURE
SR-150-B	OH	INDICATOR, PRESSURE
SR-151-B	OH	INDICATOR, PRESSURE
SR15A	OH	BEARING
SR20	OH	BEARING
SR3TD	SV	SWITCH
SRW374L	NE	INSERT
SS1058A7-20-10	NE	RADIUS BLOCK
SS1058A9-32-17	OH	SPACER PLATE
SS1090-04	NE	BRACKET
SS10CT6C216000	AR	HOSE
SS27576-5-29	NE	BOLT
SS27576-5-43	NE	BOLT
SS27576-5-45	NE	BOLT
SS27576-5-51	NE	BOLT
SS30DN15F706000	OH	HOSE ASSY
SS3999-2	NS	PLUG
SS3999-5	NS	PLUG
SS4017-8	NE	JET
SS4045-5P30	NS	BUSHING
SS4059-15-122	NS	SPACER
SS420-BU1564	NE	CAP NUT
SS4409-009	NE	WASHER
SS4409-012	NE	WASHER
SS4409-013	NS	WASHER
SS4409-040	NE	WASHER
SS4409-041	NE	WASHER
SS4409-053	—	Washer,Flat
SS4409-058	NE	WASHER
SS4411-06S200	NS	WASHER, SADDLE
SS48162	OH	BUTTON PLUG
SS48CT3C260000	NS	HOSE ASSY
SS49PA784D4-25Y	NE	RESTRICTOR FLUID FLOW
SS49TB815-4-16	NS	RESTRICTOR
SS5011-16-80A	NS	BOLT
SS5025-05-040	NE	BOLT
SS5025-06-030	NE	BOLTS
SS5053-5-10	NS	BOLT
SS5072-4	NE	WASHER
SS5075-11	NS	LOCK WASHER
SS50-815K4D	NE	VALVE



SS52C0635Z1562	NE	SHIM
SS52M2318Z2562	OH	SHIM (CYCLIC YOKE)
SS7039-2CC07	NS	JUMPER
SS70-905N4J	OH	CHECK VALVE
SS7563-4NBCL	NS	CLAMP
SS9002S76	NE	DECAL
SS9013-1364	NE	DECAL
SS9013-1366	NE	DECAL
SS9013-1368	NE	DECAL
SS9013-1432	NE	DECAL
SS9013-1454	NE	DECAL
SS9013-1573	NE	DECAL
SS9013-1605	NE	INSTALLATION PANEL
SS9013-1605	NE	INSTALLATION PANEL
SS9013-1665	NS	PLATE, WARNING
SS9013-882	NE	PLATE IDENT
SS9014J206	NE	DECAL
SS9014J345	NE	DECAL
SS9014J347	NE	DECAL
SS9014J349	NE	DECAL
SS9014J754	NE	PLATE IDENT
SS9019-285	NE	PLATE IDENT.
SS9019-285	NE	PLATE IDENT.
SS9019-4223	NE	DECAL
SS9019-99	NE	PLATE IDENT.
SS9019-99	NE	PLATE IDENT.
SS9067-0598	NE	DECAL
SS9067-0612	NE	DECAL
SS9067-0652	NE	DECAL
SS9094-001	NS	RING SPLIT KEY
SS9609 G2 1810	OH	CAP ADAPTER
SS9614G30Z	OH	FUEL CAP
SS9614G30Z	OH	FUEL CAP
SS9614G30Z	OH	FUEL CAP
SS9614G30Z	OH	FUEL CAP
SS9614G30Z	OH	FUEL CAP
ST-3A	OH	XMTR, PRESSURE
ST497-1	OH	STRUT ASSY, ENGINE COWL INLET
ST-53A	OH	TRANSMITTER
ST62A	OH	PRESS XMTR
ST-7D	OH	TRANSMITTER
STD3007B8N	OH	STUD
STD3021-04	OH	PLUG MACHINE
STD3027C4	OH	GASKET
STD3027C6	OH	WASHER
STD3053-4700	OH	SCREW
STD937-17	NE	POTENTIOMETER

STORAGE SYSTEM	SV	STORAGE SYSTEM
STORAGE SYSTEM	SV	STORAGE SYSTEM
SW40352-17	NE	LIGHT ASSY
SW87	OH	SCREW
SX7EJ3	AR	CONTACTOR
T101419-3	OH	ALIGN TOOL
T102064-3	SV	JACK SCREW
T103107	NE	SPLINE WRENCH
T103211-101	NS	COVER PLATE, LIFTING
T20180-25	OH	BLOWER ASSY
T26G01	OH	LGU LEVER
T53-L11D	OH	ENGINE
T53-L11D	OH	ENGINE
T53-L11D	OH	ENGINE
T53-L11D	OH	ENGINE
T58-GE-100	OH	ENGINE
TA09012	SV	CLAMP
TA09012COR52	SV	CLAMP
TBD20-0016	NS	PARTICLE SEPARATOR
TBD20-0016	NS	PARTICLE SEPARATOR
TBD20-0016	NS	PARTICLE SEPARATOR
TD96500-1	OH	ACTUATOR MOD VALVE
TDH-8070-2001	NS	RELAY
TG229/AKT-22	OH	ANTENNA ACTUATOR
TG255-002	OH	GEN, TACH
THANKSGIVING	-	2017 WEEK 47
THANKSGIVING - 2008	-	WEEK # 47
THANKSGIVING - 2009	-	WEEK 47
THANKSGIVING - 2010	-	WEEK 47
THANKSGIVING - 2011	-	WEEK 47
THANKSGIVING - 2012	-	WEEK # 47
THANKSGIVING - 2013	-	WEEK 47
THANKSGIVING - 2015	-	WEEK 47
THANKSGIVING - 2016	-	WEEK 47
THANKSGIVING- 2017 WEEK 47	-	-
THIXOSYNAVI	NE	GREASE
TSE331	OH	ENGINE, TURBO SHAFT
TYPE 7-7	OH	LOGIC UNIT
UAA6214-101	NE	COLLECTIVE BOOT
UAA6361-045	NE	CYCLIC CONTROL BOOT
UAH1157-5	OH	TUBE ASSY
UAH1160	OH	MOUNTING PLATE, HOIST
UAH1161-03	OH	HOLDER/HOIST
UAH1161-108	OH	WASHER/HOIST
UAH1161-23	OH	SHIM/HOIST
UAH1161-41	OH	REINFORCEMENT/HOIST
UAH1161-45	OH	REINFORCEMENT/HOIST

UAH1161-5	OH	FITTING/RESC HOIST
UAH1161-51	OH	ANGLE/HOIST
UAH1161-59	NE	WEB ASSY
UAH1161-63	OH	ANGLE/HOIST
UAH1161-65	OH	STRAP/RESC HOIST
UAH1161-75	OH	T CLIP/HOIST
UAH1161-85	OH	BRACKET
UAH1161-87	OH	PLATE
UAH1161-89	OH	PLATE
UAH1162-1	OH	FORK END
UAH1165-7	SV	FITTING
UAH1168	OH	FAIRING, FWD
UAH1173	OH	FAIRING, AFT
UAH1452	OH	FAIRING, COVER
UR218C	OH	RING
V151WM-301-5-00-S	SV	MONITOR MISION COORDINATOR
V-20000-041	OH	SOLENOID
V27700-26	OH	VALVE, SHUT OFF
V-3200-3	OH	VALVE
V-3700-3	OH	VALVE, SHUTOFF
V695/6	OH	GENERATOR, AVAD VOICE
V8500-19	OH	VALVE
V8500-19	AR	VALVE
V8500-19	OH	VALVE
V8500-19	OH	VALVE
V85061-10	OH	VALVE
V964/6/1	OH	VOICE GENERATOR
VAAM14-22D1-05/125	SV	RELAY
VC300	OH	VHF COMM CONTROL
VC344	AR	CONTROL, TRANSPONDER
VM66040-1	OH	CYLINDER
VM66040-1	OH	CYLINDER
VR1010-24-1A	OH	VOLTAGE REGULATOR
W205PP	NS	BEARING
W33-7510ETA	OH	CLOCK
W33-7540-10	OH	CLOCK
W33-7540-10	OH	CLOCK
WE-5441-1	OH	HOIST SYSTEM
X131720	NS	CLUTCH ASSY
X702-194A	NE	BLOWER ASSY
XW20197-H90-20	OH	WIPER ASSY
XW20345-138-64	OH	CONVERTER, W/W
XW20345-344-120	OH	CONVERTER, W\W
XW20345-531-50	OH	CONVERTER, WIPER
XW20369-227-56	NS	LINKAGE ASSY
XW20375-190-T	OH	LINK ASSY
XW20500-1-2000-1	OH	ARM ASSY

XW20571-369-L64	OH	MOTOR CONVERTER
XW21121	OH	CONVERTER
XW21121-227-56	OH	CONVERTER, W/W
XW21121-227-56	OH	CONVERTER, W/W
XW21121-227-56	OH	CONVERTER, W/W
XW21121-227-56	OH	CONVERTER, W/W
XW21121-227-56	OH	CONVERTER, W/W
XW21121-227-56	OH	CONVERTER, W/W
XW21121-227-62	OH	CONVERTER, W/W
XW21172-2	OH	MOTOR
XZ30461763	OH	COVER GENERATOR
ZBT204/1	OH	CHIME TONE
3.61	OH	GYRO VALVE
124.043	OH	IND. PRESS TEMP
124.043	OH	IND. PRESS TEMP
124.043	OH	IND. PRESS TEMP
124.043	OH	IND. PRESS TEMP
124.044	OH	FUEL PRESS GAUGE
124.044	OH	FUEL PRESS GAUGE
312	NE	BULB
457	SV	FUEL CAP
527	NE	PISTON GUIDE SHOE
736	SV	HOUSING
1016	OH	HOIST SHEAR TESTER
1040	OH	LORAN SENSOR
1040	OH	LORAN SENSOR
1137	OH	PRESSURE SWITCH HYD
1364	NS	BARREL
1364	NS	BARREL
1364	NS	BARREL
2376	SV	SWITCH
2538	OH	RECORDER VIB SIG ST
2820	OH	SWITCH PRESS
2860	OH	PUMP, INFUSION
2860	OH	PUMP, INFUSION
3135	NE	VALVE SOLENOID
3294	SV	BRACKET
3513	SV	BRACKET
4157	NE	SWITCH, PRESS
4187	NS	HANDLE
4916	NS	PLUG
5122	NE	SWITCH, PRESSURE
5769	OH	BELLMOUTH HEATED
5769	AR	BELLMOUTH HEATED
5769	OH	BELLMOUTH HEATED
6061	NS	DUCT, ANI-ICING

6752	SV	BRACKET
7034	OH	SWITCH, PRESSURE
7130	OH	VERTICAL SPEED IND.
7196	NS	BEARING
7310	SV	VELOCITY METER
8422	NE	BRACKET COMP
8427	OH	SWITCH
9046	NS	SWITCH
9691	OH	TRACK, PILOT SEAT
9720	OH	9720
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10232	NS	CAP, IGNITION
10298	OH	CONTROL ROD ASSY
11098	SV	VALVE ASSY
11660	AR	CYLINDER, MASTER BR
11660	AR	CYLINDER, MASTER BR
11660	OH	CYLINDER, MASTER BR
11682	OH	SOLENOID
12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY
12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY
12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY
12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY

12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY
12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY
12220	OH	VALVE - HYDRAULIC EMERGENCY 3 WAY
13068	OH	VALVE, SOLENOID
13219	NS	FUEL VALVES
13219	NS	FUEL VALVES
13740	OH	HYD VALVE
13830	NS	BEARING
13889	NS	BEARING
15420	NS	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15420	OH	ACCUMULATOR
15429	OH	VALVE/ SOLENOID
15923	OH	DUCT ASSY
16165	NE	STATIC WICKS
17023	OH	CARGO HOOK
17160	OH	VALVE-MIXER
17160	OH	VALVE-MIXER
17160	OH	VALVE-MIXER
17160	OH	VALVE-MIXER
17160	OH	VALVE-MIXER
17171	OH	FLOW METER
19150	NS	BEARING
19860	OH	CARTRIDGE ASSY
20350	OH	HYD VALVE
20350	OH	HYD VALVE
20418	OH	CONTROL, RADIO SET
21106	OH	PRESS VALVE
21794	OH	IMPELLER, TURBINE
21795	OH	SHAFT, SHOULDERED
21802	OH	INLET RING, TURBINE
21803	OH	PLATE, RETAINING
22114	OH	PRESSURE SWITCH
23773	OH	VALVE
28745	OH	PUMP & MOTOR
30567	NE	WASHER
30628	NE	WASHER FLAT



74889	NS	COVER, PISTON
75017	OH	SWITCH, PRESSURE
77894	OH	HOUSING
82405	NE	DIFFUSER
83154	OH	SWITCH, TEMP
83154	OH	SWITCH, TEMP
83154	OH	SWITCH, TEMP
83154	OH	SWITCH, TEMP
83154	OH	SWITCH, TEMP
83222	OH	FLOW SWITCH
84375	OH	ADAPTER
85012	NE	HOUR METER
88700	OH	MOD. HYDRAULIC UNIT
97306	OH	BASE ASSY, CONNE
99129	OH	SLEEVE
99392	SV	POWER/AMP
99912	OH	TRANSCEIVER HF
99914	OH	HF POWER AMP
100582	OH	VALVE BODY
100612	OH	VALVE ASSY
100619	OH	CYLINDER
100623	OH	NUT
100641	OH	WASHER
101118	OH	ACTUATOR
101118	OH	ACTUATOR
101252	OH	ACTUATOR, VALVE
102550	OH	INDICATOR, ATTITUDE
103437	OH	VALVE ASSY
105161	OH	MOTOR
105741	OH	HELI-ROTOR COMPRESSOR
105865	OH	VALVE ASSY
116625	NS	SHAFT, COUPLING
117800	OH	ATTITUDE INDICATOR
124657	OH	BASE PLATE
125780	OH	HSI
125780	OH	HSI
125780	OH	HSI
136709	OH	BLOCK VALVE
141151	NS	SUPPORT
157800	OH	IND. TEMP. EXHAUST
168459	NE	FILTER ASSY
172414	OH	OXYGEN, PRESS REG
172414	OH	OXYGEN, PRESS REG
195000	OH	CYLINDER ASSY
206113	OH	IND, AIR SPEED
206527	OH	LOADMETER
206528	SV	IND/FUEL PRESSURE



206621	SV	GAUGE
208374	OH	VALVE
208374	OH	VALVE
208374	OH	VALVE
211174	OH	BLOWER
215637	NE	GEAR HOUSING
220490	NS	SHAFT, PISTON
233375	OH	SHUT-OFF VALVE
233575	OH	VALVE, SHUT OFF
233575	OH	VALVE, SHUT OFF
244311	SV	SAGE
245860	RP	NG PROBE
301443	OH	GEAR PUMP
302488	OH	CENTER FIRESEAL
304848	NS	HOUSING
313895	OH	VALVE, SOLENOID
323831	OH	DOOR HANDLE
330728	NE	PISTON
337160	NE	SUPPORT ASSY
385835	OH	MOTOR, HYDRAULIC
400937	OH	ELBOW ASSY
411570	OH	VALVE
510902	OH	VALVE
515433	OH	REGULATOR
542202	NS	SHROUD
548607	OH	SYNC MODUAL, YAW
548607	RD	SYNC MODUAL, YAW
548607	OH	SYNC MODUAL, YAW
550796	OH	CONTROLLER, TEMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	SV	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP
554199	SV	MODULE ASSY, AMP
554199	OH	MODULE ASSY, AMP

567495	OH	TURBINE ASSY
574373	OH	FILTER
574373	NE	FILTER
585856	OH	CAPSOLE GAIN, ROLL
585856	SV	CAPSOLE GAIN, ROLL
585858	OH	CAPSOLE GAIN, YAW
585858	SV	CAPSOLE GAIN, YAW
590632	OH	COUPLING
590994	OH	CAPSOLE, PITCH GAIN
590994	OH	CAPSOLE, PITCH GAIN
590995	OH	CAPSULE, ROLL GAIN
590995	OH	CAPSULE, ROLL GAIN
590995	OH	CAPSULE, ROLL GAIN
590995	OH	CAPSULE, ROLL GAIN
625544	OH	ADAPTER, CONNECTOR
625544	OH	ADAPTER, CONNECTOR
627661	SV	VALVE,ANTI-ICE
684535	OH	AMPLIFIER
689511	OH	SUMP COVER
711233	OH	MOTOR VENT
716298	OH	SHELL, OUTER
724250	OH	HEAT EXCHANGER
727655	OH	HOUSING ASSY
727657	OH	SHAFT
727657	OH	SHAFT
727660	OH	PLATE
727853	OH	NOZZLE INSERT
727862	OH	HEAT EXCHANGER
733144	SV	SCREEN
744259	OH	SHIM
767169	OH	VALVE (F-16)
767661	OH	INLET
869900	OH	FILTER
874578	OH	BLOWDOWN BOTTLE
890272	OH	COMPRESSOR
890536	OH	AIR BOTTLE/VALVE
892881	OH	FIRE EXTINGUISHER
957785	OH	Coupler,Directional
997572	OH	PUMP HYDRAULIC
1012895	OH	SERVO VALVE
1022498	SV	CLIP
1202502	NE	ELT, KANNAD INTEGRA 406 W/GPS KIT
1250066	NE	CAP
1322942	OH	BEARING RETAINER
1719212	OH	SWITCH, PRESS
1719229	SV	SWITCH, PRESSURE
1719229	NS	SWITCH, PRESSURE

1741125	NE	KIT, SEAL
1875159	AR	RECEPTACLE ASSY
2077851	OH	BUSHING
2077859	OH	BUSHING
2090488	OH	MOTOR ASSY
2321592	NS	BEARING, SLEEVE
2321592	NS	BEARING, SLEEVE
2321592	NS	BEARING, SLEEVE
2383043	OH	HEAD REST
2552589	OH	SERVO
2730502	OH	SHUT OFF VALVE
2730502	OH	SHUT OFF VALVE
2730502	OH	SHUT OFF VALVE
2951274	SV	ADAPTER
2955544	OH	VALVE, CHECK
2955544	OH	VALVE, CHECK
2955544	OH	VALVE, CHECK
2955544	OH	VALVE, CHECK
2955544	OH	VALVE, CHECK
3003957	OH	OIL SEAL CARRIER
3004073	NS	PLUG
3004721	SV	RING
3005399	OH	TACH DRIVE SPACER
3005698	OH	4 BEARING NUT
3006084	OH	OIL FILLER CAP
3006246	OH	#1 BEARING HSG NUT
3006246	OH	#1 BEARING HSG NUT
3006368	OH	PT POSITIONING RING
3006487	SV	STATOR VANE ACT.
3006515	SV	ADAPTER
3007389	NS	ELBOW JOINT
3008348	OH	STRAINER
3008718	OH	STRAINER
3008720	OH	STRAINER SLEEVE
3009024	OH	BOLT, TURBINE
3009476	NS	COUPLING
3010098	OH	HOUSING
3010099	OH	HOUSING
3010609	OH	PLATES
3011095	OH	SHAFT, POWER, TURBIN
3011095	OH	SHAFT, POWER, TURBIN
3011095	OH	SHAFT, POWER, TURBIN
3011151	OH	ADAPTER, FUEL
3011158	OH	PLATE
3011198	OH	STRAINER
3011204	OH	3&4 BRG PRESS TUBE
3011261	OH	4 STATOR SEAL

3011426	OH	2 OIL NOZZLE
3011512	OH	PLATES
3011758	OH	HOUSING
3011765	OH	BLEED VALVE
3011766	OH	COVER ASSY
3012593	OH	TUBES
3012593	OH	TUBES
3012896	OH	INLET CASE BRACKETS
3013145	OH	HOUSING
3013145	OH	HOUSING
3013574	OH	HALF FLAT SPACERS
3013662	OH	2ND STAGE STATOR
3013662	OH	2ND STAGE STATOR
3013708	OH	COUPLING PLUG
3014020	OH	1 ROTOR AIR SEAL
3014020	OH	1 ROTOR AIR SEAL
3014111	OH	OIL NOZZLE
3014170	SV	#15 BEARING
3014291	OH	CASE, COMPRESSOR INL
3014292	OH	INLET CASE
3014309	OH	#1 BRG INNER HSG
3014309	OH	#1 BRG INNER HSG
3014310	OH	TUBE
3014311	OH	ADAPTER, GB TO INLET
3014311	OH	ADAPTER, GB TO INLET
3014397	OH	CARRIER, OIL SEAL
3014397	OH	CARRIER, OIL SEAL
3014404	OH	GEAR SHAFT
3014406	OH	GEARSHAFT, SPUR IDLR
3014406	OH	GEARSHAFT, SPUR IDLR
3014406	OH	GEARSHAFT, SPUR IDLR
3014406	OH	GEARSHAFT, SPUR IDLR
3014409	OH	GEAR SHAFT
3014410	OH	OIL PUMP GEAR
3014410	OH	OIL PUMP GEAR
3014410	OH	OIL PUMP GEAR
3014417	OH	MAIN PRESS PUMP GEAR
3014418	OH	MAIN PRESS PUMP GEAR
3014419	OH	COVER, PRESS PUMP
3014419	OH	COVER, PRESS PUMP
3014419	OH	COVER, PRESS PUMP
3014429	OH	TUBE, TRANSFER
3014429	OH	TUBE, TRANSFER
3014439	OH	SPACERS
3014442	OH	SCAV OIL PUMP GEARS
3014443	OH	SCAV PUMP GEARS
3014443	OH	SCAV PUMP GEARS

3014444	OH	COUPLING
3014446	OH	COVER SCAVENGE PUMP
3014446	OH	COVER SCAVENGE PUMP
3014449	OH	TUBE
3014452	OH	SCAV PUMP BOLT
3014454	OH	SCAV PUMP SCREEN
3014457	OH	TUBE
3014458	OH	TUBE
3014460	OH	TUBE
3014461	OH	TUBE
3014466	OH	COUPLING SHAFT
3014466	OH	COUPLING SHAFT
3014494	OH	TORGUE VALVE R/H
3014495	OH	T/METER SLEEVES
3014499	SV	CLIP
3014578	OH	R/H LOWER OIL NOZZLE
3014589	OH	#10 NUT R/H
3014609	SV	COVER
3014611	OH	ECCENTRIC
3014629	OH	TUBE
3014632	OH	TUBE
3014689	OH	BLANKING COVER
3014787	OH	TACH DRIVE GEARSHAFT
3014790	OH	BYPASS VALVE FILTER
3014792	OH	VALVE, BYPASS
3014792	OH	VALVE, BYPASS
3014793	OH	RETAINING PLATES
3014810	OH	ELBOW
3014838	OH	TUBE
3014866	OH	MOUNTING RING
3014866	OH	MOUNTING RING
3014872	OH	FRONT TOP FIRESEAL
3014884	OH	TUBE
3014897	OH	TUBE
3014937	OH	ELBOW
3014949	OH	RETAINING PLATE
3014983	SV	PIN
3015198	OH	NECK, OIL, OB SIDE
3015198	OH	NECK, OIL, OB SIDE
3015204	OH	OIL FILLER STRAINER
3015284	OH	HOUSING, PRES PUMP
3015285	OH	MAIN PRESS PUMP HSG
3015399	OH	CARRIER, SEAL
3015428	OH	IDLER GEAR SPACER
3015429	OH	IDLER GEAR BOLT
3015439	OH	BLOWER DR BEARING LH
3015440	SV	RETAINING RING

3015599	OH	1 OUTER BRG HSG
3015599	OH	1 OUTER BRG HSG
3015674	OH	OIL PUMP SPACER
3015674	OH	OIL PUMP SPACER
3015676	OH	INNER SCAV PUMP
3015747	OH	HOUSING SCAVANGE PUMP
3015828	OH	CENTER BYPASS VALVE
3015830	OH	CENTER BYPASS VALVE
3015833	OH	OIL FILLER NECK SCRN
3015866	OH	STARTER GEAR
3015866	OH	STARTER GEAR
3015868	OH	IMPELLER, CENTRIF
3015871	NS	CARRIER, OIL SEAL
3015871	NE	CARRIER, OIL SEAL
3015873	OH	BLOWER DR. NUTS
3015873	OH	BLOWER DR. NUTS
3015875	OH	BLOWER DR. SPACER
3015877	OH	GEARSHAFT
3015883	OH	JET PUMP
3015888	OH	JET PUMP OUTLET
3015891	OH	TUBE ASSY
3015892	OH	CK VALVE HSG
3015892	OH	CK VALVE HSG
3015956	OH	SPACER, COMPRESSOR
3015956	OH	SPACER, COMPRESSOR
3016134	OH	METERED ELBOW
3016175	OH	ELBOW
3016177	OH	FUEL/OIL HEATER
3016203	OH	ELBOW
3016206	OH	HOUSING,SCAVENGE PMP
3016207	OH	OUTER SCAV PUMP HSG
3016207	OH	OUTER SCAV PUMP HSG
3016207	OH	OUTER SCAV PUMP HSG
3016262	OH	DUCT ASSY, COMBUST
3016263	OH	ELBOW
3016269	OH	RETAINER PLATE
3016364	OH	TUBE
3016410	OH	IMPELLER RET. RING
3016410	OH	IMPELLER RET. RING
3016459	OH	COUPLING SHAFT
3016459	OH	COUPLING SHAFT
3016798	OH	1 STAGE SPACER
3016798	OH	1 STAGE SPACER
3016821	OH	TUBE
3016824	OH	TUBE ASSY
3016837	OH	TUBE
3016973	OH	GEARSHAFT

3016990	OH	REAR FIRESEAL
3017097	OH	RETAINER, OIL SEAL
3017098	OH	HOUSINGS
3017104	OH	#11 SPACER
3017114	OH	HELICAL GEAR
3017115	OH	TUBE
3017118	OH	#11-#12 NUT 11R
3017126	OH	INT. DR SHAFT WASHER
3017150	SV	TEE
3017173	OH	CHECK VALVE
3017180	OH	CK&REG VALVE COVER
3017180	OH	CK&REG VALVE COVER
3017182	OH	TUBE
3017207	OH	#5 BEARING L/H
3017207	OH	#5 BEARING L/H
3017208	OH	#5 BEARING RET PLATE
3017250	OH	#8 BRG. CARRIER
3017250	OH	#8 BRG. CARRIER
3017251	OH	BUSHING #8 BRG.COVER
3017255	OH	NOZZLE, MID STEEL
3017307	OH	LH COVER
3017309	OH	RH COVER
3017399	OH	NIPPLE
3017402	OH	BREATHER HSG
3017892	OH	TUBE
3017967	OH	AIR SEAL, ROTOR 2
3017968	OH	3 ROTOR AIR SEAL
3018111	OH	HUB, COMPRESSOR
3018114	SV	COVER, OIL FILTER
3018122	OH	LIFTING BRACKET LH
3018122	OH	LIFTING BRACKET LH
3018123	OH	LIFTING BRACKET
3018123	OH	LIFTING BRACKET
3018127	OH	HOUSING
3018128	OH	HOUSING
3018129	OH	PLATE, BLANKING IND
3018129	OH	PLATE, BLANKING IND
3018130	AR	OIL LEVEL IND, OB
3018133	SV	GASKET
3018156	OH	GEARSHAFT
3018158	OH	INTERM DRIVE SHAFT
3018164	OH	PLATES
3018165	OH	SLEEVE BUSHINGS
3018166	OH	SLEEVES
3018168	OH	BRACKET, TRIM MOUNT
3018174	OH	1 BEARING NUT
3018189	OH	RETAINER PLATE

3018192	SV	RET. PLATE
3018192	OH	RET. PLATE
3018193	OH	RET. PLATE
3018215	OH	REDUCER
3018228	OH	L/H LOWER OIL NOZZLE
3018262	OH	STATOR ASSY
3018294	OH	CROSS TUBE
3018310	OH	TUBE
3018474	OH	TUBE
3018476	OH	TUBE
3018479	OH	FRT BTM FIRESEAL
3018498	OH	OUTPUT SHFT RET RING
3018506	OH	PLATE
3018511	OH	POSITIONING PLATE
3018515	OH	TUBE
3018517	OH	TUBE
3018521	OH	BRACKET, TRIM COMP
3018797	SV	ACCUMULATOR
3018799	OH	CLAMP
3018901	OH	ACCUMULATOR
3018922	OH	COVER,CYLINDER
3018923	OH	CYLINDER, TORQUEMTR
3018950	OH	HOUSING ASSY
3019147	OH	TORQUEMETER PISTON
3019187	OH	TRANSFER TUBE
3019353	OH	AGB COVER
3019353	OH	AGB COVER
3019367	OH	BRACKET
3019368	OH	BRACKET
3019380	OH	SLEEVE BUSHINGS
3019382	OH	#14 NOZZLE
3019403	SV	3RD STAGE BLADES
3019403	AR	3RD STAGE BLADES
3019424	SV	NOZZLE TIPS
3019426	OH	INLET ADAPTER
3019461	OH	1ST STAGE STATOR
3019461	OH	1ST STAGE STATOR
3019491	AR	FUEL NOZZLE SHEATHS
3019536	OH	ADAPTER
3019537	OH	ADAPTER
3019538	OH	PLATE
3019556	OH	HOUSING ASSY
3019754	NE	ADAPTER, NOZZLE
3019906	OH	VALVE, FLOW DIVIDER
3019906	OH	VALVE, FLOW DIVIDER
3019906	OH	VALVE, FLOW DIVIDER
3019906	OH	VALVE, FLOW DIVIDER



3019906	OH	VALVE, FLOW DIVIDER
3019909	OH	CARRIER, SEAL
3019912	OH	COVER, PRESSURE PUMP
3019914	OH	HOUSING, PRESS PUMP
3019915	OH	PRESS PUMP DRIVE GR
3019916	OH	PRESS PUMO DRIVE GR
3019920	OH	PUMP COUPLING
3019944	OH	HOUSING, INLET
3019945	OH	PRESSURE PUMP OIL INLET HSG
3019946	OH	OIL BODY REGULATOR
3020098	OH	BLANKING PLATE
3020120	OH	TUBE
3020137	OH	JET PUMP HSG
3020184	OH	ADAPTER ASSY
3020189	OH	PRESS REG. VALVE
3020269	OH	OUTPUT SHAFT COVER
3020392	OH	SPACER
3020618	OH	VALVE COVER
3020627	OH	#6 OIL JET ASSY. R/H
3020630	OH	#6 NOZZLE
3020698	OH	BREATHER STRAINER
3020937	OH	HOUSING
3020994	OH	GEAR, BEVEL
3021137	OH	TORQUE METER CYLINDER
3021207	OH	STOP
3021346	OH	BLEED VALVE
3021466	OH	SLEEVE BUSHINGS
3021469	OH	#5 ANTIROT. BRACKET
3021623	OH	TUBE,TRANSFER PACKIN
3021624	OH	TUBE
3021826	OH	OIL TEE
3021829	OH	TRANSFER TUBE
3021831	OH	OIL ELBOW
3021836	OH	TRANSFER TUBE
3021838	OH	OIL ELBOW
3021839	OH	OIL ELBOW
3021841	OH	OIL ELBOW
3021842	OH	OIL ELBOW
3021844	OH	L/H UPPER OIL NOZZLE
3021845	OH	OIL PLUG
3022256	OH	THRUSTWASHER, DRIVE GEAR
3022615	OH	OIL DAMS
3022685	OH	DUCT ASSY, COMBUST
3023275	OH	FUEL CONTROL GEAR
3023286	OH	PRESS REG VALVE
3023287	OH	CHECK VALVE SLEEVE
3023337	OH	BRACKET ASSY

3023622	OH	FIRESEAL
3023630	OH	T5 SHIELD
3023718	OH	TUBE
3023720	OH	TUBE
3023724	OH	P3 AIR TUBE
3023725	OH	FINGER VALVE
3023726	OH	P3 AIR HOUSING
3023901	OH	UPPER SUPPORT SEAL
3023913	OH	#12.5 OIL SEAL R/H
3023914	OH	#10.5 OIL SEAL RET
3023937	OH	HOUSING ASSY
3024004	OH	FLANGE
3024007	OH	#2 BEARING COVER
3024007	OH	#2 BEARING COVER
3024015	OH	T-5 WIRING HARNESS
3024064	OH	RETAINING PLATE
3024090	OH	TEE
3024114	OH	BAFFLE COVER
3024114	OH	BAFFLE COVER
3024148	OH	JET PUMP CK VALVE
3024149	OH	VALVE SEAT
3024289	OH	HOUSING, OUTPUT
3024289	OH	HOUSING, OUTPUT
3024431	OH	HOUSING ASSY
3024431	OH	HOUSING ASSY
3024431	OH	HOUSING ASSY
3024438	OH	EXT OIL PRESS VALVE
3024439	OH	EXT OIL PRESS COVER
3024440	OH	EXT OIL PRESS HSG
3024488	OH	CENTER FIRESEAL
3024491	OH	LIFTING BRACKET
3024491	OH	LIFTING BRACKET
3024559	OH	HOUSING
3024567	OH	PLUGS
3024576	OH	LINER
3024703	OH	#13 BEARING
3024831	OH	CT LOCK PLATE
3024851	OH	VANE RING
3024852	OH	VANE RING
3024862	OH	STATOR, PT
3024891	OH	OIL NOZZLE
3024901	OH	1ST STAGE BLADES
3024992	OH	CT/PT SEALING RING
3025552	OH	COVER ASSY #1
3025554	OH	COVER ASSY #2
3026609	SV	DETECTOR
3026631	OH	PRESS PUMP BAF ASSY

3026633	OH	PRESS PUMP HSG ASSY
3026669	OH	HOUSING ASSY, CHECK VALVE
3026768	OH	LINER ASSY
3026768	OH	LINER ASSY
3026768	OH	LINER ASSY
3026913	OH	PT SHROUD
3026913	OH	PT SHROUD
3026927	OH	TUBE
3026934	OH	DUCT ASSY
3026936	OH	HOUSING ASSY, COMPRES
3026960	OH	HOUSING, COMPRESSOR
3026976	NE	T-7 THERMOCOUPLE
3027004	OH	DIAPHRAM
3027005	OH	HOUSING, INPUT
3027006	OH	HOUSING SET
3027280	NS	IGNITER PLUG
3027799	OH	IMPELLER HSG
3027803	OH	3 STAGE SPACER
3027803	OH	3 STAGE SPACER
3027805	OH	TUBE ASSY
3027805	OH	TUBE ASSY
3027806	OH	TUBE ASSY
3027806	OH	TUBE ASSY
3028004	OH	E
3028222	OH	SEAL, AIR, COMPRESS
3028222	OH	SEAL, AIR, COMPRESS
3028289	NS	HARNESS ASSY
3028381	OH	DUCT, EXHAUST
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028437	OH	PT STATOR HSG
3028626	OH	CASE ASSY, GAS GENERATOR
3028848	OH	TUBE
3028852	OH	TUBE
3028990	OH	SPACER INPUT SHAFT
3029248	OH	DUCT ASSY, COMBUST
3029256	OH	ACCUMULATOR
3029584	OH	TUBE
3029979	OH	HOUSING ASSY POWER TURBINE
3030059	OH	DUCT ASSY, EXIT
3030293	OH	P3 HOUSING
3030366	OH	1 STATOR AIR SEAL

3030366	OH	1 STATOR AIR SEAL
3030372	OH	BLEED VALVE
3030372	OH	BLEED VALVE
3030605	OH	4 BOLT IDLER SHAFT
3030607	OH	PIN
3030658	OH	BLEED VALVE HSG
3030710	OH	HOUSING ASSY COMPRESSOR
3031195	OH	BLEED VALVE SEAT
3031784	OH	SLEEVE SPACER
3032167	OH	EXCITER BOX
3033063	OH	BLEED VALVE
3033459	OH	#1 BEARING
3034367	OH	TEMP PROB
3035678	NS	TRIM COMPENSATOR
3035678	NS	TRIM COMPENSATOR
3038545	OH	WIRING HARNESS
3043023	OH	BLEED VALVE
3079680	OH	SEAL,AIR
3090184	NE	SHIM SET
3106198	OH	DUCT ASSY
3213482	OH	VALVE
3500498	NS	HOUSING
3544586	OH	VALVE
4000277	NS	DISC, BRAKE
4000484	NE	PLATE, ID
4000592	OH	HOUSING ASSY
4000593	NE	HOUSING ASSY
4000593	OH	HOUSING ASSY
4000596	OH	PISTON ASSY
4202104	OH	LANDING LIGHT
4671491	OH	FRONT SUPPORT AH
5003425	AR	WHEEL ASSY
5003426	OH	BRAKE ASSY
5003427	OH	WHEEL ASSY
5003428	NE	WHEEL HALF
5003441	NS	PRESSURE PLATE
5003441	NS	PRESSURE PLATE
5003929	OH	WHEEL HALF
5003930	OH	WHEEL HALF
5004078	OH	WHEEL HALF SUB ASSY O.B.
5006551	NE	PLATE
5007553	OH	WHEEL, NOSE
5007553	OH	WHEEL, NOSE
5007553	OH	WHEEL, NOSE
5007679	OH	WHEEL HALF, INBOARD
5010149	NS	LINING
5011934	NS	PISTON

5233600	OH	NOZZLE, FUEL
5503240	SV	FASTENER
5610719	NE	SPARK PLUG
6773065	OH	FILTER HOUSING
6808397	NE	SPACER
6829013	OH	NOZZLE 3RD STAGE
6840109	NE	RING
6842523	SV	MOUNT
6845911	OH	NOZZLE, #1
6846360	OH	FRONT SUPPORT
6846815	OH	HOUSING
6847143	OH	NOZZLE SHIELD
6850493	OH	NOZZLE
6850746	SV	BOLT
6850943	OH	NOZZLE 4TH STAGE
6851072	OH	IGNITION EXCITER
6851116	OH	IMPELLER
6851430	OH	DIFFUSER
6851574	OH	SCROLL ASSY, COMPRESSOR
6852085	OH	GEAR
6852088	OH	GEAR
6852091	OH	GEAR
6852738	OH	DIFFUSER
6852783	OH	COMBUSTION LINER
6853283	OH	SHIELD ASSY
6853290	SV	SHIELD ASSY
6854148	OH	GEAR SHAFT
6854149	OH	GEAR
6854857	OH	GEAR
6855102	OH	EXHAUST COLLECTOR
6855876	NS	KIT
6855877	NS	KIT
6856983	OH	VALVE ASSY
6860681	NS	TUBE ASSY
6870460	OH	BLEED VALVE
6870460	OH	BLEED VALVE
6870460	OH	BLEED VALVE
6870951	OH	GEAR
6870992	OH	COMBUSTION CASE
6871041	OH	SHIELD ASSY
6871218	OH	GEAR
6871318	OH	SUPPORT, PT
6871432	OH	COMPRESSOR WHEEL 2ND
6871541	NS	GASKET
6871543	OH	NOZZLE 3RD STAGE
6871563	OH	NOZZLE 3RD STAGE
6874884	OH	REAR DIFFUSER

6875490	AR	COMPRESSOR CASE
6876654	OH	WHEEL ASSY, 4TH STAGE
6876655	OH	WHEEL ASSY,5TH STAGE
6876656	OH	WHEEL ASSY, 6TH STAGE
6876886	OH	SUPPORT, GP
6876887	OH	SUPPORT, GP
6876887	OH	SUPPORT, GP
6877143	OH	NOZZLE
6878426	OH	NOZZLE 2ND STAGE
6878491	SV	LEVER
6878496	OH	NOZZLE, 1ST STAGE
6878496	OH	NOZZLE, 1ST STAGE
6878498	OH	NOZZLE 2ND STAGE
6879867	OH	NOZZLE, 3RD STAGE
6887615	OH	FILTER HOUSING
6889157	OH	C30 GEAR SHAFT SPUR
6890040	OH	BLAST SHIELD
6890501	OH	WHEEL,COMPRESSOR 1ST
6890502	OH	WHEEL ASSY, 2-3 STAGE
6891606	OH	GEAR
6891963	SV	LEAD, IGNITION
6893653	OH	HOUSING
6893659	OH	GEAR AH
6893662	OH	GEARSHAFT
6895006	OH	SUPPORT ASSY
6895008	OH	SUPPORT, G.P.
6895012	NE	Bracket,Fuel Filter
6895021	OH	NOZZLE, 1ST STAGE
6895021	OH	NOZZLE, 1ST STAGE
6895021	OH	NOZZLE, 1ST STAGE
6895021	OH	NOZZLE, 1ST STAGE
6895029	NE	NOZZLE, 1ST STAGE
6895047	SV	CLAMPING/ KIT
6895078	OH	GEARBOX HOUSING
6895124	OH	TRANSFER TUBE
6895185	NE	FILTER
6895800	OH	TUBE
6896344	OH	FUEL PUMP
6896809	OH	FUEL FILTER ASSY
6896895	OH	SHAFT
6898704	OH	TUBE AH
6898711	OH	DIFFUSER
6899084	NE	IGNITOR
6899144	OH	PICKUP, N1
6899253	OH	PUMP, FUEL
6899278	OH	FILTER ASSY
6899279	OH	FILTER ASSY.

6899311	SV	TEMP SWITCH
6899409	OH	BELLMOUTH
7001583	OH	TUBE ASSY
7006118	OH	SUPPORT
7006118	OH	SUPPORT
7006120	OH	SUPPORT
7018084	SV	EXTENSION, ROD
7354200	OH	TUBE ASSY
7354201	OH	TUBE ASSY
7354240	OH	BRACKET
7799773	AR	BORESCOPE
8014700	OH	BORAN NAVIGATOR
8014850	OH	ANTENNA COUPLER
8014850	OH	ANTENNA COUPLER
8014880.503	OH	CIRCUIT BOARD
8015447	OH	LORAN NAV
8523534	OH	OIL COOLER
8528061	OH	OIL COOLER
8528061	OH	OIL COOLER
8528061	OH	OIL COOLER
8537653	NE	OIL COOLER
8538100	AR	OIL COOLER ASSY
8538312	OH	OIL COOLER
8575636	OH	SPEED SENSOR
8587577	SV	LAUNCHER ALIGNMENT
8611251	OH	SEAT INSTALLATION
9420389	NS	PISTON, SUB ASSY
9420389	OH	PISTON, SUB ASSY
9420494	OH	PISTON ASSY
9430118	OH	BRAKE ASSY
9430349	OH	PISTON ASSY
9430957	NS	SPACER
9430958	OH	HOUSING
9431108	OH	HOUSING, BRAKE
9440344	OH	SUPPORT
9440344	OH	SUPPORT
9440791	OH	DISC, R/B
9440792	SV	HOUSING
9440803	OH	R/B CALIPER
9440879	OH	HOUSING
9440904	NE	DISC, BRAKE
9521374	NS	PIN
9521374	NS	PIN
9521374	NS	PIN
9523992	OH	PLATE
9531924	OH	WHEEL ASSY
9531924	OH	WHEEL ASSY

9531926	OH	BRAKE ASSY
9531926	OH	BRAKE ASSY
9531976	SV	WHEEL HALF
9531977	AR	WHEEL HALF
9531977	OH	WHEEL HALF
9531977	OH	WHEEL HALF
9531978	OH	WHEEL HALF ASSY
9531978	OH	WHEEL HALF ASSY
9531978	OH	WHEEL HALF ASSY
9531978	OH	WHEEL HALF ASSY
9531979	OH	WHEEL HALF, SUB ASSY
9531979	OH	WHEEL HALF, SUB ASSY
9531979	OH	WHEEL HALF, SUB ASSY
9532046	OH	WHEEL HALF
9532046	NS	WHEEL HALF
9532589	OH	BRAKE ASSY
9543763	OH	WHEEL ASSY
9543834	OH	WHEEL HALF, SUB ASSY
9543834	OH	WHEEL HALF, SUB ASSY
9550533	OH	WHEEL HALF
9740804	SV	ROTOR BRAKE
10162224	NS	HOUSING
10162224	NS	HOUSING
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
11438517	NS	MANIFOLD
12008832	OH	HYD. HAND PUMP
15046250	OH	MOUNT, SEARCHLIGHT
22233350	OH	SERVO VALVE
22255060	OH	SERVO
23001804	OH	TUBE
23003025	SV	FIXTURE
23004563	OH	ADAPTER FLANGE
23004600	OH	NOZZLE
23004821	SV	CONTROL, OVERSPEED
23005277	OH	2 1/2 CEARING CAGE



23007208	OH	DIFFUSER
23007210	OH	DIFFUSER VANE
23007212	SV	DIFFUSER VANE
23007217	OH	REAR MOUNT
23007506	OH	GOVERNER
23007827	SV	VALVE, SOLENOID
23007875	OH	GOVERNOR
23007981	SV	N2 PICKUP
23009568	OH	ADAPTER
23030989	OH	IDLER GEAR
23031492	OH	GP SUPPORT
23031532	OH	OVERSPEED CONTROL
23031911	OH	NOZZLE
23031938	OH	NOZZLE 2ND STAGE
23031938	OH	NOZZLE 2ND STAGE
23033400	SV	FILTER ASSYS
23033412	OH	SUPPORT PT
23033854	OH	OIL FILTER HSG
23035103	OH	HOUSING, FILTER
23035281	OH	DISCHARGE TUBE
23038118	OH	SUPPORT, GP
23038218	OH	NOZZLE, TURBINE
23039904	AR	BLEED VALVE
23053176	OH	BLEED VALVE
23056130	OH	COMBUSTION LINER
23056130	OH	COMBUSTION LINER
23057142	OH	COMPRESSOR CASE
23077068	OH	NOZZLE ASSY
23079491	OH	VANE ASSY
23111282	OH	RESERVOIR ASSY
23111282	OH	RESERVOIR ASSY
23111282	OH	RESERVOIR ASSY
23111282	OH	RESERVOIR ASSY
23111282	OH	RESERVOIR ASSY
23711954	OH	PNEUMATIC RESERVOIR
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
23711965	OH	RESERVOIR, PNEUMATIC
26330053	OH	VALVE, ANTI-ICE
27098292	SV	ANTENNA
30006772	NE	BALANCE TUBE
30006786	NE	CRANK
30006789	NE	ADJUSTER

30006789	SV	ADJUSTER
30006798	NE	SHAFT, INPUT
30094781	OH	MANIFOLD
30110710	OH	ADAPTER, DRAIN
30200000	SV	THERMOCOUPLER
38004004	OH	TUBE ASSY
41000107	OH	FITTING
41000298	OH	HOUSING
41000298	OH	HOUSING
41000312	SV	CYLINDER,CONNECTOR
41000333	OH	PLATE, MANIFOLD
41000373	OH	LEVER
41000374	SV	LEVER
41000523	OH	LINK
41000523	NE	LINK
41000886	OH	ACTUATOR, SUB ASSY
41000886	NE	ACTUATOR, SUB ASSY
41001034	SV	SEAT
41001036	OH	SPRING
41001043	OH	SPACER
41001044	SV	SLEEVE
41001045	SV	GUIDE SPRING
41001055	OH	SPRING
41001057	OH	SEAT
41001058	SV	POPPET
41001571	SV	POPPET
41001973	OH	SPRING
41002371	SV	PLUG
41002372	SV	RETAINER
41002373	SV	RETAINER
41002374	OH	PLUG
41003285	NE	INDICATOR
41003285	NE	INDICATOR
41003285	NE	INDICATOR
41003295	OH	SPACER
41004129	NE	STOP
41004237	OH	SCRAPER GLAND
41004238	OH	SEAL GLAND
41004343	OH	SHAFT
41005064	OH	CRANK
41005066	OH	END CAP
41005074	OH	INPUT LEVER
41005099	AR	BEARING HOUSING
41005136	OH	RETAINER GLAND
41005227	OH	ROD END
41006049	-	PISTON
41103740	OH	CYLINDER ASSY

41103740	OH	CYLINDER ASSY
224039314	OH	SOLENOID VALVE
249317500	NE	IGNITER, TORCH
260000015	SV	FUEL EVAP. ASSY
262900300	OH	CAP
270000004	SV	ELECTRICAL PANEL(HJ)
292858560	OH	HMU
292858560	SV	HMU
298802230	NE	HOUSING
401271690	OH	FIREWALL
401272400	OH	ADAPTER
401272430	OH	DUCT
401272810	OH	DUCT
401273070	OH	STARTER GEN. AIR INTAKE
401273070	OH	STARTER GEN. AIR INTAKE
401273070	OH	STARTER GEN. AIR INTAKE
401274260	OH	HEATSHIELD
401274260	OH	HEATSHIELD
401274660	SV	BLOWER PROTECTION
401274660	AR	BLOWER PROTECTION
401274660	SV	BLOWER PROTECTION
401274660	SV	BLOWER PROTECTION
401274660	SV	BLOWER PROTECTION
401274660	SV	BLOWER PROTECTION
401274660	SV	BLOWER PROTECTION
401274660	SV	BLOWER PROTECTION
401275290	OH	FORWARD TRANSVERSE FIREWALL ASSY
401275290	OH	FORWARD TRANSVERSE FIREWALL ASSY
401277050	OH	L/H OUTBOARD TRIPOD
401277060	OH	R/H OUTBOARD TRIPOD
401277070	OH	L/H INBOARD BIPOD
401277080	OH	R/H INBOARD BIPOD
401277090	OH	MOUNT ASSY, DRAG STRUT
401277670	OH	EQUIPPED AIR DUCT
401277670	OH	EQUIPPED AIR DUCT
401277670	OH	EQUIPPED AIR DUCT
401277880	OH	INLET DUCT ASSY
401277880	OH	INLET DUCT ASSY
401277880	OH	INLET DUCT ASSY
401277930	OH	AFT ENGINE STRUT
401280040	NE	STRUT ASSY
401281410	NS	PLATE
401281430	NS	PLATE
401287300	NS	PLATE
401287410	OH	EXHAUST EJECTOR, LH
401287430	OH	EXHAUST PROLONGATOR ASSY RH
401287450	OH	ADAPTER

960133629	SV	BEARING
2005563101	OH	PRESS TRANSMITTER
7024512001	NS	BRUSHES, ELECTRICAL
7025408001	OH	SPRINGS
7525065107	OH	PUMP, HYDRAULIC
9580113360	NE	PROBE
10130230144	NE	JOINT PLATE
98571843591	OH	MASTER WARNING PANEL
5E+11	OH	VALVE ACTUATOR
2.95E+12	OH	SCREEN ASSY INTAKE
1.95E+21	OH	CAP, SCRAPER
1.95E+27	OH	RING TIE DOWN
1.95E+27	OH	RING TIE DOWN
1.95E+29	OH	PIN, TIE DOWN
1.95E+30	OH	TUBE
1.95E+38	OH	ROD END ASSY
1.95E+38	OH	ROD END ASSY
1.95E+58	OH	SWIVEL
1.95E+58	OH	SWIVEL
1.95E+65	OH	BRACKET
1.95E+65	OH	BRACKET
1.95E+74	OH	DRAG BRACE
1.95E+77	OH	BRACE ASSY
1.95E+84	OH	SWIVEL ASSY
1.95E+84	OH	SWIVEL ASSY
1.95E+84	OH	SWIVEL ASSY
1.95E+86	OH	LINK ASSY
5.15E+102	OH	GYRO, DISPLACEMENT
4.23E+184	OH	BALL SPLINE ASSY.
0003096-7	OH	LIGHT
0003096-7	OH	LIGHT
0003096-7	OH	LIGHT
00033096-7	OH	LIGHT
00033096-7	OH	LIGHT
00033106-1	OH	LIGHT
00033106-2	OH	LIGHT
000541-1	OH	ROTOR BRAKE ASSY
0103178-28	NE	INERTIA REEL
010-33778-3	NS	CYLINDER ASSY
0106176-1	OH	REEL, INERTIA
01-0770001-52	NE	STROBE FLASH TUBE
011-00455-00	OH	TRANSPONDER
012631-010-02	NS	MOTOR, HYDRAULIC
012-840060-1	OH	HEEL CONTROL UNIT
012-840060-3	OH	HEEL CONTROL UNIT
0130-63220-043	NS	PANEL ASSY
014544-200	OH	HYDRAULIC PUMP

019-2525-00	NE	DEFLECTION YOKE
020-020-113-007	OH	VERTICAL/FIN
020-061-013	OH	FUEL PROBE
02-15726-2	OH	FILTER BOWL
02-15726-2	OH	FILTER BOWL
02-15726-2	OH	FILTER BOWL
023-13000-09	SV	AMMETER
025277-100	OH	PUMP,ROTARY
025277-300-05	OH	FUEL PUMP
025277-300-05	OH	FUEL PUMP
025277-300-06	OH	FUEL PUMP
025277-300-06	OH	FUEL PUMP
025277-300-07	OH	FUEL PUMP
025277-300-07	OH	FUEL PUMP
025277-300-07	OH	FUEL PUMP
025277-300-07	OH	FUEL PUMP
025277-300-07	OH	FUEL PUMP
025773-300-02	OH	FUEL PUMP
02C12	NS	IGNITOR
0306-02115-101	NE	SLEEVE
033-526-0861-008	OH	LOW ENG RPM IND
03480-1	OH	BLACKHAWK SEAT
035769-158	SV	FILTER BOWL ASSY
035769-158	SV	FILTER BOWL ASSY
03-6009-07	NE	BEARING
03-716-06	NE	BEARING
038088-08	NE	ELEMENT; FILTER, OIL
03W126-231	OH	CARTRIDGE, OIL
03W126-231	OH	CARTRIDGE, OIL
03W470-158	NE	COVER, FILTER
040-22800	OH	WHEEL, LANDING GEAR
04-1504-3428	OH	POWER SUPPLY
04-1504-3428	OH	POWER SUPPLY
04424-01	NE	COVER ASSY
047-351-020-001	SV	U-BOLT
047-382-128-009	AR	HINGE HALF
047-382-128-009	OH	HINGE HALF
047-382-128-010	OH	HINGE HALF
047-382-128-010	OH	HINGE HALF
047-620-498-001	NS	SEAL
047-641-115-001	NS	SHAFT ASSY
047-645-266-001	NS	HOUSING ASSY
047-727-185-001	OH	MOUNT
0501002B	OH	ELT
053583-203-2251	NE	SEAT BELT
062-10800	NE	PISTON
063-05000	NE	PRESSURE PLATE
063-05000	NE	PRESSURE PLATE

063-05000	NE	PRESSURE PLATE
063-05000	NE	PRESSURE PLATE
063-05000	NE	PRESSURE PLATE
063-1007-00	OH	TRANSCEIVER, HF
064-01065-0100	OH	UHF TRANSCEIVER
065-0113-10	OH	PRESSURE SENSOR
066-1008-00	OH	VOR/LOC-RMI
066-1021-01	OH	RECEIVER, KR0021
066-1027-00	OH	NAV/RECEIVER
066-1035-02	OH	GLIDESLOPE
066-1061-03	OH	RADAR ALT R/T
066-3046-05	OH	NAV, INDICATOR
069-1025-05	OH	RECEIVER, TRANSMITTER
070-0900-001	OH	EMERGENCY BEACON
071-0003-00	AR	REMOTE LIGHT ADAPTOR
071-01548-0200	SV	TCAS ANTENNA
071-01568-0401	OH	TCAS CONTROLLER
071-1033-00	OH	CONTROL ADF
071-1038-03	SV	CONTROL, XPDR
071-1043-02	OH	TRANSPONDER
071-1076-00	OH	RMI CONVERTER
071-1234-00	SV	ADF ANTENNA
071-1284-04	OH	CONTROL ADF
071-1285-00	OH	ANT/RCVR/XMTR UNIT
07196CP	NS	BEARING
07196CP	NS	BEARING
076-200-223	OH	WINDOW ASSY
078-345-0	OH	TIRE
07D34	OH	PRESS SWITCH
07D34	OH	PRESS SWITCH
07D34	OH	PRESS SWITCH
07D34	OH	PRESS SWITCH
07D67	OH	WHEEL
08-8421-020	OH	ACCUMULATOR, HYDRAUL
08C75-15.0	OH	PRESSURE REGULATOR
091-14400	OH	CYLINDER ASSY
091-19700	NE	R/B CALIPER
09168P31	NE	MICROPHONE
098051-0100	OH	ADAPTER, DUAL XPDR
099995-01	OH	SLEEVE
0HS61-002-101	OH	BRACKET
1/2-2-81-301	OH	FLOW METER
1/2-2-81-301	OH	FLOW METER
1/2-2-81-301	OH	FLOW METER
100-0034-11	OH	INDICATOR, TACHOMETER
100-064-5	SV	FITTING
100-1003-01	OH	TURN & BANK IND

100-1003-01	OH	TURN & BANK IND
10012-11	SV	RESET UNIT, START CYCLE
10012-11	SV	RESET UNIT, START CYCLE
10012-11	NS	RESET UNIT, START CYCLE
10012-16	NS	RESET, EXCEED & COUNT
10012-16	SV	RESET, EXCEED & COUNT
1-001-4902-0006	NE	MANUAL
1005457-10	OH	HARNESS
1005707P03	OH	FILTER
100621-18	OH	RETAINER
10062-A-B	OH	TRANSMITTER
1008-408	OH	LATCH ASSY
1008700-4	OH	ACCUMULATOR
1008700-4	OH	ACCUMULATOR
10-0917-1	OH	GASPER ASSY
1-010-086-1	OH	CONE ASSY
1-010-086-1	OH	CONE ASSY
1-010-086-1	OH	CONE ASSY
1-010-086-1	OH	CONE ASSY
1-010-086-1	OH	CONE ASSY
1-010-380-05	OH	LOWER ASSY HALF
1-010-420-05	OH	UPPER ASSY HALF
1-010-430-02	OH	DETECTOR ASSY
1-010-500-08	OH	PARTICAL SEPARATOR
1-010-660-01	NS	INTAKE SCREEN HALF
1-010-660-01	SV	INTAKE SCREEN HALF
1-010-660-03	OH	RING ASSY
1-010-680-01	NE	INTAKE SCREEN ASSY
1011-328-1	OH	SERVO, HYDRAULIC
10114-B	NE	BATTERY
10127-2	NE	SHIM
10-1382-1	OH	HYD. HAND PUMP
10142-11425	OH	ALT
10-1750-75	OH	RESTRICTOR
102-00002	NS	TEMP SWITCH
102-0075D	NS	TRANSDUCER
102-0075D	NS	TRANSDUCER
10204-002	OH	CONTROL TUBE
10204-003	OH	CONTROL TUBE
102-1527	OH	HOUSING ASSY
102244-2	OH	SWITCH
1-030-035-03	OH	RING
1-030-035-04	OH	RING
1-030-073-01	OH	SHIM
1-030-141-02	OH	RETAINER
1-030-159-02	OH	BOLT RETAINING
1-030-180-07	OH	TUBE ASSY

1-030-180-07	OH	TUBE ASSY
1-030-180-07	OH	TUBE ASSY
1-030-180-07	OH	TUBE ASSY
1030-23-1150	OH	RELIEF VALVE
1030-23-1150	OH	RELIEF VALVE
10312N01T00	OH	INDICATOR, T5
10-348450-1	OH	IGNITION UNIT
10-348450-1	OH	IGNITION UNIT
10-348450-1	OH	IGNITION UNIT
10-348450-1	OH	IGNITION UNIT
10-348450-1	OH	IGNITION UNIT
103500-103	SV	DATA/ENTRYUNIT
10-381550-1	OH	IGNITION UNIT
10-381550-1	OH	IGNITION UNIT
10-381550-1	OH	IGNITION UNIT
10-381550-4	OH	IGNITION UNIT
10-381550-4	OH	IGNITION UNIT
10-40029-1	OH	SOLENOID VALVE
10420-11968E	OH	INDICATOR ALTIMETER ENCODING
104208-3	NS	SPINDLE
104258-1	OH	VALVE
1045-409	SV	TUBE ASSY
105-141031	OH	MAIN ROTOR HEAD ASSY
105-14104	OH	MAIN ROTOR HEAD
105-23301-32	NE	L/H FWD WDW W/TRACK
105-23601-32	NE	CLR R/H AFT WDW W/TR
105280-3	OH	AIR SHUTOFF
105280-3	OH	AIR SHUTOFF
10530-000	OH	BRACKET
10544C	OH	HEATER, OIL TO FUEL
10544D	OH	HEATER,FUEL/OIL
10544D	OH	HEATER,FUEL/OIL
10544D	OH	HEATER,FUEL/OIL
10544E	OH	HEATER, FUEL/OIL
105-45023	AR	HYDR UNIT, TANDEM
10595-002	OH	LEVER
10595-003	OH	LEVER
1-060-060-01	OH	NOZZLE
1-060-112-03	OH	COVER
1-060-112-03	OH	COVER
1-060-112-03	OH	COVER
1-060-121-03	NS	CYLINDER, TORQUEMETER
1-060-586-02	OH	SPRING
10-614950-1	OH	EXCITER, IGNITION
10648BH1-1	SV	SWITCH, PUSH LIGHTED
10648BH1-10	SV	SWITCH
10648BH3-3	SV	SWITCH,PUSH LIGHT





1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-090-05	OH	CASE
1-100-186-01	OH	DOWEL
1-100-227-02	OH	SPACER
1-100-227-05	OH	SPACER
1-100-227-06	OH	SPACER RING
1-100-232-08	OH	PLATE
1-100-236-13	OH	BLADE SET COMP
1-100-237-02	OH	PLATE
1-100-237-03	OH	PLATE LOCKING
1-100-237-05	OH	PLATE LOCKING
1-100-237-06	OH	PLATE LOCKING
1-100-237-07	OH	PLATE
1-100-237-09	OH	PLATE
1-100-237-10	OH	PLATE LOCKING
1-100-241-13	NS	BLADE SET
1-100-243-15	OH	BLADE SET
1-100-245-12	OH	BLADE SET COMP
1-100-286-09	NS	BLADE SET
1-100-310-10	OH	VANE ASSY
1-100-330-09	OH	VANE ASSY
1-100-334-05	NS	TUBE ASSY
1-100-345-01	OH	CUP SEALING
1-100-350-06	OH	STATOR
1-100-350-06	OH	STATOR
1-100-382-05	OH	BLADE SET
1-100-383-05	NS	BLADE SET
1-100-385-02	OH	BLADE SET
1-100-385-02	OH	BLADE SET
1-100-385-05	NS	BLADE SET
1-100-403-02	OH	CONE
1-100-408-05	OH	RETAINER
1-100-409-02	OH	CONE
1-100-411-03	OH	CONE REAR
1-100-423-01	NS	LOCK RING
1-100-428-04	OH	BLADE TURBINE
1-100-429-03	OH	WEDGE
1-100-440-07V	NE	EMPELLOR
1100-5	OH	VALVE SAFTY RELIEF
11-005-001-1	OH	RACK, EXTERNAL STORE
11009-1	SV	SPRING

1-101-040-01	AR	GUIDE VANE
1-101-040-01	AR	GUIDE VANE
1-101-386-05	OH	AIR FILTER LOW
1-101-386-05	OH	AIR FILTER LOW
1103P82-2	OH	SWITCH
1103P82-4	NE	PRESSURE SWITCH
1103P82-5	OH	SWITCH, PRESSURE
110666-2	SV	CABLE ASSY
1-110-030-28	OH	NOZZLE TURBINE ASSY
1-110-114-01	OH	STRAINER OIL
1-110-151-01	OH	SCREW
1-110-315-04	OH	HOUSING SEAL
1-110-316-03	NS	DEFLECTOR AIR
1-110-321-02	OH	SHIM
1-110-334-05	OH	FLANGE
1-110-440-02	OH	DEFLECTOR
11-10899	OH	FILTER, ASSY HYD
111302-5	OH	HSI
111302-5	OH	HSI
111302-5	OH	HSI
111302-5	OH	HSI
111-8430-0113-201	SV	LIGHT
1119-588274	OH	VALVE
1119-588274	OH	VALVE
111B0027-3	NE	BALL JOINT
1-120-000-06	OH	NOZZLE
1120-90-5	SV	ATT/INDICATOR
11223-03	SV	INDICATOR FUEL QTY
1-130-001-02	OH	WASHER
1-130-020-08	OH	HOUSING ASSY
1-130-066-02	OH	STUD LINNER
1-130-084-05	OH	SEAL
1-130-091-01	OH	PLATE
1-130-094-02	OH	SEAL
1-130-094-05	OH	SEAL
1-130-097-02	OH	SEAL REAR
1-130-097-03	OH	SEAL
1-130-098-01	OH	BRACKET LINNER
1-130-119-02	OH	PLATE
1-130-218-01	OH	WASHER
1-130-590-02	NE	VAPORIZER
1-130-600-02	NE	COMBUSTION LINER
1-140-029-02	OH	WASHER
1-140-030-11	OH	BOLT
1-140-056-10	OH	CYLINDER POWER
1-140-059-01	OH	SCREW CAP
1-140-062-01	OH	CUP LOCK

1-140-070-01	OH	DEFLECTOR
1-140-111-006	OH	SHIM
1-140-111-01	OH	SPACER
1-140-111-014	OH	SHIM
1-140-111-015	OH	SPACER RING
1-140-130-006	OH	COVER
1-140-142-002	OH	LOCKING PLATE
1-140-202-001	OH	HOUSING SEAL
1-140-208-003	OH	IMPELLER
1-140-208-03	OH	IMPELLER
1-140-208-04	OH	IMPELLER ASSY
1-140-209-003	OH	IMPELLER
1-140-209-004	OH	IMPELLER
1-140-209-04	OH	IMPELLER
1-140-210-018	NS	ROTOR ASSY
1-140-217-001	OH	SHIM
1-140-217-002	OH	SHIM
1-140-217-003	OH	SHIM
1-140-222-002	OH	SEGMENT
1-140-223-001	OH	TURS
11402249-1	OH	COVER
1-140-225-001	OH	LOCK WIRE
1-140-233-001	OH	NUT SHAFT
1-140-233-002	OH	NUT
1-140-233-002	NE	NUT
1-140-233-01	NS	NUT
1-140-242-001	OH	SCREW
1-140-245-001	OH	WASHER
1-140-250-003	OH	RING
1-140-280-001	OH	RING ASSY
1-140-290-02	OH	RATAINER
1-140-420-04	NS	NOZZLE
1-140-420-04	OH	NOZZLE
1-140-420-04	OH	NOZZLE
1-140-420-04	OH	NOZZLE
1-140-420-04	NS	NOZZLE
1-140-420-04	NS	NOZZLE
1-140-420-04	NS	NOZZLE
114D3246-2	OH	DRIVESHAFT ASSY
114D3246-2	OH	DRIVESHAFT ASSY
114D3247-1	OH	DRIVE SHAFT, XMSN
114D3247-1	SV	DRIVE SHAFT, XMSN
114DS440-1	OH	COOLER LUBRICATING OIL
114DS440-1	OH	COOLER LUBRICATING OIL
114HS105-6	OH	CYLINDER ASSY, BRAKE
114HS105-6	OH	CYLINDER ASSY, BRAKE
114HS105-6	OH	CYLINDER ASSY, BRAKE

114HS105-6	OH	CYLINDER ASSY, BRAKE
114HS105-6	OH	CYLINDER ASSY, BRAKE
114R2108-1	NS	BUSHING, SLEEVE
114R3352-900	NS	STAR, NONROTATING
114R3611-1	OH	CONNECTING LINK, AFT
114R3611-1	OH	CONNECTING LINK, AFT
1-150-002-01	OH	ADAPTER
1-150-003-02	NS	HOUSING
1-150-004-002	OH	STRAINER, OIL
1-150-005-002	OH	TUBE ASSY
1-150-040-001	OH	NOZZLE
1-150-042-002	OH	BRACKET
1-150-044-002	OH	NUT
1-150-059-002	OH	BOLT
1-150-100-01	OH	CONNECTOR
1-160-021-01	OH	LEVER
1-160-050-04	OH	ACTUATOR, BLEED BAND
1-160-051-001	OH	PLATE
1-160-054-001	OH	BRACKET
1-160-095-001	OH	PIN
1-160-096-001	OH	NUT
1-160-122-001	OH	WIRE
1-160-123-001	OH	NUT
1-160-124-001	OH	BODY DRAIN
1-160-124-01	OH	BODY DRAIN
1-160-125-01	OH	PLATE
1-160-126-01	OH	VALVE SPRING
1-160-150-04	OH	MANIFOLD
1-160-220-02	OH	VALVE
1-160-251-02	OH	SEAT, HELICAL
1-160-253-01	NS	CLIP BAND
1-160-268-02	NS	SPRING
1-160-272-01	OH	NUT
1-160-278-03	OH	PISTON ACTUATOR
1-160-294-01	OH	SPACER
1-160-304-01	NS	COVER
1-160-309-01	OH	BRACKET
1-160-311-01	OH	BRACKET
1-160-312-01	OH	BRACKET
1-160-403-01	OH	WASHER
1-160-411-01	OH	SHAFT, SPRING
1-160-414-02	OH	LINER
1-160-416-02	OH	SHIM
1-160-420-01	OH	VALVE ASSY
1-160-424-01	OH	VALVE
1-160-440-01	OH	THROTTLE
1-160-444-01	NS	SHAFT

1-160-446-03	OH	HOUSING UPPER
1-160-448-01	OH	PLATE
1-160-464-01	NS	TUBE ASSY
1-160-469-01	OH	CONNECTOR
1-160-482-01	OH	BRACKET
1-160-500-04	NS	DRIVE ASSY
1-160-509-02	OH	BRACKET
1-160-525-01	OH	SPACER
1-160-547-02	OH	BRACKET
1-160-560-01	OH	ADAPTER
1-160-560-01	OH	ADAPTER
1-160-560-01	OH	ADAPTER
1-160-560-01	OH	ADAPTER
1-160-560-01	OH	ADAPTER
1-160-563-01	OH	SPRING
1-160-564-01	OH	BOLT
1-160-585-01	OH	PLUG
1-160-586-02	OH	SPRING HELICAL
1-160-654-01	OH	GASKET
1-160-680-02	OH	BRACKET
1-160-830-01	OH	ROD ASSY
1-160-870-02	SV	BRACKET
1-160-870-02	NS	BRACKET
1-160-880-01	OH	STRAIN
1-160-890-01	OH	BRACKET
1-160-990-01	OH	PISTON
116305-300	SV	APU ASSY
116305-302	OH	APU ASSY
116305-302	OH	APU ASSY
116305-302	OH	APU ASSY
1-170-050-04	OH	ACTUATOR
1-170-130-01	NE	MANIFOLD
1-170-140-02	OH	MANIFOLD
1-170-150-01	OH	MANIFOLD
1-170-160-01	OH	MANIFOLD
1-170-240-46	OH	REGULATOR
1-170-240-93	OH	FUEL CONTROL UNIT
1-170-780-01	OH	FUEL CONTROL UNIT
117-21181-1	NE	L/H CLR COCKPIT LOW
117-21181-2	NE	R/H CLR COCKPIT LOW
117-22500-01	NE	L/H CLEAR CABIN WDW
117-22500-02	NE	R/H CLEAR CABIN WDW
117-24164-1	NE	L/H CLR FWD CREW DOR
117-24164-2	NE	R/H CLR FWD CREW DOR
117-64151-03	OH	BOOST PUMP
117-64151-03	NS	BOOST PUMP
11-84-901	OH	OIL COOLER

1190-01-2111	OH	FMS COMPUTER
1-200-030-31	OH	BLADE SET
120-006C77-76	OH	SHIM
120-030-32-24	OH	SHIM
120-035-52-42	NS	SHIM
120-037-E24-13	OH	SHIM
120-037E55-44	OH	SHIM
120-045-31-12	OH	SHIM
120-046-031-020	OH	SHIM
120-048-16-9	OH	SHIM
12005-1	OH	LEVER
1201F2A1A1A	OH	TRANSDUCER, PRESSURE
12040-1	OH	INDICATOR
120401-1	OH	INDICADOR
120401-1	OH	INDICADOR
120401-1	OH	INDICADOR
120401-1	OH	INDICADOR
12044-1L	OH	PLATE ASSY, LATCH,CA
12044-1R	OH	PLATE ASSY, LATCH CA
12100-1	OH	SIGNAL PROCESSOR
12100-1	OH	SIGNAL PROCESSOR
12140-3P10	OH	UTILITY POWER PACK
12200-1	OH	PRESSURE INDICATOR
12200-1	NS	PRESSURE INDICATOR
12200-1	NS	PRESSURE INDICATOR
12200-1	NS	PRESSURE INDICATOR
12200-1	NS	PRESSURE INDICATOR
12200-1	OH	PRESSURE INDICATOR
12240-1	NS	TOOL, PRESSURE IND
122881C	NE	BOLT
124.444-10	OH	IND. TOT
124.444-12	OH	INDICATOR, TOT
124.444-20	OH	INDICATOR, TOT
124.444-20	OH	INDICATOR, TOT
124.444-20	OH	INDICATOR, TOT
12400-1	OH	DETECTOR ASSY
12400-1	OH	DETECTOR ASSY
124003-10CR0361	NE	HOSE ASSY
1240581-1	OH	ROTOR ASSY
124623-01-13	OH	GYRO
1250160-BSC	OH	COMPRESSOR ASSY
126BC101	OH	BATTERY CHARGER
128416-1	OH	ICING DISPLAY PANEL
12880-3	OH	CONTROL VALVE
12921-1	OH	BRACKET
129580-2	OH	LIMITER, DUCT TEMP
129632-1	OH	DUCT TEMP SENSOR

129632-1	OH	DUCT TEMP SENSOR
129634-3	OH	SENSOR, DUCT TEMP
12AG34	OH	TACH GENERATOR
12F104	OH	VALVE, FLOAT
12F104	OH	VALVE, FLOAT
12F104	OH	VALVE, FLOAT
12J63-125	NS	CLAMP
1-300-013-04	OH	BEARING
1-300-047-01	NS	RING
1-300-136-01	NE	LINE
1-300-139-02	OH	HOSE ASSY
1-300-174-02	NS	SEAL, PLAIN ENCASED
1-300-178-02	NS	ADAPTER
1-300-194-03	OH	SOLENOID VALVE
1-300-216-02	OH	SEAL
1-300-239-02	OH	COUPLING ASSY
1-300-241-01	OH	FILTER ASSEMBLY
1-300-262-01	OH	INSERT
1-300-268-01	OH	PIN
130-035-1	SV	TRANSFORMER
1-300-414-02	OH	CONTROL, OVERSPEED
1-300-414-02	SV	CONTROL, OVERSPEED
1-300-415-03	OH	VALVE
130498A19-32	NS	BELT, AIRCRAFT, BLACK
130498A19-32	NS	BELT, AIRCRAFT, BLACK
130498A19-32	NS	BELT, AIRCRAFT, BLACK
130498A19-32	NS	BELT, AIRCRAFT, BLACK
13059-2	SV	OUTLET
13080-5-275	OH	REGULATOR
131W61D41	NS	PIN
132103-1	OH	HOUSING ASSY
132105-2	OH	BELLMOUTH ASSY
13217E4377	NS	VALVE ASSY BUTTERFLY
13217E4377	NS	VALVE ASSY BUTTERFLY
13217E4377	NS	VALVE ASSY BUTTERFLY
13217E4377	NS	VALVE ASSY BUTTERFLY
13217E4377	NS	VALVE ASSY BUTTERFLY
1323-556301	OH	FLOAT VALVE
133005S2-12D	OH	QUICK DISCONNECT
1332D1	OH	1332D1
1338-90C	OH	PURIFIER CHAMBER
134400-01	OH	DETECTOR PWR FAILURE
134400-01	OH	DETECTOR PWR FAILURE
134653017-1	OH	TAB TRIM
134AMF10303-5	NS	BELLCRANK
134CS30017-1	OH	TRIM TAB
135208-1	OH	FUEL PUMP



1356-583131	OH	ACCUMULATOR
1356-583316	OH	HYD. ACCUMULATOR
1360-526363	OH	SOLENOID
1374-559318M1	OH	VALVE
1374-579167	OH	VALVE
1374-589-367	OH	VALVE
1378-1B	OH	TEMP CONTROLLER
1378-1B	OH	TEMP CONTROLLER
1378-1B	OH	TEMP CONTROLLER
1378-1B	OH	TEMP CONTROLLER
1378-1B	OH	TEMP CONTROLLER
138474-01-01	OH	GYROSCOPE, RATE
138BC101-2	RD	BATTERY CHARGER
1397L000	OH	STEERING ACT
13AT39	NS	MICRO SWITCH
140-009A14T36	NE	WASHER
140100-01-01	OH	ATTITUDE INDICATOR
140100-01-01	OH	ATTITUDE INDICATOR
1403-01-11	OH	DATA TRANSFER UNIT
1403-01-11	OH	DATA TRANSFER UNIT
140540-01-01	OH	GYRO, RATE
140540-01-01	OH	GYRO, RATE
140540-01-01	NS	GYRO, RATE
140540-01-01	OH	GYRO, RATE
141400-01-01	OH	ATTITUDE INDICATOR
14-15	SV	TANK ASSY
143000-103	OH	ACTUATOR ASSY
143-106	NS	LIGHT ASSY
14386-2	NE	LOAD BEAM BUMPER KIT
144852-1	OH	RETAINER
144858-1	OH	SHAFT ASSY
1458-1	NS	MAST WARNING LIGHT
145974-01-03	OH	GYRO, DISPLACEMENT
145DS518-5	OH	FAN, COOLER XMSN
145K41-1	NS	TIRE, TUBELESS
145x55-6-14-430	SV	TIRE
146310-7	OH	COMMAND INST PROCESS
146435-1	OH	SHUT OFF VALVE
147B31A	OH	IND, TEMP
14D2249-1	OH	COVER
14D41	OH	HEATER
14D41	OH	HEATER
150515-1	NE	FAN, COCKPIT
150SG1040-2	OH	ASSY, QUAD
150SG123Q	OH	START/GEN.
151-51211-600	OH	MINISTAB CONTROLLER
15165-4	OH	IMPELLER

15165-4	OH	IMPELLER
15165-5	NS	SWITCH, PRESSURE
1517R	OH	VALVE
152-50988-101	OH	AIR DATA COMPUTER
15275-2	OH	POWER MODULE
1528-19860	OH	INDICATOR, TEMP
152B2	OH	TEMP. IND.
152BL2D	OH	IND. TEMP
152HL2	OH	INDICATOR
152HL2W	OH	TOT INDICATOR
152HL2W	OH	TOT INDICATOR
152HL2W3	OH	INDICATOR
152HL2W3	OH	INDICATOR
152HL2W3	OH	INDICATOR
152HL2W3	OH	INDICATOR
1530879-1	OH	QAD ASSY
1530879-1	OH	QAD ASSY
1530879-1	OH	QAD ASSY
1530880-1	OH	FLANGE ASSY
153-50599-101	OH	JUNKTION BOX
153-52110-103	OH	HUG/IP MODULE
1536-001-15	NS	CIRCUIT BREAKER
1536-001-705	NS	CIRCUIT BREAKER
1536-001-705	SV	CIRCUIT BREAKER
1543-9	OH	SIGNAL
1545592-3	NS	CAPACITOR
1549351-2	NS	IMPELLER, CENTRIFUGAL
15-510512-14	NS	FITTING, STRUCTURAL
1560-00-0P07490	SV	SPACER
156001-3S0250	NE	HOSE ASSY
156001-4S0132	NE	HOSE ASSY
156001-5S0190	NE	HOSE ASSY
156001-8D0241	NE	HOSE ASSY
156005-4S0154	NE	HOSE ASSY
156062E0294D250	NE	HOSE ASSY
1560-739-4575	OH	COVER
1560UH1-587-1	OH	PUMP, HYD
156804B0137S180	NE	HOSE
156F001-3S0096	NE	HOSE ASSY
156F001-8D0424	NE	HOSE ASSY
156F005-6D0320	NE	HOSE ASSY
156F536-3S0164	NE	HOSE ASSY
157080-02-02	OH	GYRO, DISPLACEMENT
157080-02-02	OH	GYRO, DISPLACEMENT
157-100	NS	COUPLING ASSY
15720-2	OH	BRAKE VALVE
157520-0003-C	SV	ANTENNA 'E' FIELD

158580-2	NS	FLOAT COVER
1589-1-D	OH	VOLTAGE REGULATOR
159-01000	NE	DISC
159-58035D	OH	CYLINDER
160200-200	OH	ELECTRONIC SEQUENCE
160C415024-25	NE	LATCH ASSY
160D112019-25	NS	FORMER
161-115	OH	WHEEL HALF, INNER
1615-565-5599	OH	CAP
1615-565-5599	OH	CAP
1620-63244-001	OH	BRACKET
162-105	OH	WHEEL HALF, OUTER
162B203	OH	IND, TEMP
162L3	OH	TEMPERATURE IND
162L3	OH	TEMPERATURE IND
162L3	OH	TEMPERATURE IND
1635-61205-000	NE	BEARING RING SUPPORT
163B2	OH	TEMP. INDICATOR
163B2	OH	TEMP. INDICATOR
163B2	OH	TEMP. INDICATOR
164A168-1	OH	PUMP, BOOST
164A213	OH	FUEL BOOST PUMP
1660-17	OH	T/R SERVO
167N100	OH	PUMP MOTOR
167N100	AR	PUMP MOTOR
167N100	AR	PUMP MOTOR
167N100	OH	PUMP MOTOR
167N100	OH	PUMP MOTOR
167N100	AR	PUMP MOTOR
167N100	OH	PUMP MOTOR
1680-12-026-2715	OH	ROD ENDS
1680-60-933-1331	OH	DOOR HANDLE
1691-2	OH	BRACKETS
169P-910-5L1	OH	OIL TEMP IND
169P910-5L1BW5	OH	IND, TRANS OIL TEMP
169P910-5LBWI	OH	OIL TEMP IND.
16D53	NS	SPRING
17120-1	NE	CARGO HOOK
17149-4	OH	CARGO HOOK
1716803-502	SV	PLATE
172935-001	OH	RELAY
1730-00-140-3792	OH	A/C STEERING BAR
1730-00-992-7417	SV	A/C STEERING BAR
1736995-01	NE	SPRING
175163-5-K2	OH	DOWN LOCK
18164-103	NE	BATTERY
18-1701	OH	OIL PRESSURE IND

18-1701	OH	OIL PRESSURE IND
18-1704	OH	TRANSMITTER, PRESS
18-1814	OH	XMTR, TORQUE
18-2051	OH	INDICATOR, PRESS HYD
182764-150	OH	CLAMP
18-3108-2	OH	TRANSMITTER, PRESS
18420-0	SV	TEMP SENSOR
18420-0	SV	TEMP SENSOR
18422-0	SV	TEMP SENSOR
18422-0	SV	TEMP SENSOR
18422-0	SV	TEMP SENSOR
18423-0	SV	TEMP SENSOR
18423-0	SV	TEMP SENSOR
18423-0	SV	TEMP SENSOR
18509/5-09613	SV	INDICATOR, OAT
18700-1	OH	ACTUATOR, STEERING
189449-1	OH	HEAT EXCHANGER
18P-110846	OH	REGULATOR
19.5X6.75-8-10PR	NE	TIRE
191009-1	OH	HEAT EXCHANGER
1915E31A-10	SV	CONTROL ROD
1944B63	OH	SPACER
1944B74	OH	INSERT
1944B77	OH	WASHER
1944B85	OH	AXLE
1944B85	OH	AXLE
1944C40	OH	PIN, TORQUE ARM
1944D68	OH	LINK
1944D68	OH	LINK
1944D71	OH	LINK ASSY/ SWIVEL
1944D71	SV	LINK ASSY/ SWIVEL
1944E1000A	OH	GEAR ASSY, NOSE
1944E100B	OH	STRUT ASSY, NLG
1944E100C	OH	STRUT ASSY, NLG
1944E200A	OH	ACTUATOR, NLG
1944E64B10	OH	FITTING ASSY
1944E64B10	OH	FITTING ASSY
1944E64B10	OH	FITTING ASSY
1944E67-01	OH	BELLCRANK
1944E67-02	OH	BELLCRANK
1944E67-02	OH	BELLCRANK
1944G200	OH	ACTUATOR
1944L200	OH	ACTUATOR, NOSE
1944L200	OH	ACTUATOR, NOSE
1944M200	OH	ACTUATOR, NLG
1945A10	OH	STOP, PISTON
1945E100A	OH	STRUT ASSY, SHOCK

1945E100A	OH	STRUT ASSY, SHOCK
1945E100B	OH	STRUT ASSY, MLG
1945E100B	OH	STRUT ASSY, MLG
1945E175A01	OH	DRAG BRACE ASSY
1945E175A02	OH	DRAG BRACE ASSY
1945E175A02	OH	DRAG BRACE ASSY
1945E20-10	OH	UNIVERSAL ASSY
1945E31A	OH	POSITION ROD
1945E31A-10	OH	ROD ASSY
1945E31A-10	OH	ROD ASSY
1945E31A-10	OH	ROD ASSY
1945E31A-10	OH	ROD ASSY
1945E31A-10	OH	ROD ASSY
1945E31A-10	OH	ROD ASSY
1945E31A-10	OH	ROD ASSY
1945E72A01	OH	BRACE
1945E72A02	OH	BRACE
1945E76A01	OH	BRACE ASSY
1945E76A02	OH	BRACE ASSY
1945F302	NE	CYLINDER ASSY
1945G200-01	OH	ACTUATOR MLG
1945G200-01	OH	ACTUATOR MLG
1945G200-01	OH	ACTUATOR MLG
1945G200-01	OH	ACTUATOR MLG
1945G200-02	OH	ACTUATOR, MLG
1945G200-02	OH	ACTUATOR, MLG
1945G200-02	OH	ACTUATOR, MLG
1945G200-02	OH	ACTUATOR, MLG
1945G200-02	OH	ACTUATOR, MLG
1A073-1	OH	VALVE, RELIEF
1A073-1	AR	VALVE, RELIEF
1A1050-1A	OH	STATIC INVERTER
1A500-1A-1	NE	INVERTER
1C27-10	NE	CARTRIDGE
1EN1-6	NS	CONTROL SWITCH
1PA1000	OH	ADAPTER PHASE P-1
1S20B25A4X-47	NE	INERTIA REEL
200-01786-0002	NE	FACE PLATE, COMM
20-006-12-17-16	OH	BUSHING
2000667-101	AR	NVIS GOOSENECK LIGHT
2000667-101	NE	NVIS GOOSENECK LIGHT
20-0321-1	NE	LIGHT ASSY
20033-3	OH	TUBE ASSY
20-057-10-27	SV	BOLT
20-057-16-92	SV	BOLTS
20-057-4-15	SV	BOLT
20-057-6-270	SV	BOLT
20-057-6-30D	NS	BOLTS

20-057-8-22	SV	BOLTS
20-057-8-23	OH	BOLTS
200649-010	OH	STARTER
20069-010	OH	STARTER
20069-010	OH	STARTER
20069-010	OH	STARTER
20069-010	OH	STARTER
20069-010	OH	STARTER
20069-010	OH	STARTER
20-069-5HI0	OH	BOLTS
200DC (28)	OH	DIRECTIONAL GYRO
20-100	NS	SHAFT, FLEX
201-0001	NE	TORQUE CONVERTER
2017A-02	SV	AIR DATA COMPUTER
202030-1-9	OH	TURBINE
202030-1-9	OH	TURBINE
202306-1	OH	COVER
20268-401	NE	LATCH ASSY
203-003-009	OH	-
203-022-017	OH	IND. P/T ENG.
20-360-3045-2	OH	PLATE ASSY
203SZCC	NE	BEARING
204-001-006-001	NS	CLEVIS ASSEMBLY
204-001-007-001	OH	CLEVIS
204-001-011-013	OH	TUBE ASSY.
204-001-011-017	OH	TUBE ASSY
204-001-012-013	OH	TUBE ASSY
204-001-012-013	OH	TUBE ASSY
204-001-012-013	OH	TUBE ASSY
204-001-012-013	OH	TUBE ASSY
204-001-016-013	OH	TUBE ASSY
204-001-018-027	OH	TUBE ASSY
204-001-018-027	OH	TUBE ASSY
204-001-027-023	OH	TUBE ASSY
204-001-027-023	SV	TUBE ASSY
204-001-027-025	SV	CONTROL TUBE
204-001-029-001	OH	FORCE GRAIDIENT
204-001-038-001	SV	CAP
204-001-042-001	OH	CYLINDER ASSY
204-001-045-005	OH	FORCE GRADIENT ASSY
204-001-045-009	OH	FORCE GRADIENT ASSY
204-001-045-101	OH	FORCE GRADIANT ASSY
204-001-047-001	NS	LINK ASSY
204-001-047-001	OH	LINK ASSY
204-001-048-003	SV	SHAFT
204-001-054-001	OH	BUSHING
204-001-068-001	OH	GRIP ASSY
204-001-070-005	OH	TUBE ASSY

204-001-072-007	OH	TUBE ASSY
204-001-102-001	NS	SUPPORT
204-001-118-001	SV	BEARING
204-001-148-001	OH	BELLCRANK
204-001-178-011	OH	SUPPORT ASSEMBLY
204-001-194-003	OH	ELBOW
204-001-195-001	OH	SUPPORT
204-001-205-001	OH	TUBE ASSY
204-001-215-007	OH	TUBE ASSY
204-001-217-041	NS	BOOT ASSY
204-001-224-001	OH	SLEEVE
204-001-225-001	OH	TUBE ASSY
204-001-230-001	OH	PINION GEAR
204-001-236-001	OH	LINKAGE
204-001-236-005	OH	LINKAGE ASSY
204-001-243-001	OH	BOX ASSY
204-001-248-001	OH	INSERT (WASHER)
204-001-256-001	OH	FRICTION ARMS
204-001-258-001	NS	SHAFT, THROTTLE CONTROL
204-001-271-001	NS	GRIP ASSY
204-001-275-005	NS	NUT ASSY
204-001-291-005	OH	COLLECTIVE STICK
204-001-295-001	NS	LEVER
204-001-295-005	OH	LEVER ASSY
204-001-295-016	OH	GEAR
204-001-310-001	NS	BEARINGS
204-001-330-000	OH	BEARING HOUSING
204-001-330-001	OH	SUPPORT ASSY.
204-001-330-001	OH	SUPPORT ASSY.
204-001-330-005	NE	SUPPORT ASSY
204-001-333-001	OH	SUPPORT ASSY, CYCLIC STICK
204-001-336-007	NE	SUPPORT & LEVER ASSY
204-001-337-003	OH	GIMBAL
204-001-337-003	NE	GIMBAL
204-001-340-001	NE	SUPPORT
204-001-340-001	OH	SUPPORT
204-001-341-001	NE	SUPPORT ASSY
204-001-342-007	OH	STICK ASSEMBLY
204-001-344-001	NS	STUD
204-001-351-001	OH	BELLCRANK
204-001-352-005	OH	BELLCRANK
204-001-353-001	OH	LINK ASSY
204-001-354-001	OH	LINK ASSY
204-001-355-001	SV	LINK ASSY
204-001-357-005	NE	LEVER ASSEMBLY
204-001-357-005	OH	LEVER ASSEMBLY
204-001-362-001	OH	UNIBALL SUPPORT ASSY

204-001-362-001	NE	UNIBALL SUPPORT ASSY
204-001-363-015	OH	STICK ASSY
204-001-363-015	OH	STICK ASSY
204-001-363-017	NE	STICK ASSY, CYCLIC
204-001-363-017	NE	STICK ASSY, CYCLIC
204-001-363-017	OH	STICK ASSY, CYCLIC
204-001-363-029	OH	STICK ASSY
204-001-363-029	OH	STICK ASSY
204-001-364-001	OH	STICK ASSY
204-001-365-001	OH	COLLAR
204-001-368-003	OH	STICK
204-001-373-001	OH	BELLCRANK ASSY
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-003	OH	MAGNETIC BRAKE
204-001-376-105	OH	MAGNETIC BRAKE
204-001-376-107	OH	MAGNETIC BRAKE
204-001-514-001	OH	SUPPORT ASSY
204-001-516-015	NS	BRACKET ASSY
204-001-559-001	OH	BELLCRANK ASSY
204-001-602-003	OH	TUBE ASSEMBLY
204-001-603-001	OH	LEVER
204-001-603-001	OH	LEVER
204-001-606-001	OH	BEARING
204-001-626-001	OH	LOCK
204-001-663-001	OH	TUBE ASSY
204-001-700-001	OH	SUPPORT ASSY
204-001-700-001	OH	SUPPORT ASSY
204-001-701-001	OH	SUPPORT ASSY
204-001-702-001	SV	PEDAL PAD
204-001-702-005	OH	PEDAL ASSY L/H
204-001-702-006	OH	PEDAL ASSY R/H
204-001-702-009	OH	PEDAL ARM
204-001-757-005	OH	LEVER ASSY
204-001-760-001	OH	BELLCRANK
204-001-760-001	OH	BELLCRANK
204-001-762-013	OH	ADJUSTER ASSY
204-001-762-015	OH	ADJUSTER ASSY
204-001-762-023	OH	ADJUSTER ASSY
204-001-762-023	OH	ADJUSTER ASSY
204-001-763-043	OH	PAN ASSY



204-001-772-001	OH	BUSHING
204-001-776-001	OH	CAP ASSY
204-001-779-001	OH	QUADRANT ASSY
204-001-779-005	OH	QUADRANT ASSY
204-001-779-005	SV	QUADRANT ASSY
204-001-779-007	OH	QUADRANT ASSY
204-001-784-001	OH	LINK ASSY
204-001-793-005	OH	SUPPORT ASSY
204-001-793-005	NS	SUPPORT ASSY
204-001-795-001	OH	SUPPORT
204-001-795-005	OH	SUPPORT ASSY
204-001-800-001	NE	BELLCRANK ASSY
204-001-800-001	NS	BELLCRANK ASSY
204-001-800-001	OH	BELLCRANK ASSY
204-001-800-010	OH	BELLCRANK
204-001-803-001	NS	CLEVIS, ROD END
204-001-809-001	OH	BELLCRANK
204-001-809-001	NS	BELLCRANK
204-001-809-007	OH	BELLCRANK
204-001-809-007	NS	BELLCRANK
204-001-809-007	NS	BELLCRANK
204-001-810-009	SV	SUPPORT ASSY.
204-001-821-007	OH	SPACER
204-001-825-003	NS	BRACKET, PULLEY
204-001-832-001	OH	BELLCRANK ASSY
204-001-832-003	OH	SUPPORT
204-001-844-001	OH	LEVER ASSY
204-001-854-001	OH	SUPPORT ASSY
204-001-944-001	OH	BEAM
204-001-950-001	OH	BELLCRANK ASSY
204-001-950-001	NS	BELLCRANK ASSY
204-001-952-001	OH	CONTROL TUBE
204-001-960-001	OH	BUSHING
204-001-964-003	OH	BUSHING
204-001-965-001	OH	SUPPORT ASSY
204-001-966-001	OH	BEAM
204-010-083-001	OH	SPRING
204-010-191-001	NE	RESERVOIR
204-010-224-001	SV	SET SCREW
204-010-404-001	OH	RING ASSY
204-010-413-029	NS	BUSHING
204-010-422-023	NS	LINER
204-010-437-007	NS	NUT
204-010-479-011	OH	DRIVE PLATE
204-010-481-001	OH	NUT, MAST
204-010-506-005	SV	GLASS, SIGHT
204-010-708-003	OH	NUT CRIP

204-010-711-001	OH	NUT
204-010-711-003	OH	NUT
204-010-712-005	OH	RING
204-010-721-001	OH	RETAINER
204-010-724-005	NS	CONE SET ASSY
204-010-747-005	OH	GUARD
204-010-765-001	NS	CONTROL NUT ASSY
204-010-766-001	NS	SPACER
204-010-767-001	OH	NUT
204-010-777-005	NS	LINK ASSY
204-010-777-015	NS	LINK ASSY
204-010-781-005	NS	YOKE
204-010-781-009	NS	YOKE
204-010-781-009	NS	YOKE
204-010-786-001	NS	HOUSING
204-010-788-001	NS	CAP ASSY
204-010-789-001	NS	SHIM
204-010-922-007	SV	ADAPTER SET
204-010-937-007	OH	DAMPER ASSY
204-010-937-009	OH	DAMPER M/R
204-010-937-009	OH	DAMPER M/R
204-010-937-009	NE	DAMPER M/R
204-010-937-103	OH	DAMPER
204-011-107-001	NE	LINER
204-011-118-001	NS	BEARING
204-011-121-121	OH	GRIP ASSY
204-011-124-003	SV	STAB BAR ASSY 01
204-011-128-001	SV	BEARING, UNIVERSAL
204-011-130-001	NS	LINER
204-011-143-001	NE	BARREL ASSY
204-011-156-001	OH	WASHER
204-011-157-001	OH	STATIC STOP
204-011-161-001	OH	BRACKET
204-011-164-001	OH	STOP
204-011-174-001	OH	SPACER
204-011-175-001	OH	WASHER
204-011-304-001	OH	SUPPORT ASSY
204-011-305-001	OH	FITTING
204-011-310-001	NS	BEARING SET
204-011-311-001	OH	WASHER
204-011-314-001	OH	ROD
204-011-347-001	NS	STUD
204-011-395-001	OH	FITTING
204-011-402-005	NS	RING ASSY, STATIONARY
204-011-409-001	NS	BEARING SET
204-011-410-001	OH	LINER (SPACE SET)
204-011-410-001	NE	LINER (SPACE SET)

204-011-446-003	OH	PIN
204-011-458-001	OH	PLATE
204-011-707-001	NS	LOCK PLATE
204-011-711-001	NS	CROSSHEAD ASSY
204-011-716-001	OH	RING, OUTER
204-011-718-001	OH	WASHER
204-011-721-001	NS	RING
204-011-723-001	OH	NUT
204-011-725-001	NS	SPRING
204-011-730-001	OH	NUT
204-011-731-001	OH	SPACER
204-011-732-001	NS	RING
204-011-762-001	NS	LINK ASSY
204-011-762-001	NS	LINK ASSY
204-011-764-001	NE	BEARING
204-011-800-121	NE	T/R ASSY
204-011-803-001	OH	CLEVIS
204-012-101-029	OH	MAIN ROTOR HUB
204-012-101-101	OH	HUB ASSY, MAIN ROTOR
204-020-105-001	OH	FORK
204-030-092-001	NE	BRACE ASSY
204-030-173-037	OH	PANEL, ENG. DECK
204-030-291-015	OH	CAP ASSY
204-030-321-045	OH	COVER
204-030-353-003	OH	STOP ASSY
204-030-362-007	NS	BOLT
204-030-362-007	OH	BOLT
204-030-437-001	OH	SPRING
204-030-485-001	NS	SPINDLE
204-030-485-001	NS	SPINDLE
204-030-486-001	OH	SPRING, HEL
204-030-486-061	OH	SPRING HEL
204-030-496-003	OH	CATCH
204-030-498-001	OH	LINK
204-030-502-001	NS	SUPPORT
204-030-504-005	SV	DOOR LATCH
204-030-665-013	NS	CHANNEL
204-030-666-044	NS	WINDSHIELD RH
204-030-666-087	NE	L/H WINDSHIELD
204-030-671-003	OH	SUPPORT
204-030-790-115	SV	HINGE PIN ASSY
204-030-792-004	SV	PLATE ASSY
204-030-793-003	OH	BRACKET
204-030-800-289	OH	TAIL BOOM
204-030-800-401	OH	TAIL BOOM
204-030-814-045	NS	DOOR
204-030-814-103	OH	DOOR

204-030-818-007	OH	FITTING
204-030-818-101	OH	SUPPORT
204-030-819-021	NE	FITTING
204-030-819-021	OH	FITTING
204-030-829-035	OH	DOOR ASSY
204-030-853-125	OH	DOOR ASSY
204-030-853-126	OH	DOOR ASSY
204-030-853-126	OH	DOOR ASSY
204-030-853-135	OH	CREW DOOR, L/H
204-030-853-137	OH	DOOR ASSY LH PILOT
204-030-853-138	OH	DOOR ASSY
204-030-853-138	OH	DOOR ASSY
204-030-853-155	OH	DOOR ASSY
204-030-853-156	OH	DOOR ASSY
204-030-853-156	OH	DOOR ASSY
204-030-860-003	OH	RETAINER
204-030-878-001	OH	PIN
204-030-913-003	SV	WASHER
204-030-913-005	SV	WASHER
204-030-941-004	OH	SUPPORT PLATE
204-030-946-001	NS	SUPPORT
204-030-957-002	OH	SUPPORT
204-030-958-001	NS	SUPPORT
204-030-958-002	NS	SUPPORT
204-030-959-001	NS	SUPPORT
204-030-962-001	NS	KNOB
204-030-987-001	OH	LINK ASSY
204-031-243-001	OH	WASHER
204-031-244-005	OH	BOLT ASSY
204-031-255-001	NS	WASHER
204-031-321-053	OH	COVER
204-031-393-001	AR	SHACKLE
204-031-467-007	NS	HINGE
204-031-467-011	NS	HINGE
204-031-467-011	NS	HINGE
204-031-468-001	NS	HINGE
204-031-468-001	NS	HINGE
204-031-504-005	SV	BOLT ASSY.
204-031-658-001	NS	HINGE
204-031-658-002	OH	HINGE
204-031-658-002	OH	HINGE
204-031-762-002	NS	SPRING ASSY
204-031-762-003	NS	SPRING
204-031-837-011	NS	HINGE
204-031-837-012	NS	HINGE
204-031-920-003	OH	DAMPER, FRICTION
204-031-920-003	OH	DAMPER, FRICTION

204-032-416-001	OH	HINGE
204-032-416-002	OH	HINGE
204-032-668-009	OH	PANEL ASSY
204-032-725-002	OH	SUPPORT ASSEMBLY
204-032-725-004	OH	SUPPORT ASSEMBLY,LH
204-032-725-009	OH	SUPPORT ASSEMBLY
204-032-732-001	SV	CLEVIS
204-032-733-001	SV	CAM
204-032-743-011	SV	COVER, EXTERIOR
204-032-743-011	AR	COVER, EXTERIOR
204-032-743-11	NS	COVERS
204-032-800-005	OH	TAIL BOOM
204-032-836-011	OH	PANEL ASSY
204-040-003-033	OH	QUILL ASSY
204-040-003-035	OH	QUILL ASSY
204-040-003-037	OH	GEARBOX, 42 DEG
204-040-003-037	OH	GEARBOX, 42 DEG
204-040-007-003	SV	RETAINER
204-040-012-013	OH	GEARBOX, T/R
204-040-086-001	NE	SHIM
204-040-103-007	OH	GEAR
204-040-104-013	OH	PINION ASSY
204-040-105-021	OH	PINION ASSY
204-040-108-007	OH	PINION
204-040-112-001	SV	SPROCKET WHEEL
204-040-115-001	OH	NUT/PLAIN ROUND
204-040-115-011	NE	GEAR
204-040-116-003	OH	LOCK WASHER
204-040-117-003	OH	ADAPTER, MAST DRIVE
204-040-121-003	OH	SHAFT
204-040-122-001	OH	NUT
204-040-123-001	OH	LOCK RING
204-040-130-005	OH	SHAFT
204-040-131-001	OH	NUT
204-040-132-001	OH	BEARING RACE
204-040-134-005	OH	WASHER
204-040-136-007	NS	BEARING
204-040-136-009	NE	BEARING
204-040-142-001	OH	BEARING
204-040-143-001	OH	BEARING
204-040-148-003	OH	PLATE
204-040-159-003	OH	RETAINING PLATE
204-040-170-005	OH	BEARING
204-040-174-001	OH	COVER ASSY
204-040-182-003	OH	SHIM
204-040-183-001	SV	SPRING
204-040-184-001	OH	NUT

204-040-184-001	OH	NUT
204-040-184-001	OH	NUT
204-040-185-003	OH	NUT
204-040-186-001	OH	RETAINING NUT
204-040-187-001	OH	PLUG
204-040-189-001	NE	GEAR ASSY
204-040-190-007	OH	INNER RACE
204-040-191-007	NS	RACE
204-040-194-001	SV	WASHER
204-040-197-003	OH	SHAFT
204-040-199-001	OH	RETAINER
204-040-207-005	OH	QUILL ASSY
204-040-223-011	OH	TUBE
204-040-227-001	OH	SPRING
204-040-230-001	OH	NUT
204-040-237-001	OH	SCREEN ASSY
204-040-250-009	NS	SLEEVE ASSY
204-040-250-009	NS	SLEEVE ASSY
204-040-250-009	OH	SLEEVE ASSY
204-040-251-001	OH	PLATE
204-040-252-001	OH	RETAINING NUT
204-040-256-007	OH	SLEEVE
204-040-257-001	SV	LINER
204-040-259-003	OH	RETAINING PLATE
204-040-261-013	OH	OIL JET ASSY
204-040-262-021	SV	OIL JET ASSY
204-040-269-003	NS	BEARING
204-040-270-003	SV	BEARING
204-040-288-011	OH	OIL JET ASSY
204-040-298-001	NS	JET
204-040-298-001	OH	JET
204-040-305-001	OH	SLEEVE ASSY
204-040-306-011	OH	SLEEVE ASSY
204-040-308-001	AR	RING
204-040-318-001	NS	LINER
204-040-321-001	OH	GEAR SUPPORT
204-040-322-001	OH	RETAINER
204-040-324-005	OH	SHAFT
204-040-326-007	OH	OIL JET ASSY
204-040-327-001	OH	OIL JET ASSY
204-040-328-001	NS	PLATE
204-040-329-001	OH	GEAR
204-040-330-003	OH	GEAR
204-040-331-005	OH	RING GEAR
204-040-337-001	OH	LINER
204-040-338-001	OH	LINER
204-040-341-001	OH	TUBE



204-040-600-009	OH	HANGAR ASSY
204-040-600-009	OH	HANGAR ASSY
204-040-602-005	OH	SHAFT, SHOULDER
204-040-602-005	OH	SHAFT, SHOULDER
204-040-603-001	OH	INNER COUPLING
204-040-603-001	OH	INNER COUPLING
204-040-603-001	OH	INNER COUPLING
204-040-603-007	NS	COUPLING
204-040-607-001	OH	RETAINER
204-040-607-003	SV	RETAINER
204-040-607-007	OH	RETAINER
204-040-607-007	SV	RETAINER
204-040-608-001	SV	SPRING
204-040-610-001	SV	PLATE ASSY
204-040-610-001	SV	PLATE ASSY
204-040-612-001	OH	BOLT
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-614-003	NS	COUPLING
204-040-616-001	SV	PLATE
204-040-616-005	SV	PLATE
204-040-620-003	OH	DRIVE SHAFT
204-040-620-003	OH	DRIVE SHAFT
204-040-620-009	SV	SHAFT, T/R DRIVE
204-040-620-011	SV	DRIVE SHAFT, T/R
204-040-629-005	SV	RETAINER ASSY
204-040-629-005	OH	RETAINER ASSY
204-040-630-005	OH	ADAPTER
204-040-631-001	OH	BOLT
204-040-634-003	OH	WASHER
204-040-680-001	OH	HOUSING
204-040-680-003	OH	HOUSING
204-040-681-001	OH	RING
204-040-682-001	OH	RING
204-040-683-001	OH	RING
204-040-684-001	OH	SEAL
204-040-686-001	NS	DRIVE SHAFT
204-040-686-001	NS	DRIVE SHAFT
204-040-686-001	OH	DRIVE SHAFT
204-040-688-009	OH	COUPLING



204-040-689-003	OH	RETAINER
204-040-700-001	OH	PINION
204-040-700-001	OH	PINION
204-040-701-003	OH	SPIRAL BEVEL GEAR
204-040-722-001	OH	TUBE
204-040-723-001	SV	TUBE ASSY
204-040-724-003	OH	OIL COOLER ASSY
204-040-731-003	OH	BRACKET ASSY
204-040-757-001	NE	LINER
204-040-760-003	OH	FILTER ASSY
204-040-760-003	OH	FILTER ASSY
204-040-760-003	OH	FILTER ASSY
204-040-760-005	OH	FILTER ASSY
204-040-760-005	NE	FILTER ASSY
204-040-760-011	OH	HEAD ASSY FILTER
204-040-760-013	NS	FILTER ELEMENT
204-040-760-101	OH	FILTER ASSY, OIL
204-040-762-001	NS	GEAR, PINION
204-040-762-001	OH	GEAR, PINION
204-040-763-001	OH	SPUR
204-040-763-001	OH	SPUR
204-040-763-001	NE	SPUR
204-040-780-001	OH	LOCK SPRING
204-040-787-001	SV	BOLT
204-040-788-001	NS	NUT
204-040-788-001	SV	NUT
204-040-790-001	NS	CUP
204-040-790-001	OH	CUP
204-040-809-003	SV	CLAMP ASSY
204-040-813-001	NS	BOLT
204-040-816-003	OH	VALVE, BY-PASS
204-040-816-003	OH	VALVE, BY-PASS
204-040-929-019	OH	COVER
204-040-929-021	NS	GASKET
204-040-929-025	OH	COVER
204-040-929-027	NS	PAD
204-040-929-029	OH	COVER, LIFT TOOL
204-048-422-005	OH	SOUTHERN
204-050-006-003	OH	BALL
204-050-013-003	OH	TUBE ASSY
204-050-104-001	OH	FITTING
204-050-104-001	SV	FITTING
204-050-107-013	SV	SADDLE
204-050-139-001	OH	WASHER
204-050-143-001	SV	EYE BOLT
204-050-143-003	SV	EYEBOLT
204-050-143-101	SV	EYEBOLT

204-050-149-001	OH	STEP
204-050-149-001	OH	STEP
204-050-151-005	NS	NUT ASSY, PLATE
204-050-205-005	SV	WASHERS
204-050-223-001	NS	NUT ASSY
204-050-237-001	OH	SUPPORT ASSY
204-050-238-001	OH	SADDLE
204-050-239-003	OH	BOLT
204-050-647-009	OH	PLUNGER ASSY
204-060-013-003	OH	SHUT-OFF VALVE
204-060-056-001	OH	NUT
204-060-061-001	OH	TUBE ASSY
204-060-093-001	NS	SUPPORT ASSY
204-060-098-001	NS	TUBE ASSY
204-060-102-009	NS	PILLOW BLOCK
204-060-102-011	NS	PILLOW BLOCK
204-060-120-001	OH	ARM
204-060-123-001	OH	EYE BOLT
204-060-138-001	OH	SHIM
204-060-140-033	OH	SHIM
204-060-161-001	OH	TRUNNION
204-060-162-001	OH	SPRING
204-060-165-001	OH	NUT
204-060-169-001	OH	WASHER
204-060-200-001	OH	START/GEN
204-060-210-103	SV	SCREEN ASSY
204-060-217-009	NS	SCREEN ASSY
204-060-217-011	NS	SCREEN ASSY
204-060-217-013	NS	SCREEN ASSY
204-060-218-005	OH	BAFFLE ASSY
204-060-302-019	OH	TAILPIPE ASSY
204-060-302-025	OH	TAIL PIPE
204-060-443-017	OH	DUCT ASSY
204-060-444-003	OH	VALVE
204-060-444-003	OH	VALVE
204-060-448-003	OH	BLOWER, OIL COOLER
204-060-472-001	OH	COVER ASSY
204-060-534-007	OH	GASKET
204-060-549-005	OH	OIL COOLER
204-060-549-007	OH	COOLER, OIL
204-060-592-001	NS	SCREEN ASSY
204-060-592-001	NE	SCREEN ASSY
204-060-636-021	NE	TUBE ASSY
204-060-656-007	NE	CAP ASSY
204-060-671-001	OH	BRACKET ASSY
204-060-671-003	NS	BRACKET ASSY
204-060-683-001	OH	TANK UNIT

204-060-683-003	OH	TANK UNIT
204-060-747-001	OH	CLEVIS
204-060-762-001	OH	ACTUATOR, LINEAR
204-060-762-005	OH	ACTUATOR, LINEAR
204-060-762-103	OH	ACTUATOR, LINEAR
204-060-767-001	SV	RETAINER
204-060-786-001	OH	BRACKET
204-060-787-003	OH	CAM BOX ASSY
204-060-787-003	OH	CAM BOX ASSY
204-060-787-003	NE	CAM BOX ASSY
204-060-797-005	OH	BRACKET ASSY
204-060-815-213	OH	FIREWALL ASSY, FWD
204-060-847-005	NE	ROD END
204-060-868-001	NS	RING ASSY
204-060-887-001	OH	SPRING
204-060-934-001	OH	BRACKET
204-060-936-001	OH	SHIM ASSY
204-060-948-001	OH	FITTING ASSY LATCH
204-061-246-001	NS	FRAME ASSEMBLY
204-061-606-003	OH	IND. FUEL QTY
204-061-634-001	OH	FITTING
204-061-682-001	OH	TUBE ASSY
204-061-709-001	NS	CAM
204-061-717-001	NS	BEARING
204-062-520-003	OH	VALVE ASSY
204-062-520-003	OH	VALVE ASSY
204-062-540-001	NS	BLOWER ASSY
204-062-540-001	AR	BLOWER ASSY
204-062-540-001	AR	BLOWER ASSY
204-062-540-001	OH	BLOWER ASSY
204-062-540-001	NS	BLOWER ASSY
204-062-540-003	OH	TURBINE FAN
204-062-610-003	OH	IND. FUEL QTY
204-070-023-003	OH	SEAT ASSY
204-070-027-001	OH	BLOCK
204-070-041-001	OH	CABLE
204-070-083-001	OH	SPRING
204-070-155-001	OH	DUAL TACH
204-070-158-001	OH	BLOWER
204-070-186-001	OH	PIN
204-070-240-001	OH	SHAFT
204-070-244-001	SV	ROD ASSY.
204-070-263-000	OH	HEAT EXCHANGER
204-070-285-007	OH	LEVER REMOTE
204-070-313-005	OH	ROD ASSY
204-070-348-001	NE	ROD END
204-070-471-021	AR	COVER

204-070-482-001	OH	ROTARY SELECTOR
204-070-482-001	NE	ROTARY SELECTOR
204-070-482-001	RP	ROTARY SELECTOR
204-070-522-019	NE	BLANKET,SOUND PROOF
204-070-522-025	NE	BLANKET ASSY
204-070-524-001	NS	HANDLE
204-070-527-001	OH	SUPPORT ASSY
204-070-537-211	OH	PEDESTAL ASSEMBLY
204-070-723-001	NS	HEADREST
204-070-854-001	OH	ROLLER ASSY
204-070-907-001	OH	MOTOR/CONVERTER
204-070-907-001	OH	MOTOR/CONVERTER
204-070-907-001	OH	MOTOR/CONVERTER
204-070-907-001	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-002	OH	MOTOR/CONVERTER
204-070-907-102	OH	MOTOR/CONVERTER
204-070-989-001	NE	PEDAL ASSY, RELEASE
204-070-989-001	SV	PEDAL ASSY, RELEASE
204-070-993-001	OH	FITTING
204-071-527-001	OH	TUBE ASSY
204-072-003-001	OH	PIN
204-072-054-001	NS	BRACKET
204-072-129-003	OH	DUAL TACH
204-072-236-001	OH	VALVE, HYDRAULIC
204-072-236-001	OH	VALVE, HYDRAULIC
204-072-261-003	OH	BLOWER ASSY.
204-072-263-007	OH	EXCHANGER, HEAT
204-072-263-009	OH	HEAT EXCHANGER
204-072-426-001	OH	ELBOW
204-072-450-001	OH	NOZZLE
204-072-475-001	OH	MIXING VALVE
204-072-475-001	OH	MIXING VALVE
204-072-721-001	AR	FITTING
204-072-727-013	OH	HEADREST ASSY
204-072-727-013	OH	HEADREST ASSY
204-072-727-013	OH	HEADREST ASSY
204-072-727-013	OH	HEADREST ASSY
204-072-727-013	OH	HEADREST ASSY
204-072-822-001	OH	PLATE/SCUFF
204-072-901-001	OH	BUMPER ASSY.
204-072-905-003	OH	RING,SUSPENTION

204-072-915-103	OH	SUSPENSION ASSY
204-072-915-103	OH	SUSPENSION ASSY
204-072-915-103	OH	SUSPENSION ASSY
204-072-915-103	OH	SUSPENSION ASSY
204-072-919-001	OH	BLOCK BEARING, CARGO
204-072-920-001	OH	TUBE, CARGO SUSPENSION
204-072-928-001	OH	LEVER ASSY
204-075-144-009	OH	CONTAINER ASSY
204-075-153-001	OH	BAR
204-075-242-009	OH	SPACER
204-075-297-001	OH	PANEL, LIGHTED
204-075-567-013	NS	CHANNEL
204-075-705-001	OH	CONTROL PANEL
204-075-705-017	OH	FIRE WARN. INDICATOR
204-075-705-027	OH	PANEL, CAUTION
204-075-705-029	OH	CONTROL PANEL
204-075-705-045	OH	PANEL, FAULT
204-075-705-045-HII	OH	PANEL, FAULT
204-075-705-077	NE	CAUTION PANEL
204-075-812-013	OH	ENGINE CONTROL ASSY
204-075-939-015	OH	CONNECTOR
204-076-036-005	OH	CYLINDER ASSY, MASTER
204-076-052-009	OH	HYD. SERVO
204-076-053-001	OH	SERVO ASSY
204-076-053-005	OH	T/R SERVO
204-076-053-005	OH	T/R SERVO
204-076-053-011	OH	SERVO ASSY
204-076-055-001	OH	VALVE, IRREVERSIBLE
204-076-055-101	OH	VALVE, IRREVERSABLE
204-076-057-001	NS	PRESSURE SWITCH
204-076-065-005	OH	PUMP, HYDRAULIC
204-076-071-001	OH	VALVE
204-076-071-001	NS	VALVE
204-076-162-003	OH	BUSHING
204-076-201-003	OH	HOUSING
204-076-202-001	OH	NUT
204-076-278-001	OH	SPRING
204-076-290-003	OH	PLUG, MASTER CYL
204-076-293-001	OH	PLUG ASSY
204-076-294-003	OH	PLUG
204-076-296-005	OH	SLEEVE
204-076-437-001	AR	CHECK VALVE
204-076-504-001	OH	VALVE, SOLENOID
204-076-504-001	OH	VALVE, SOLENOID
204-092-450-011	SV	DEFROST DUCT
204-200-011-045	OH	TAILBOOM
204-205-212-214	NE	WINDSHIELD

204-704-037-003	NS	KIT HOD
204-706-053-041	OH	STRAP
204-706-103-001	OH	DECAL
205-001-011-007	SV	CONTROL TUBE
205-001-011-009	OH	CONTROL TUBE
205-001-011-033	OH	TUBE ASSY
205-001-012-019	OH	CONN LINK
205-001-012-025	OH	TUBE, CONTROL
205-001-013-005	SV	CONTROL TUBE
205-001-018-001	SV	TUBE ASSY.
205-001-019-001	OH	TUBE ASSY
205-001-030-001	NE	CLEVIS ASSY
205-001-030-001	OH	CLEVIS ASSY
205-001-046-001	OH	GRIP, CYCLIC
205-001-103-001	OH	STOP
205-001-105-001	NS	STOP
205-001-110-001	OH	STICK ASSY
205-001-116-001	OH	STICK ASSY
205-001-122-003	OH	TUBE ASSEMBLY
205-001-124-001	SV	COLECTIVE STICK
205-001-259-005	OH	CONTROL ASSY
205-001-302-001	OH	SUPPORT ASSY
205-001-303-001	OH	SUPPORT
205-001-307-005	OH	BELLCRANK
205-001-376-003	SV	ANTI TORQUE CONTROL
205-001-701-001	OH	SUPPORT ASSY
205-001-704-001	OH	BELLCRANK ASSY.
205-001-731-001	OH	SUPPORT ASSY
205-001-732-005	OH	PLATE, TRUNNION
205-001-733-005	OH	SUPPORT
205-001-733-005	OH	SUPPORT
205-001-775-001	OH	PEDAL ASSY LH
205-001-775-001	OH	PEDAL ASSY LH
205-001-775-002	OH	PEDAL ASSY RH
205-001-776-001	OH	FAIRLEAD
205-001-800-001	OH	BUSHING
205-001-810-001	SV	BELLCRANK 01
205-001-903-001	OH	SUPPORT 01
205-001-905-001	OH	BELLCRANK ASSY
205-001-905-001	OH	BELLCRANK ASSY
205-001-909-001	OH	SUPPORT ASSY.
205-001-909-005	OH	SUPPORT ASSEMBLY
205-001-910-001	OH	SUPPORT ASSY
205-001-910-001	OH	SUPPORT ASSY
205-001-910-001	OH	SUPPORT ASSY
205-001-910-001	OH	SUPPORT ASSY
205-001-910-005	OH	SUPPORT

205-001-913-001	OH	SUPPORT ASSY
205-001-913-001	OH	SUPPORT ASSY
205-001-915-001	OH	BELLCRANK
205-001-916-001	OH	BELLCRANK
205-001-918-001	OH	SUPPORT ASSEMBLY
205-001-918-001	OH	SUPPORT ASSEMBLY
205-001-919-001	NS	BELLCRANK
205-001-920-001	OH	SUPPORT ASSEMBLY
205-001-921-001	OH	BELLCRANK ASSY
205-001-948-001	SV	BELLCRANK 01
205-001-984-001	SV	SUPPORT
205-003-713-104	OH	FLOOR ASSY
205-010-014-007	SV	CONTROL TUBE
205-011-012-025	OH	TUBE ASSY
205-020-406-011	SV	DUCT
205-022-407-011	SV	PLENUM
205-030-007-255	NS	DOOR
205-030-007-256	NS	DOOR ASSY
205-030-007-261	NS	DOOR
205-030-007-262	NS	PANEL
205-030-007-266	NS	DOOR
205-030-007-295	NS	DOOR
205-030-007-297	NS	DOOR
205-030-007-325	NS	DOOR
205-030-028-003	OH	DOOR ASSY
205-030-028-031	OH	DOOR ASSY RH
205-030-028-031	OH	DOOR ASSY RH
205-030-028-041	OH	DOOR ASSY LH
205-030-028-041	OH	DOOR ASSY LH
205-030-028-043	OH	DOOR ASSY LH
205-030-028-043	NS	DOOR ASSY LH
205-030-028-045	OH	DOOR ASSY
205-030-028-045	OH	DOOR ASSY
205-030-028-045	OH	DOOR ASSY
205-030-028-045	OH	DOOR ASSY
205-030-028-047	OH	DOOR ASSY RH
205-030-028-101	OH	DOOR ASSY
205-030-028-103	OH	DOOR ASSY
205-030-028-103	NS	DOOR ASSY
205-030-028-104	OH	DOOR ASSY
205-030-029-009	OH	DOOR ASSY
205-030-029-009	OH	DOOR ASSY
205-030-029-011	OH	DOOR ASSY
205-030-029-101	OH	DOOR ASSY
205-030-029-101	NS	DOOR ASSY
205-030-029-103	OH	DOOR ASSY
205-030-030-029	OH	DOOR ASSY

205-030-030-103	OH	DOOR ASSY
205-030-030-103	NS	DOOR ASSY
205-030-030-104	OH	DOOR ASSY
205-030-030-104	OH	DOOR ASSY
205-030-031-009	NE	DOOR ASSY
205-030-031-009	NE	DOOR ASSY
205-030-031-009	OH	DOOR ASSY
205-030-031-103	NS	DOOR ASSY, RH LOWER
205-030-033-001	OH	HINGE
205-030-033-007	NS	HINGE
205-030-033-007	OH	HINGE
205-030-033-009	OH	HINGE
205-030-033-009	OH	HINGE
205-030-033-011	OH	HINGE
205-030-033-012	OH	HINGE
205-030-033-013	OH	HINGE
205-030-033-014	OH	HINGE
205-030-045-006	OH	PLATE
205-030-045-011	OH	PLATE
205-030-107-001	OH	FITTING
205-030-114-003	OH	PANEL
205-030-119-010	NS	FRAME
205-030-173-003	OH	FLOOR ASSY
205-030-173-004	NS	FLOOR ASSY
205-030-173-031	NE	DECK LH, ENG
205-030-173-032	OH	PANEL, R/H
205-030-173-037	OH	FLOOR ASSY LH
205-030-173-037	OH	FLOOR ASSY LH
205-030-173-037	OH	FLOOR ASSY LH
205-030-173-038	OH	FLOOR ASSY
205-030-173-038	OH	FLOOR ASSY
205-030-173-108	NE	FLOOR ASSY
205-030-173-109	NE	FLOOR ASSY
205-030-175-003	OH	PANEL ASSY
205-030-175-004	OH	PANEL ASSY
205-030-175-007	OH	SKIN LH
205-030-191-005	OH	PANEL ASSY
205-030-191-007	OH	PANEL ASSY
205-030-195-004	SV	TUBE ASSY
205-030-195-006	SV	TUBE ASSY.
205-030-196-013	NS	BOOT
205-030-200-079	OH	PANEL ASSY
205-030-200-079	NE	PANEL ASSY
205-030-208-127	OH	DECK ASSY
205-030-209-020	OH	PANEL ASSY RH
205-030-210-035	OH	DOOR ASSY (RH)
205-030-219-000	OH	PANEL ASSY



205-030-219-019	NS	PANEL ASSY
205-030-219-019	OH	PANEL ASSY
205-030-219-019	OH	PANEL ASSY
205-030-219-19-7016	OH	PANEL ASSY
205-030-236-009	OH	SUPPORT
205-030-236-009	SV	SUPPORT
205-030-245-127	OH	POST ASSY
205-030-245-183	OH	POST ASSY
205-030-245-197	OH	POST INST LH
205-030-247-025	SV	COVER PLATE
205-030-249-003	OH	TENSION ROD ASSY
205-030-275-001	SV	BRACKET
205-030-275-011	OH	SUPPORT
205-030-277-081	NS	PANEL ASSY
205-030-277-081	NE	PANEL ASSY
205-030-277-081	NE	PANEL ASSY
205-030-279-117	OH	DECK ASSY
205-030-279-165	OH	DECK ASSY
205-030-280-141	OH	DECK ASSY
205-030-280-141	OH	DECK ASSY
205-030-280-199	OH	DECK ASSY
205-030-285-005	NE	WINDOW ASSY PASS DOR
205-030-286-001	OH	HINGE ASSY
205-030-286-002	OH	HINGE ASSY
205-030-286-007	OH	HINGE ASSY
205-030-286-009	OH	HINGE ASSY
205-030-286-011	OH	HINGE ASSY
205-030-286-013	OH	HINGE ASSY
205-030-286-014	OH	HINGE ASSY
205-030-286-014	OH	HINGE ASSY
205-030-286-015	OH	HINGE ASSY
205-030-286-016	OH	HINGE ASSY
205-030-291-010	NS	CAP
205-030-292-011	NS	CAP
205-030-293-004	NS	TRACK
205-030-314-001	OH	DOOR ASSY
205-030-322-061	NE	PANEL
205-030-322-073	NE	FLOOR PANEL
205-030-322-079	NE	FLOOR PANEL
205-030-322-087	NE	FLOOR PANEL ASSY
205-030-322-091	NE	FLOOR PANEL
205-030-322-095	NE	FLOOR PANEL
205-030-322-105	NE	FLOOR PANEL
205-030-360-008	NS	SUPPORT, R/H
205-030-371-002	OH	COVER
205-030-401-041	OH	PANEL ASSY LH
205-030-402-057	NS	PANEL ASSY

205-030-403-067	OH	PANEL ASSY
205-030-407-007	NE	BULKHEAD
205-030-407-008	NE	BULKHEAD
205-030-407-021	NE	BULKHEAD
205-030-407-022	NE	BULKHEAD
205-030-407-285	NE	PANEL ASSY
205-030-407-286	NE	PANEL ASSY
205-030-407-301	OH	PANEL ASSY
205-030-407-445	OH	PANEL ASSY
205-030-407-445	NE	PANEL ASSY
205-030-407-445	NE	PANEL ASSY
205-030-407-446	OH	PANEL ASSY
205-030-407-446	NE	PANEL ASSY
205-030-407-446	NE	PANEL ASSY
205-030-407-473	NE	BULKHEAD ASSY
205-030-407-475	NS	BULKHEAD ASSY
205-030-407-475	NE	BULKHEAD ASSY
205-030-407-523	NE	PANEL
205-030-407-547	NE	PANEL
205-030-407-549	NE	PANEL ASSY
205-030-407-569	NE	PANEL
205-030-407-595	NE	PANEL
205-030-417-001	OH	DOOR ASSY
205-030-477-008	OH	SUPPORT ASSY
205-030-484-022	OH	DOOR
205-030-485-041	OH	DOOR ASSY
205-030-487-037	OH	DOOR ASSY
205-030-488-001	SV	HANDLE
205-030-489-001	NS	CATCH
205-030-519-101	OH	PANEL ASSY
205-030-542-001	NS	HANDLE
205-030-543-011	OH	PLATE
205-030-611-017	NS	AIR SCOOP
205-030-614-029	NS	PLATE ASSY
205-030-627-013	OH	SUPPORT ASSY
205-030-672-001	NS	SPRING
205-030-673-032	NE	WINDOW
205-030-708-047	OH	WINDOW OBSERVATION
205-030-713-017	NS	BULKHEAD
205-030-772-001	OH	BASE
205-030-772-119	OH	PANEL ASSY
205-030-772-119	NE	PANEL ASSY
205-030-772-127	NE	PANEL ASSY
205-030-772-129	OH	PANEL ASSY
205-030-772-139	OH	PANEL ASSY
205-030-772-139	NE	PANEL ASSY
205-030-772-299	NE	PANEL ASSY

205-030-811-003	NE	EXTERIOR TAILBOOM PANEL
205-030-814-017	SV	DOOR ASSY
205-030-827-001	OH	DOOR
205-030-827-011	OH	DOOR
205-030-831-015	OH	BRACE ASSY
205-030-845-369	OH	LIFT BEAM ASSY
205-030-845-453	OH	LIFT BEAM ASSY
205-030-855-001	SV	ROD END
205-030-856-091	OH	ELEVATOR ASSY
205-030-856-093	OH	ELEVATOR ASSY, RH
205-030-856-121	OH	ELEVATOR ASSY LH
205-030-856-121	OH	ELEVATOR ASSY LH
205-030-856-123	OH	ELEVATOR ASSY RH
205-030-875-385	OH	PANEL
205-030-953-025	OH	DOOR ASSY
205-031-179-021	OH	PANEL ASSY
205-031-179-022	NE	PANEL ASSY
205-031-197-127	NS	SERVICE DECK
205-031-197-127	OH	SERVICE DECK
205-031-197-127	NS	SERVICE DECK
205-031-197-155	OH	SERVICE DECK
205-031-197-155HII	NE	SERVICE DECK
205-031-199-153	OH	SHELF ASSY
205-031-199-153	OH	SHELF ASSY
205-031-199-153	OH	SHELF ASSY
205-031-199-153	OH	SHELF ASSY
205-031-199-183	OH	SHELF ASSY
205-031-199-183	OH	SHELF ASSY
205-031-199-189	OH	SHELF ASSY
205-031-221-002	SV	DOOR ASSY.
205-031-221-274	OH	PANEL ASSY
205-031-235-017	OH	PANEL ASSY LH
205-031-235-018	OH	PANEL ASSY RH
205-031-244-003	OH	PANEL ASSY
205-031-244-005	OH	PANEL ASSY
205-031-251-001	NS	BRACKET
205-031-257-004	OH	PANEL ASSY
205-031-257-067	OH	FLOOR PANEL ASSY
205-031-257-067	OH	FLOOR PANEL ASSY
205-031-257-068	OH	FLOOR PANEL ASSY
205-031-257-068	OH	FLOOR PANEL ASSY
205-031-258-005	NE	PANEL ASSY
205-031-261-003	NS	PANEL ASSY
205-031-262-003	NE	PANEL ASSY
205-031-271-035	NE	PANEL ASSY
205-031-276-001	NE	FLOOR PANEL
205-031-282-057	OH	PANEL ASSY

205-031-282-058	OH	PANEL ASSY
205-031-282-061	SV	DOOR R/H
205-031-324-005	OH	DOOR ASSY
205-031-324-007	OH	DOOR ASSY
205-031-324-007	NE	DOOR ASSY
205-031-326-003	NE	DOOR ASSY
205-031-326-005	OH	DOOR ASSY
205-031-326-005	NE	DOOR ASSY
205-031-331-003	NS	PANEL
205-031-332-009	OH	PANEL ASSY
205-031-332-009	OH	PANEL ASSY
205-031-332-011	OH	FLOOR PANEL ASSY RH
205-031-370-001	NS	COVER
205-031-370-002	NS	COVER
205-031-423-003	OH	COVER
205-031-423-005	OH	PANEL ASSY
205-031-423-005	OH	PANEL ASSY
205-031-423-005	OH	PANEL ASSY
205-031-423-006	OH	PANEL ASSY
205-031-423-082	OH	R/H INNER FRAME
205-031-434-001	OH	ROLLER
205-031-435-001	NS	SUPPORT, ROLLER
205-031-466-006	NE	FITTING
205-031-503-002	NS	HINGE ASSY
205-031-507-001	SV	SUPPORT ASSEMBLY
205-031-507-002	SV	SUPPORT ASSY, PANEL LATCH
205-031-512-001	SV	ESCUTCHEON
205-031-614-005	OH	COVER
205-031-614-005	OH	COVER
205-031-614-005	OH	COVER
205-031-614-005	OH	COVER
205-031-669-007	OH	PANEL ASSY, ESCAPE
205-031-669-012	OH	DOOR, CARGO
205-031-669-016	OH	DOOR ASSY, CARGO
205-031-780-053	OH	SUPPORT
205-031-818-001	OH	SUPPORT FITTING
205-031-833-001	OH	TUBE ASSY
205-031-835-019	OH	MOUNT ASSY
205-032-101-009	NE	CABIN ROOF
205-032-101-109	NE	PANEL, ROOF, CENTER
205-032-101-115	NE	PANEL, ROOF
205-032-101-115	NE	PANEL, ROOF
205-032-101-115	OH	PANEL, ROOF
205-032-101-115	OH	PANEL, ROOF
205-032-105-035	OH	DOUBLER
205-032-105-161	NE	SKIN ASSY
205-032-111-001	NE	FAIRING ASSY

205-032-147-061	OH	PANEL ASSY
205-032-147-069	OH	FLOOR PANEL
205-032-147-071	OH	PANEL ASSY
205-032-147-079	OH	PANEL ASSY
205-032-171-002	OH	BEARING ASSY
205-032-669-006	OH	DOOR ASSY
205-032-669-009	OH	DOOR ASSY
205-032-669-010	OH	DOOR ASSY
205-032-669-010	OH	DOOR ASSY
205-032-669-267	OH	DOOR ASSY
205-032-669-268	OH	DOOR ASSY
205-032-669-268	OH	DOOR ASSY
205-032-669-271	OH	DOOR ASSY
205-032-669-273	OH	DOOR ASSY, PASS
205-032-708-001	NS	STRIKER PLATE
205-032-713-007	OH	DOOR PANEL
205-032-713-007	OH	DOOR PANEL
205-032-734-003	SV	BELLCRANK
205-032-800-071	OH	TAIL BOOM
205-032-809-005	NE	PANEL
205-032-809-027	OH	DOOR ASSY
205-032-809-027	NE	DOOR ASSY
205-032-809-033	OH	DOOR ASSY
205-032-809-035	OH	DOOR ASSY
205-032-809-035	NE	DOOR ASSY
205-032-809-105	NE	PANEL
205-032-811-005	NE	EXTERIOR TAILBOOM PANEL
205-032-811-009	NE	EXTERIOR TAILBOOM PANEL
205-032-811-047	NE	EXTERIOR TAILBOOM PANEL
205-032-811-053	NE	EXTERIOR TAILBOOM PANEL
205-032-811-055	NE	EXTERIOR TAILBOOM PANEL
205-032-811-059	NE	EXTERIOR TAILBOOM PANEL
205-032-811-077	NE	PANEL ASSY
205-032-811-077	NE	PANEL ASSY
205-032-811-079	NE	PANEL ASSY
205-032-811-083	NE	EXTERIOR TAILBOOM PANEL
205-032-811-129	NE	EXTERIOR TAILBOOM PANEL
205-032-811-165	NE	PANEL ASSY
205-032-811-167	NE	PANEL ASSY
205-032-812-061	OH	PANEL ASSY
205-032-812-077	OH	PANEL ASSY
205-032-813-003	NE	EXTERIOR TAILBOOM PANEL
205-032-813-007	NE	EXTERIOR TAILBOOM PANEL
205-032-813-009	NE	EXTERIOR TAILBOOM PANEL
205-032-813-041	NE	PANEL ASSY
205-032-813-047	NE	EXTERIOR TAILBOOM PANEL
205-032-813-067	NE	PANEL ASSY

205-032-813-103	NE	EXTERIOR TAILBOOM PANEL
205-032-813-133	OH	PANEL ASSY
205-032-814-003	NE	EXTERIOR TAILBOOM PANEL
205-032-814-007	NE	EXTERIOR TAILBOOM PANEL
205-032-814-051	NE	PANEL ASSY
205-032-814-051	NE	PANEL ASSY
205-032-814-103	NE	PANEL ASSY
205-032-815-003	NE	PANEL
205-032-815-037	NE	PANEL
205-032-815-075	NE	PANEL
205-032-815-085	NE	PANEL
205-032-815-123	NE	PANEL
205-032-815-127	NE	PANEL ASSY
205-032-815-137	NE	PANEL ASSY
205-032-815-151	NE	PANEL
205-032-815-167	NE	PANEL ASSY
205-032-815-171	NE	PANEL
205-032-816-005	NE	PANEL
205-032-816-011	NE	PANEL
205-032-816-113	NE	PANEL
205-032-817-115	NE	FRAME
205-033-435-1C	SV	ROLLER SUPPORT
205-040-004-103	OH	DRIVE SHAFT MAIN
205-040-101-001	OH	GEAR
205-040-105-001	NS	BEARING
205-040-108-001	NS	BEARING
205-040-123-003	OH	BRACKET
205-040-125-001	OH	CASE SET, QUILL ASSY
205-040-134-001	OH	HOUSING ASSY
205-040-135-001	OH	JET
205-040-137-001	NS	ADAPTER
205-040-178-001	NE	COUPLING, OUTER
205-040-200-001	OH	QUILL ASSY
205-040-202-003	OH	BRACKET
205-040-232-001	OH	OUTER RACE
205-040-236-001	OH	WASHER-LOCK
205-040-246-003	OH	BEARING SET
205-040-263-111	OH	QUILL ASSY
205-040-300-001	OH	QUILL ASSY
205-040-300-001	OH	QUILL ASSY
205-040-302-001	NE	SLEEVE ASSY
205-040-302-003	OH	SLEEVE
205-040-303-001	OH	FLANGE
205-040-305-001	OH	NUT
205-050-114-013	OH	CROSS TUBE ASSY AFT
205-050-114-023	OH	CROSS TUBE ASSY FWD
205-050-114-023	OH	CROSS TUBE ASSY FWD

205-050-114-025	OH	CROSS TUBE ASSY AFT
205-050-114-025	OH	CROSS TUBE ASSY AFT
205-050-117-001	OH	SADDLE
205-050-117-003	OH	SADDLE
205-050-122-001	OH	PANEL ASSY, FLOAT
205-050-123-001	OH	CLEVIS
205-050-123-003	OH	CLEVIS
205-050-123-007	OH	CLEVIS
205-050-125-001	OH	DAMPER
205-050-127-003	OH	DAMPER
205-050-127-005	OH	DAMPER ASSY
205-050-127-009	OH	DAMPER ASSY
205-050-130-001	OH	FITTING
205-050-132-001	SV	SUPPORT
205-050-133-001	SV	SUPPORT
205-050-133-101	SV	SUPPORT ASSY
205-050-152-059	NS	SKID TUBE LH
205-050-152-149	OH	CROSS TUBE
205-050-174-033	NS	SKID SHOE
205-050-174-034	NS	SKID SHOE
205-050-174-036	NS	SHOE ASSY
205-050-400-009	OH	LANDING GEAR ASSY
205-050-400-063	OH	CROSS TUBE ASSY
205-060-005-013	SV	FUEL BLADDER
205-060-020-007	NS	BRACKET
205-060-102-015	OH	STRUT ASSY
205-060-105-001	OH	TRIPOD ASSY
205-060-106-001	OH	BIPOD ASSY
205-060-106-001	OH	BIPOD ASSY
205-060-106-001	OH	BIPOD ASSY
205-060-106-001	OH	BIPOD ASSY
205-060-109-001	OH	LEG ASSY
205-060-138-003	NS	SHIM
205-060-138-003	NS	SHIM
205-060-152-001	SV	FITTING
205-060-205-007	OH	BAFFLE ASSY
205-060-205-131	OH	PLATE ANGLE
205-060-210-001	NS	BELLMOUTH ASSY
205-060-405-003	NS	FAN ASSY
205-060-406-001	NS	SHROUD ASSY
205-060-408-020	OH	SHROUD ASSY
205-060-409-001	NS	FITTING
205-060-422-001	OH	CLAMP
205-060-426-031	OH	SHROUD ASSY
205-060-475-001	OH	DUCT ASSY
205-060-494-001	NS	FITTING
205-060-496-001	OH	BRACKET

205-060-522-001	OH	COOLER ASSY
205-060-522-001	NS	COOLER ASSY
205-060-539-001	NS	CAP ADAPTER
205-060-595-001	OH	DUCT ASSY
205-060-605-005	OH	FUEL CELL
205-060-605-005	OH	FUEL CELL
205-060-605-011	OH	FUEL CELL
205-060-606-003	NS	PUMP, BOOST
205-060-611-003	NS	MANIFOLD
205-060-612-003	OH	VALVE SHUT OFF
205-060-612-003	OH	VALVE SHUT OFF
205-060-612-101	OH	VALVE, SHUTOFF
205-060-612-101	OH	VALVE, SHUTOFF
205-060-613-001	NS	SWITCH ASSY
205-060-613-003	NS	SWITCH ASSY
205-060-614-009	OH	HANGER ASSY
205-060-619-001	OH	FITTING
205-060-622-001	OH	FITTING
205-060-631-001	OH	CROSS OVER
205-060-640-001	OH	PLATE
205-060-641-004	OH	SUPPORT
205-060-663-001	OH	MANIFOLD
205-060-712-001	NS	ROD ASSY
205-060-715-001	NS	SUPPORT ASSY
205-060-715-001	OH	SUPPORT ASSY
205-060-718-001	OH	BELLCRANK
205-060-723-001	OH	BELLCRANK
205-060-724-001	OH	BELLCRANK
205-060-725-001	OH	BELLCRANK
205-060-726-001	OH	BELLCRANK
205-060-727-011	OH	TORQUE TUBE ASSEMBLY
205-060-728-001	OH	BELLCRANK
205-060-729-015	OH	TUBE ASSY
205-060-729-025	OH	ROD ASSY
205-060-730-001	OH	CUP ASSY
205-060-732-001	NS	BOOT ASSY
205-060-733-015	OH	ROD ASSY
205-060-734-009	NS	ROD ASSY
205-060-734-009	OH	ROD ASSY
205-060-750-001	OH	CLEVIS
205-060-766-001	OH	MOUNT
205-060-766-001	NS	MOUNT
205-060-766-003	OH	SPINDLE
205-060-772-001	SV	BASE
205-060-802-003	OH	BRACE ASSY
205-060-805-017	NE	FAIRING ASSY
205-060-807-006	NE	COWLING



205-060-810-002	OH	FAIRING ASSY
205-060-810-101	OH	COWLING
205-060-817-001	OH	FITTING
205-060-818-001	NS	FITTING
205-060-818-002	NS	FITTING
205-060-820-001	OH	FITTING ASSY
205-060-821-001	NS	FITTING
205-060-826-001	OH	COWL ASSY, LOWER LH
205-060-826-002	OH	COWLING, ENG RH
205-060-826-011	OH	COWL ASSY
205-060-826-013	NS	DOOR ASSY
205-060-826-014	OH	DOOR
205-060-826-015	OH	DOOR ASSY
205-060-826-134	OH	R/H COWLING
205-060-830-001	OH	U BOLT
205-060-831-001	OH	FITTING
205-060-848-001	OH	HOOK, UPPER COW
205-060-855-001	OH	SUPPORT HINGE
205-060-855-002	OH	SUPPORT HINGE
205-060-855-002	NE	SUPPORT HINGE
205-060-855-002	OH	SUPPORT HINGE
205-060-856-001	OH	SUPPORT HINGE
205-060-856-002	OH	SUPPORT HINGE
205-060-856-004	OH	SAND CASTING
205-060-859-001	NS	RETAINER
205-060-861-001	NS	PLATE
205-060-867-001	OH	ROD ASSY
205-060-867-001	NE	ROD ASSY
205-060-877-003	NS	COWLING
205-060-906-001	NS	FIRESHIELD INSTALLATION
205-060-906-003	NS	TUBE ASSY
205-060-906-005	NS	TUBE ASSY
205-060-907-001	NS	FIREWALL ASSY
205-060-907-005	NS	SHIELD ASSY
205-060-907-005	SV	SHIELD ASSY
205-060-907-063	NS	FIREWALL ASSY
205-060-908-093	OH	FIREWALL, FWD
205-060-908-117	OH	FIREWALL ASSY
205-060-908-119	OH	FIREWALL ASSY
205-060-909-025	OH	FIREWALL ASSY
205-060-909-025	OH	FIREWALL ASSY
205-060-909-027	OH	FIREWALL ASSY
205-060-909-029	OH	CHANNEL ASSY
205-060-910-001	NS	BEAM FITTING
205-060-912-001	OH	FITTING
205-060-912-002	NS	FITTING
205-060-913-003	NS	FITTING

205-060-918-001	NS	FITTING
205-060-918-002	NS	FITTING
205-060-918-003	NS	FITTING
205-060-920-001	OH	SUPPORT ASSY
205-060-922-023	NS	DRIVE COVER
205-060-922-031	NS	DRIVE COVER
205-061-041-001	SV	BRACKET
205-061-622-001	OH	PUMP, FUEL BOOSTER
205-061-622-001	OH	PUMP, FUEL BOOSTER
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-622-003	OH	FUEL PUMP, AUX
205-061-623-001	NE	VALVE FUEL CHECK
205-061-626-005	OH	FUEL PUMP
205-061-626-005	OH	FUEL PUMP
205-061-629-001	OH	BRACKET ASSY
205-061-629-003	OH	BRACKET ASSEMBLY
205-061-631-001	NS	CROSSOVER ASSY
205-061-631-001	NS	CROSSOVER ASSY
205-061-631-001	NS	CROSSOVER ASSY
205-061-631-013	SV	CROSSOVER ASSY
205-061-633-007	OH	INDICATOR, FUEL QTY
205-061-633-007	OH	INDICATOR, FUEL QTY
205-061-633-011	NS	FUEL CAPACITOR
205-061-634-001	OH	PUMP ASSY
205-061-634-001	OH	PUMP ASSY
205-061-637-001	NS	FITTING
205-061-637-001	SV	FITTING
205-061-641-001	SV	FITTINGS
205-061-642-001	OH	DOOR ASSY
205-061-642-009	OH	DOOR ASSY
205-061-642-011	OH	DOOR ASSY
205-061-644-001	SV	BRACKET, SUPPORT
205-061-644-005	SV	BRACKETS
205-061-660-001	OH	SUPPORT
205-061-666-001	OH	HOOK
205-061-686-001	SV	BRACKET
205-062-606-001	OH	TANK ASSY
205-062-606-001	AR	TANK ASSY
205-062-606-002	OH	TANK ASSY
205-062-606-002	AR	TANK ASSY
205-062-606-185	OH	TANK ASSY LH

205-062-606-185	OH	TANK ASSY LH
205-062-606-225	OH	TANK ASSY
205-062-607-001	OH	TANK ASSY
205-062-607-001	NS	TANK ASSY
205-062-607-002	NS	TANK ASSY
205-062-607-002	OH	TANK ASSY
205-062-607-019	OH	PANEL
205-062-607-020	OH	TANK ASSY
205-062-616-001	NS	TUBE ASSY
205-062-618-007	SV	COVER ASSEMBLY
205-062-618-009	NE	COVER ASSEMBLY
205-062-618-009	OH	COVER ASSEMBLY
205-062-618-101	OH	COVER ASSY
205-062-635-017	OH	FUEL CELL
205-062-636-001	SV	PLATE ASSY
205-062-643-001	SV	ADAPTER
205-062-688-001	SV	COVER
205-062-695-001	OH	FLANGE ASSY
205-063-601-017	NE	VALVE, BREAK AWAY
205-063-602-003	NE	COUPLING, DISCONNECT
205-063-602-003	NS	COUPLING, DISCONNECT
205-063-604-001	NS	VALVE, DRAIN
205-070-101-001	OH	SEAT INSTL. COPILOT
205-070-104-001	NS	FITTING
205-070-105-001	OH	DUCT ASSY
205-070-112-055	OH	INSTRUMENT PNL
205-070-283-003	OH	TACH N1
205-070-424-003	OH	DUCT ASSY
205-070-429-003	OH	DUCT ASSY
205-070-450-001	OH	ELBOW
205-070-450-003	OH	DUCT
205-070-452-001	OH	DUCT
205-070-452-003	OH	DUCT
205-070-452-007	OH	DUCT
205-070-455-001	OH	DUCT
205-070-457-001	OH	DUCT ASSY
205-070-459-001	OH	DUCT
205-070-460-001	OH	ELBOW
205-070-461-001	OH	ELBOW
205-070-462-001	OH	DUCT
205-070-463-001	OH	CAP
205-070-464-001	OH	ELBOW
205-070-464-003	OH	DUCT
205-070-466-001	OH	ELBOW ASSY
205-070-473-001	OH	DUCT
205-070-482-001	OH	ELBOW ASSY
205-070-497-001	NS	DUCT ASSY

205-070-709-001	OH	TUBE ASSY
205-070-710-001	SV	LEG ASSY
205-070-711-002	NS	CLIP HOOK
205-070-712-001	NS	FITTING
205-070-712-002	NS	FITTING
205-070-722-001	OH	BELT EXTENSION
205-070-725-009	NS	RING
205-070-729-005	NS	BRACKET ASSY
205-070-733-003	NS	TRACK
205-070-763-001	SV	FITTING
205-070-763-001	SV	FITTING
205-070-770-001	OH	SHELF ASSY
205-070-770-002	NS	SHELF ASSY
205-070-771-002	OH	BRACKET
205-070-782-007	NS	TUBE
205-070-795-001	OH	PLATE
205-070-798-001	OH	SEAT ASSY
205-070-799-001	OH	SEAT INSTL PILOT
205-070-923-005	OH	SPRING
205-070-923-005	OH	SPRING
205-070-923-005	OH	SPRING
205-070-923-005	OH	SPRING
205-070-923-005	OH	SPRING
205-070-932-001	OH	BOLT
205-070-940-001	OH	BRACKET ASSY
205-070-944-001	OH	LINK ASSY
205-071-504-001	OH	TUBE ASSY
205-071-504-003	OH	CONNECTING ASSY
205-072-277-009	OH	MIXING VALVE
205-072-277-009	OH	MIXING VALVE
205-072-287-001	OH	DUCT ASSY
205-072-289-001	OH	DUCT ASSY
205-072-290-001	OH	DUCT ASSY
205-072-293-001	OH	DUCT ASSY
205-072-301-001	OH	ELBOW ASSY
205-072-401-001	SV	DUCT
205-072-408-001	SV	ADAPTER, PLENUM
205-072-450-001	OH	MIXING VALVE
205-072-723-019	AR	HEADREST
205-074-001-001	OH	DETECTOR, RPM
205-074-001-001	OH	DETECTOR, RPM
205-074-119-001	OH	SPRING
205-075-127-001	NS	BUS
205-075-137-007	OH	TUBE
205-075-158-001	OH	IND. ENG. OIL PRESS
205-075-158-001	OH	IND. ENG. OIL PRESS
205-075-249-001	OH	PANEL, LIGHTED

205-075-251-001	NS	PANEL ASSY
205-075-251-005	OH	PANEL, CONTROL
205-075-251-005	OH	PANEL, CONTROL
205-075-388-001	OH	RPM LIMIT DETECTOR
205-075-388-009	SV	RPM LIMIT DETECTOR
205-075-388-015	OH	RPM LIMIT DETECTOR
205-075-402-005	NS	CABLE ASSY
205-075-402-011	RP	HARNESS
205-075-642-001	OH	RELAY
205-075-642-001	OH	RELAY
205-075-642-001	OH	RELAY
205-075-642-001	OH	RELAY
205-075-902-021	OH	WIRING HARNESS
205-076-024-001	OH	BARREL
205-076-029-011	OH	ACTUATOR ASSY
205-076-035-101	OH	SERVO, HYDRAULIC
205-076-036-105	OH	SERVO, CYCLIC LH
205-076-036-107	OH	SERVO, CYCLIC RH
205-076-038-005	OH	CYLINDER ASSY
205-076-052-007	SV	BUMPER
205-076-056-107	OH	SERVO ASSY
205-076-062-009	AR	BUMPER
205-076-099-005	OH	CYLINDER ASSY
205-076-099-007	OH	SERVO
205-076-101-001	OH	BRACKET
205-076-109-001	OH	RETAINER
205-076-116-001	OH	FITTING TEE
205-076-125-007	OH	COVER DUST ASSY
205-076-135-001	OH	RESERVOIR ASSY
205-076-135-003	AR	RESERVOIR
205-076-135-003	AR	RESERVOIR
205-076-135-007	OH	RESERVOIR ASSY
205-076-135-109	OH	RESERVOIR ASSY
205-076-181-001	SV	BEARING
205-076-181-003	SV	BEARING
205-076-182-003	OH	BEARING
205-076-183-003	OH	BEARING
205-076-188-003	OH	BEARING
205-076-189-001	OH	HOUSING
205-076-190-001	OH	NUT
205-076-191-001	OH	RELIEF VALVE
205-076-191-001	OH	RELIEF VALVE
205-076-229-001	OH	SPRING
205-076-365-003	SV	VALVE
205-076-365-003	SV	VALVE
205-076-675-007	OH	COVER ASSY
205-080-855-1C	OH	COWL ASSY

205-081-814-010	OH	TAPA
205-375-003-101	NE	INDICATOR, TORQUE
205-500-1	NS	MODIFICATION
205-540-009-103	OH	TRANSMISSION
205-668-558-3C	OH	COWL ASSY
205-704-004-001	NS	KIT CONTROL TUBE
205-704-029-001	OH	KIT
205-704-044-001	OH	KIT, CONTROL TEMP
205-706-034-017	SV	ROTOR BRAKE KIT
205-706-044-107	OH	TANK ASSY
205-706-044-108	OH	TANK ASSY
205-706-045-020	OH	TANK ASSY
205-706-048-003	SV	MUFF HEATER
205-706-050-009	OH	CROSS TUBE ASSY FWD
205-706-050-015	NS	CROSS TUBE ASSY FWD
205-706-050-015	OH	CROSS TUBE ASSY FWD
205-706-050-101	SV	FLOAT KIT
205-706-052-009	OH	BUMPER ASSY
205-729-001-000	SV	CLAMP
20595-23	NS	REAR NAV LIGHT ASSY
205PP	NS	BALL BEARING
206-001-008-001	OH	ANTI TORQUE CON.
206-001-008-001	OH	ANTI TORQUE CON.
206-001-008-001	OH	ANTI TORQUE CON.
206-001-011-023	OH	TUBE ASSY
206-001-015-001	NE	COVER
206-001-017-021	OH	BOOT ASSY
206-001-018-001	OH	TUBE ASSY
206-001-019-001	OH	SUPPORT ASSY
206-001-020-019	OH	TUBE ASSY
206-001-020-040	OH	CONTROL TUBE
206-001-020-041	OH	CONTROL TUBE
206-001-020-059	NE	TUBE ASSY
206-001-020-063	OH	TUBE ASSY
206-001-022-043	NS	TUBE ASSY
206-001-022-043	NS	TUBE ASSY
206-001-022-047	OH	TUBE ASSY
206-001-022-049	OH	TUBE ASSY
206-001-022-053	OH	TUBE ASSY
206-001-022-069	OH	TUBE ASSY
206-001-022-073	OH	TUBE ASSY
206-001-022-075	OH	TUBE ASSY
206-001-025-019	OH	TUBE ASSY
206-001-032-003	OH	TUBE ASSY
206-001-057-001	AR	ROD END
206-001-061-001	AR	CLEVIS
206-001-076-101	OH	DAMPER

206-001-088-001	OH	TUBE ASSY
206-001-096-007	OH	TUBE ASSY
206-001-096-013	OH	TUBE ASSY
206-001-096-017	OH	TUBE ASSY
206-001-115-031	OH	JACK SHAFT
206-001-115-103	SV	COLLECTIVE STICK
206-001-123-007	OH	ROD
206-001-124-001	SV	SPACER
206-001-124-001	NS	SPACER
206-001-134-001	OH	TUBE ASSY
206-001-140-001	OH	SUPPORT ASSY
206-001-141-001	SV	SLEEVE
206-001-143-009	OH	STICK ASSY COLL
206-001-143-013	OH	STICK ASSY
206-001-144-009	OH	COLLECTIVE TUBE
206-001-152-007	OH	TUBE ASSY
206-001-152-007	OH	TUBE ASSY
206-001-152-007	OH	TUBE ASSY
206-001-154-001	OH	ELBOW ASSY
206-001-155-001	OH	LEVER ASSY
206-001-160-001	OH	ELBOW
206-001-176-001	OH	CONTROL STICK
206-001-188-001	OH	PLATE ASSEMBLY
206-001-202-001	OH	ROD END
206-001-205-001	OH	BOX ASSY, SWITCH
206-001-211-101	OH	THROTTLE ARM
206-001-234-004	SV	BRACKET
206-001-306-011	OH	TUBE ASSY
206-001-323-001	OH	YOKE R/H
206-001-335-005	SV	KNOB
206-001-336-005	SV	KNOB AND SHAFT
206-001-339-015	OH	LEVER ASSY
206-001-339-023	OH	LEVER ASSY
206-001-341-003	OH	KNOB & SHAFT ASSY
206-001-343-001	OH	ELBOW
206-001-343-001	AR	ELBOW
206-001-345-003	OH	SUPPORT
206-001-345-007	OH	PIVOT ASSY
206-001-345-007	OH	PIVOT ASSY
206-001-345-009	OH	PIVOT ASSY
206-001-348-001	SV	KNOB & SHAFT
206-001-360-003	OH	PIVOT SUPPORT ASSY
206-001-363-005	OH	LEVER
206-001-364-001	OH	TRUNNION ASSY
206-001-377-001	AR	SPRING
206-001-379-001	OH	BRACKET ASSY
206-001-379-001	AR	BRACKET ASSY

206-001-380-001	AR	EYEBOLT
206-001-383-001	OH	LEVER ASSY
206-001-397-101	OH	PIVOT SUPPORT ASSY
206-001-400-009	OH	LEVER ASSY
206-001-502-005	OH	BELLCRANK ASSY L/H
206-001-522-001	OH	BELLCRANK ASSY
206-001-523-001	OH	PLATE
206-001-524-003	OH	TUBE ASSY
206-001-525-001	OH	PLATE ASSY
206-001-525-001	OH	PLATE ASSY
206-001-525-003	OH	PLATE
206-001-526-001	OH	BELLCRANK ASSY
206-001-526-001	OH	BELLCRANK ASSY
206-001-528-001	OH	SUPPORT ASSY
206-001-529-001	OH	PLATE ASSY
206-001-529-001	OH	PLATE ASSY
206-001-532-001	OH	SPACER
206-001-540-001	OH	PLATE ASSY
206-001-541-001	OH	PLATE
206-001-544-005	OH	SUPPORT ASSY
206-001-544-005	OH	SUPPORT ASSY
206-001-544-006	OH	SUPPORT ASSY
206-001-549-001	OH	IDLER ASSY
206-001-555-001	OH	SUPPORT
206-001-564-003	OH	SERVO SUPPORT ASSY.
206-001-567-001	OH	BELLCRANK
206-001-701-001	SV	LINK ASSY
206-001-702-005	OH	BELLCRANK
206-001-702-005	OH	BELLCRANK
206-001-703-000	SV	PEDALS ASSY
206-001-703-001	OH	PEDAL ASSY
206-001-703-002	OH	PEDAL ASSY
206-001-705-001	OH	BELLCRANK
206-001-705-005	OH	BELLCRANK ASSY
206-001-706-003	OH	CLEVIS
206-001-706-003	SV	CLEVIS
206-001-707-001	OH	BELLCRANK ASSY
206-001-707-009	OH	BELLCRANK
206-001-709-001	SV	KNOB
206-001-710-001	OH	CLAMP
206-001-712-001	OH	BELLCRANK
206-001-713-000	SV	T/R PEDALS ASSY
206-001-713-000	AR	T/R PEDALS ASSY
206-001-713-010	OH	HOUSING
206-001-729-001	OH	BEAM
206-001-733-001	OH	SUPPORT ASSY
206-001-734-001	OH	MOUNT



206-001-735-001	OH	WALKING BEAM ASSY
206-001-737-001	OH	LEVER
206-001-737-001	OH	LEVER
206-001-738-001	OH	PLATE ASSY
206-001-738-001	SV	PLATE ASSY
206-001-738-002	OH	PLATE ASSY
206-001-738-002	SV	PLATE ASSY
206-001-740-005	SV	PLATE ASSY
206-001-741-001	SV	TUBE ASSY
206-001-745-001	AR	EYEBOLT ASSY
206-001-746-009	OH	IDLER ASSY
206-001-756-001	OH	BELLCRANK ASSY
206-001-756-001	OH	BELLCRANK ASSY
206-001-756-005	OH	BELLCRANK
206-001-759-005	OH	WALKING BEAM ASSY
206-001-904-005	OH	BELLCRANK
206-001-905-001	OH	BELLCRANK
206-001-906-001	OH	BELLCRANK
206-010-103-003	OH	PILLOW BLOCK
206-010-139-001	OH	FLAP RESTRAINT ARM
206-010-191-103	NS	SUPPORT, RETRAINT
206-010-330-007	OH	TUBE ASSY
206-010-333-005	OH	COLLAR SET
206-010-335-001	OH	LEVER ASSY
206-010-336-005	OH	LINK ASSY
206-010-336-007	SV	DRIVE LINK (CAN)
206-010-347-001	OH	CLEVIS
206-010-355-009	OH	TUBE ASSY
206-010-444-001	OH	CAP, OUTER
206-010-451-001	SV	INNER RING
206-010-453-005	SV	RING
206-010-456-001	OH	RING AND CAP
206-010-741-001	OH	CROSSHEAD, T/R
206-010-742-003	NS	STATIC STOP
206-010-751-001	OH	SLIDER NUT/TRA
206-010-790-001	NS	BELL CRANK ASSY
206-010-790-001	OH	BELL CRANK ASSY
206-011-100-151	OH	HUB ASSY, M/R
206-011-129-003	NS	RETAINER
206-011-130-001	NS	RETAINER ASSY
206-011-150-005	NS	FITTING
206-011-704-001	NE	KEY
206-011-709-000	OH	PITCH CHANGE MECH
206-011-724-001	OH	TUBE ASSY
206-011-726-003	OH	BUSHING
206-011-805-003	SV	HOUSING
206-011-809-001	NS	PITCH HORN ASSY

206-011-814-001	OH	HOUSING
206-011-857-001	NS	CROSSHEAD
206-013-019-009	OH	CLEVIS ASSY
206-016-201-131	OH	TAIL ROTOR BLADE
206-016-201-131	AR	TAIL ROTOR BLADE
206-016-201-131	AR	TAIL ROTOR BLADE
206-020-119-020	NE	RIB
206-020-121-005	NE	FITTING ASSY
206-020-121-006	NE	FITTING ASSY
206-020-123-018	OH	SKIN
206-020-124-004	-	CLAMP ASSY
206-022-113-001	OH	FIN VERTICAL
206-023-119-063	NE	SUPPORT
206-023-119-064	OH	SUPPORT
206-023-119-066	NS	SUPPORT
206-023-119-066	SV	SUPPORT
206-023-119-079	SV	SUPPORT ASSY
206-030-104-017	SV	FITTING ASSY
206-030-222-003	SV	SUPPORT ASSY
206-030-330-001	NS	PLATE
206-030-407-009	NE	BRACKET
206-030-435-001	SV	FAIRLEAD
206-031-004-111	OH	TAIL BOOM
206-031-101-009	OH	PANEL ASSY
206-031-101-009	OH	PANEL ASSY
206-031-101-011	OH	PANEL ASSY
206-031-101-012	OH	PANEL ASSY/RH
206-031-106-203	OH	STIFFNER
206-031-106-385	NE	PANEL
206-031-107-005	OH	DOOR ASSY
206-031-107-005	OH	DOOR ASSY
206-031-108-015	NE	WINDOW, ROOF
206-031-115-023	NE	RETAINER
206-031-115-027	NE	L/H ROOF WINDOW
206-031-115-028	NE	R/H ROOF WINDOW
206-031-115-039	NE	WINDSHIELD
206-031-115-041	NE	R/H WINDSHIELD,CLEAR
206-031-116-007	NE	WINDOW
206-031-117-359	OH	PANEL
206-031-124-040	NS	PLATE ASSY
206-031-127-001	SV	FITTING
206-031-130-007	NE	COVER
206-031-139-003	NE	HEEL REST ASSY
206-031-141-039	OH	PANEL ASSY
206-031-141-041	OH	PANEL ASSY
206-031-141-101	OH	SEAT PANEL
206-031-141-105	OH	SEAT PANEL

206-031-154-001	NE	BRACKET
206-031-160-013	NS	POST CTR
206-031-165-001	OH	SUPPORT
206-031-165-003	NE	FITTING
206-031-167-001	SV	SPACER
206-031-167-003	SV	SPACER
206-031-190-101	NE	BRACKET
206-031-201-653	OH	SHELF,CABIN ROOF
206-031-210-287	OH	COVER ASSY.
206-031-210-381	OH	PANEL
206-031-210-481	SV	COVER
206-031-214-007	OH	SUPPORT ASSY
206-031-247-001	OH	HINGE
206-031-247-003	OH	HINGE
206-031-262-001	SV	SHROUD ASSY
206-031-262-001	AR	SHROUD ASSY
206-031-302-087	SV	CLIP
206-031-302-131	OH	PANEL ASSY
206-031-302-878	OH	CLIP
206-031-312-009S	OH	DOOR ASSY
206-031-313-115	NE	FLOOR ASSY
206-031-315-155	NE	PAN
206-031-318-039	NE	LONGERON
206-031-328-003	OH	DOOR ASSY
206-031-343-145	OH	FAIRING ASSY
206-031-370-001	OH	STEP INSTL.
206-031-370-002	OH	STEP ASSY
206-031-370-005	OH	STEP ASSY
206-031-370-006	OH	STEP ASSY
206-031-370-007	SV	STEP ASSY
206-031-370-008	OH	STEP ASSY
206-031-370-008	OH	STEP ASSY
206-031-370-015	OH	SUPPORT, STEP LH
206-031-370-016	OH	SUPPORT, STEP
206-031-370-017	NE	DOUBLER
206-031-370-018	NE	DOUBLER
206-031-375-001	OH	STEP PAD
206-031-375-002	OH	STEP PAD
206-031-375-015	OH	STEP PAD L/H
206-031-403-003	OH	FITTING
206-031-420-121	OH	FAIRING
206-031-420-123	OH	FAIRING
206-031-420-135	OH	FAIRING ASSY
206-031-422-022	NE	SUPPORT ASSY
206-031-440-001	OH	PANEL ASSY
206-031-467-001	NE	STRIKER HOUSING
206-031-500-049	OH	COVER

206-031-500-059	OH	DOOR ASSY, LH
206-031-500-145	OH	DOOR ASSY
206-031-500-146	OH	DOOR ASSY
206-031-500-157	OH	DOOR ASSY
206-031-500-205	OH	DOOR CREW LH
206-031-500-655	OH	DOOR ASSY
206-031-501-053	OH	DOOR ASSY, LH
206-031-501-054	OH	DOOR ASSY, RH
206-031-501-085	NE	WINDOW
206-031-501-127	OH	DOOR ASSY
206-031-501-128	OH	DOOR ASSY
206-031-501-129	NE	WINDOW ASSY
206-031-501-134	NE	WINDOW ASSY
206-031-501-157	OH	DOOR, PASS. LH
206-031-501-158	OH	DOOR ASSY
206-031-501-205	OH	DOOR ASSY
206-031-501-619	OH	DOOR ASSY
206-031-501-656	OH	DOOR ASSY
206-031-504-002	OH	SUPPORT ASSEMBLY
206-031-535-003	NS	HINGE
206-031-545-001	SV	LEVER
206-031-548-007	SV	HANDLE ASSY
206-031-565-001	SV	RECEPTACLE
206-031-575-001	NS	HINGE
206-031-575-002	NS	HINGE
206-031-575-004	OH	HINGE
206-031-576-001	NS	HINGE
206-031-576-002	NS	HINGE
206-031-576-004	NS	HINGE
206-031-584-005	NS	HINGE
206-031-584-007	NS	UPPER HINGE
206-031-586-001	SV	SPACER ASSY
206-031-586-003	SV	SPACER ASSY
206-031-586-003	NE	SPACER ASSY
206-031-588-001	OH	LINK ASSY
206-031-589-001	OH	LINK ASSY
206-031-589-002	OH	PYLON LINK (CAN)
206-031-592-001	OH	FITTING ASSY
206-031-592-003	OH	PYLON FITTING
206-031-592-004	OH	PYLON FITTING
206-031-593-001	OH	FITTING ASSY
206-031-593-002	OH	FITTING ASSY
206-031-593-003	RP	FITTING
206-031-593-004	RP	FITTING
206-032-004-057	OH	TAILBOOM
206-032-115-015	NS	WINDSHEILD
206-032-126-001	SV	FITTING

206-032-126-001	NS	FITTING
206-032-139-015	NE	HEEL REST
206-032-139-017	NE	HEEL REST
206-032-315-003	NS	DRIP PAN
206-032-326-001	OH	TUBE ASSY
206-032-328-003	OH	DOOR
206-032-352-001	OH	COVER
206-032-413-003	SV	BRACKET
206-032-413-003	NE	BRACKET
206-032-413-005	NE	SUPPORT
206-032-414-005	NE	SUPPORT
206-032-501-004	NS	DOOR ASSY
206-033-001-021	OH	INSTRUMENT CONSOLE
206-033-115-139	NE	R/H LITTER WINDOW
206-033-154-061	OH	STRUT L/H
206-033-155-001	OH	SEATBACK
206-033-155-001	OH	SEATBACK
206-033-201-067	NE	SUPPORT
206-033-407-105	NE	CLIP
206-033-407-117	NE	CLIP
206-033-420-003	OH	FAIRING ASSY, UPPER
206-033-420-007	OH	FAIRING ASSY
206-033-500-101	NE	L/H FWD WDW - CREW D
206-033-501-003	OH	SUPPORT ASSY
206-033-505-007	OH	FLEX ARM TRANS INST.
206-033-505-101	OH	ARM ASSY
206-033-505-103	OH	ARM ASSY
206-033-507-001	SV	DRAG PIN
206-033-507-003	SV	DRAG PIN
206-033-512-005	SV	SUPPORT ASSY.
206-033-516-001	OH	FLEXURE ASSY
206-033-516-101	OH	FLEXURE
206-033-517-007	NE	BEARINGS
206-033-519-003	NE	BEARING
206-033-544-001	OH	SUPPORT ASSY, ISOLATION
206-033-600-006	NE	WINDOW
206-033-600-104	OH	REVERSE SCOOP
206-033-601-009	NE	WINDOW ASSY. L/H
206-033-601-009	NE	WINDOW ASSY. L/H
206-033-601-010	NE	WINDOW, ASSY. R/H
206-033-601-117S	OH	DOOR ASSY
206-033-602-223	OH	LITTER DOOR
206-033-625-001	SV	CAM
206-033-625-001	OH	CAM
206-033-648-001	SV	HINGE
206-033-649-001	OH	DOOR HINGE, UPPER
206-033-649-003	OH	DOOR HINGE, LOWER

206-033-663-102	NE	R/H AFT WEDGE WINDOW
206-040-020-003	OH	PINION, GEAR
206-040-021-001	OH	BEVEL GEAR
206-040-021-005	NE	GEAR
206-040-021-005	NE	GEAR
206-040-022-103	OH	SUN GEAR
206-040-025-001	OH	ACCESSORY GEAR
206-040-040-003	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-043-005	OH	SHAFT
206-040-044-003	OH	NUT
206-040-044-003	OH	NUT
206-040-044-003	OH	NUT
206-040-044-003	OH	NUT
206-040-044-003	OH	NUT
206-040-044-003	OH	NUT
206-040-045-001	OH	NUT
206-040-046-003	OH	NUT
206-040-047-001	OH	NUT
206-040-048-001	OH	ADAPTER/WEAR SLEEV
206-040-052-005	OH	COVER ASSY
206-040-064-001	SV	TUBE
206-040-064-001	SV	TUBE
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-067-011	OH	#2 OIL JET
206-040-068-001	NE	SPACER, RING
206-040-076-009	OH	SCREEN
206-040-076-009	OH	SCREEN

206-040-076-009	OH	SCREEN
206-040-078-103	NS	NUT
206-040-078-103	NS	NUT
206-040-078-103	NS	NUT
206-040-078-103	NS	NUT
206-040-078-103	NS	NUT
206-040-080-003	OH	SPIDER
206-040-092-003	SV	BOLT
206-040-092-003	NS	BOLT
206-040-096-001	SV	OIL JET
206-040-096-001	OH	OIL JET
206-040-102-003	SV	PLATE
206-040-102-101	SV	PLATE
206-040-106-001	SV	SPRING
206-040-110-013	OH	SHAFT ASSY
206-040-110-101	SV	SHAFT
206-040-115-001	OH	HOUSING
206-040-116-001	SV	BOLT
206-040-124-001	OH	GEAR
206-040-126-001	OH	HEAD ASSY, FILTER
206-040-129-001	OH	HOUSING ASSY
206-040-129-101	OH	HOUSING, FILTER
206-040-133-005	OH	JET ASSY NO. 1
206-040-133-009	SV	JET ASSY
206-040-140-007	OH	CARRIER
206-040-146-001	OH	GEAR
206-040-146-001	OH	GEAR
206-040-146-001	OH	GEAR
206-040-146-001	OH	GEAR
206-040-147-001	OH	JET ASSY NO. 2
206-040-150-029	OH	MAIN CASE, XMSN
206-040-151-009	OH	CASE ASSY
206-040-151-013	OH	CASE ASSY
206-040-152-001	OH	SUPPORT ASSY
206-040-192-001	OH	TUBE
206-040-195-001	SV	HEAD ASSY, FILTER
206-040-223-003	SV	RING
206-040-236-005	OH	HOUSING
206-040-237-001	OH	CAP ASSY
206-040-237-001	OH	CAP ASSY
206-040-237-001	OH	CAP ASSY
206-040-237-001	OH	CAP ASSY
206-040-238-001	OH	BALL KIT
206-040-241-001	OH	HOUSING ASSY
206-040-245-001	OH	FITTING
206-040-245-001	OH	FITTING
206-040-246-001	OH	BOLT

206-040-246-001	OH	BOLT
206-040-287-101	NE	DUCT ASSY
206-040-325-017	OH	SHAFT DRIVE T/R ASSY
206-040-338-001	NS	HANGAR ASSY
206-040-338-009	OH	HANGER ASSY
206-040-344-005	OH	HANGER ASSY
206-040-344-009	OH	HANGAR ASSY
206-040-345-009	OH	HANGER ASSY
206-040-346-009	OH	HANGAR ASSY
206-040-351-005	OH	SPACER
206-040-363-001	OH	ADAPTER
206-040-407-007	NE	SHAFT ASSY
206-040-421-001	OH	NUT
206-040-424-001	OH	CAP ASSY
206-040-425-017	OH	CASE ASSY
206-040-425-017	OH	CASE ASSY
206-040-522-001	OH	COLLECTOR, OIL
206-040-523-001	OH	JET ASSY
206-040-527-001	OH	CLIP
206-050-105-013	OH	STRAP ASSY
206-050-107-027	SV	CROSS TUBE
206-050-110-005	OH	STRAP
206-050-114-025	SV	CROSTUBE, AFT
206-050-118-047	OH	LANDING GEAR ASSY
206-050-118-101	OH	SKID TUBE LOW LH
206-050-118-101	OH	SKID TUBE LOW LH
206-050-119-005	OH	CROSS TUBE, FWD
206-050-119-101	NE	CROSS TUBE, LOW AFT
206-050-119-101	NE	CROSS TUBE, LOW AFT
206-050-126-001	NS	SUPPORT ASSY
206-050-126-001	OH	SUPPORT ASSY
206-050-128-001	SV	SHOE ASSY, SKID
206-050-129-001	NE	SHOE ASSY
206-050-133-007	SV	RING
206-050-135-007	NE	FITTING L/H
206-050-136-001	OH	SKID PANEL ASSY
206-050-136-002	OH	SKID PANEL ASSY
206-050-136-183	OH	SKID PANEL
206-050-136-184	OH	SKID PANEL
206-050-142-001	OH	FLOAT ASSY
206-050-142-002	OH	FLOAT ASSY
206-050-142-007	OH	FLOAT BAG
206-050-158-001	OH	TUBE ASSY
206-050-158-003	OH	TUBE ASSY
206-050-158-007	SV	LONG TUBES
206-050-165-001	OH	BLOCK
206-050-165-003	AR	BLOCK, FWD



206-050-165-005	AR	BLOCK, AFT
206-050-165-007	OH	BLOCK, AFT
206-050-166-003	SV	PLATE ASSY
206-050-166-027	SV	PLATE ASSY.
206-050-169-001	OH	CROSS TUBE
206-050-169-001	OH	CROSS TUBE
206-050-169-003	OH	CROSS TUBE
206-050-170-001	SV	TUBE ASSY
206-050-170-003	SV	TUBE ASSY
206-050-170-003	NS	TUBE ASSY
206-050-170-011	OH	TUBE ASSY
206-050-170-017	SV	LONG TUBES
206-050-172-001	SV	STRAP
206-050-172-003	SV	STRAP
206-050-218-007	OH	SUPPORT ASSY
206-050-218-101	OH	AFT SUPPORT INSTAL
206-050-221-003	OH	SUPPORT ASSY
206-050-221-009	OH	SUPPORT INSTAL FWD
206-050-221-011	OH	SUPPORT ASSY
206-050-223-001	OH	SPACER
206-050-224-001	SV	STRAP ASSY
206-050-227-007	SV	CUFF ASSY
206-050-227-008	SV	CUFF ASSY
206-050-227-011	SV	CUFF ASSY LH
206-050-227-012	SV	CUFF ASSY RH
206-050-227-013	SV	FAIRING ASSY
206-050-244-103	NS	SADDLE
206-050-244-103	OH	SADDLE
206-050-248-121	NE	FLOAT BAG ASSY
206-050-262-101	SV	CLAMP
206-050-264-101	OH	CLAMP
206-052-104-001	SV	FITTING
206-052-104-003	OH	FITTING
206-052-105-013	AR	STRAP ASSY
206-052-110-001	OH	SHOE ASSY
206-053-109-005	NE	CROSSTUBE ASSY AFT
206-053-109-007	OH	CROSSTUBE
206-053-109-107	OH	CROSS TUBE
206-053-118-020	OH	SKID TUBE ASSY
206-053-118-103	OH	SKID TUBE
206-053-119-101	NS	CROSS TUBE AFT
206-053-123-001	SV	SPACER
206-053-125-069	OH	FAIRING
206-053-133-001	OH	COVER
206-053-133-002	OH	COVER
206-053-134-001	OH	CROSS TUBE
206-053-134-005	OH	CROSS TUBE

206-053-138-002	OH	SHOE ASSY
206-053-138-005	OH	SHOE ASSY
206-053-157-001	SV	SPACER
206-053-162-003	OH	FAIRING ASSY FWD L/H
206-053-162-015	NE	SPACER
206-053-162-017	NE	SEAL
206-053-162-019	NE	SEAL
206-053-162-021	NE	SEAL
206-053-163-001	SV	SUPPORT
206-053-163-002	SV	SUPPORT
206-053-163-007	SV	CLIP
206-053-163-009	SV	SPACER
206-053-167-003	OH	FAIRING ASSY AFT L/H
206-053-167-004	OH	FAIRING ASSY AFT R/H
206-053-167-006	OH	FAIRING ASSY FWD RH
206-053-167-006	OH	FAIRING ASSY FWD RH
206-053-167-013	SV	SPACER
206-053-167-015	SV	SUPPORT
206-053-167-017	SV	SUPPORT
206-053-168-001	SV	SUPPORT
206-053-168-002	SV	SUPPORT
206-053-168-003	SV	CLIP
206-053-184-113	NE	SKID TUBE ASSY, LH
206-053-184-114	NE	SKID TUBE ASSY
206-053-203-101	NS	CROSS TUBE FWD
206-053-203-103	NE	CROSS TUBE AFT
206-060-200-117	OH	STARTER GENERATOR
206-061-101-019	OH	MOUNT ASSY
206-061-101-020	OH	LEG ASSY
206-061-103-021	RP	LEG ASSY, L/H
206-061-103-022	OH	LEG ASSY
206-061-103-3	NS	LEVER DROOP COMPENS
206-061-104-003	OH	FITTING
206-061-107-001	NS	LEVER
206-061-107-001	SV	LEVER
206-061-107-003	SV	LEVER
206-061-107-003	NE	LEVER
206-061-201-001	NE	BELLMOUTH
206-061-201-113	OH	BELLMOUTH ASSY
206-061-224-003	OH	SCREEN ASSY
206-061-224-019	OH	FLOOR ASSY
206-061-224-035	NE	SCREEN ASSY
206-061-224-037	NE	FLOOR ASSY
206-061-230-019	SV	PLATE
206-061-236-007	OH	FAIRING ASSY
206-061-432-001	OH	BLOWER ASSY
206-061-432-005	OH	IMPELLER

206-061-432-037	OH	HOUSING, BLOWER
206-061-503-001	OH	DUCT ASSY
206-061-505-023	OH	OIL TANK UNIT
206-061-507-001	SV	SUPPORT
206-061-507-001	OH	SUPPORT
206-061-508-003	SV	SUPPORT
206-061-508-005	OH	SUPPORT
206-061-544-001	OH	DUCT ASSY
206-061-601-001	NE	DRAIN
206-061-604-001	SV	FITTING
206-061-613-001	OH	FITTING FUEL
206-061-613-001	SV	FITTING FUEL
206-061-623-003	OH	CROSS
206-061-624-001	OH	CONNECTOR
206-061-631-005	OH	ADAPTER
206-061-651-001	SV	FLANGE
206-061-653-001	SV	BRACKET
206-061-667-001	NE	TUBE ASSY
206-061-694-001	NE	HOSE
206-061-712-003	NS	CLEVIS
206-061-712-141	SV	INDICATOR COWL
206-061-715-001	SV	LEVER
206-061-716-003	SV	LEVER ASSY.
206-061-718-003	OH	TUBE ASSY
206-061-730-001	OH	SUPPORT
206-061-733-005	OH	SUPPORT ASSY
206-061-740-001	SV	BRACKET
206-061-740-003	SV	BRACKET
206-061-745-003	OH	TUBE
206-061-747-001	OH	BRACKET ASSY
206-061-747-001	NE	BRACKET ASSY
206-061-800-021	OH	INDUCTION COWLING
206-061-801-109	OH	COWLING
206-061-801-151	OH	FAIRING ASSY
206-061-803-149	OH	INDUCTION COWLING
206-061-804-071	OH	COWLING, ASSY
206-061-804-071	OH	COWLING, ASSY
206-061-805-006	OH	PANEL, ENGINE RH
206-061-808-069	OH	FAIRING ASSY
206-061-810-001	OH	SIDE PANEL ASSY LH
206-061-810-003	NS	DOOR ASSY
206-061-813-003	NS	COVER
206-061-813-007	NS	PLATE ASSY
206-061-813-011	OH	PLATE ASSY
206-061-813-011	NS	PLATE ASSY
206-061-901-131	NE	FIREWALL, FWD
206-061-902-055	OH	AFT FIREWALL

206-062-103-001	OH	LEG ASSY
206-062-200-001	OH	STARTER GENERATOR
206-062-200-007	OH	ADAPTER
206-062-200-111	OH	STARTER GENERATOR
206-062-607-001	OH	CHECK VALVE
206-062-627-003	OH	TACH GENERATOR
206-062-627-003	OH	TACH GENERATOR
206-062-627-003	OH	TACH GENERATOR
206-062-627-003	OH	TACH GENERATOR
206-062-654-001	SV	FLANGE
206-062-660-001	AR	FUEL ADAPTER & CAP
206-062-665-001	SV	FITTING
206-062-673-001	OH	PUMP, BOOST FUEL
206-062-683-101	SV	BRACKET FUEL FILTER
206-062-713-001	OH	ROD ASSY
206-062-721-007	OH	ACTUATOR, LINEAR
206-062-721-007	OH	ACTUATOR, LINEAR
206-062-721-011	OH	LINEAR ACTUATOR
206-062-721-011	OH	LINEAR ACTUATOR
206-062-721-109	OH	ACTUATOR, LINEAR
206-062-721-113	OH	LINEAR ACTUATOR
206-062-721-115	OH	LINEAR ACTUATOR
206-062-721-117	NE	ACTUATOR, LINEAR
206-062-721-117	OH	ACTUATOR, LINEAR
206-062-722-001	OH	SUPPORT
206-062-723-001	OH	BELLCRANK ASSY
206-062-815-097	OH	COWLING, INDUCTION
206-062-815-117	OH	INDUCTION COWLING
206-062-815-123	AR	INDUCTION COWLING
206-062-815-139	OH	FAIRING ASSY
206-062-830-001	NE	TUBE ASSY
206-062-901-085	NS	DOOR ASSY
206-062-902-055	OH	AFT.FIREWALL
206-063-110-001	SV	FITTING
206-063-503-001	OH	DUCT
206-063-513-001	SV	TUBE ASSY
206-063-632-101	OH	FUEL CELL
206-063-632-102	OH	FUEL CELL
206-063-634-001	SV	PUMP FUEL EJECTOR DUAL
206-063-634-001	SV	PUMP FUEL EJECTOR DUAL
206-063-635-001	OH	SWITCH, PRESS
206-063-636-102	OH	FUEL BLADDER
206-063-662-001	OH	TUBE
206-063-663-001	OH	TUBE
206-063-682-003	OH	FUEL CELL
206-063-699-001	OH	LINE ASSY.
206-063-709-001	NE	ARM ASSY

206-063-719-001	OH	BRACKET
206-063-719-003	OH	BRACKET ASSY
206-063-721-001	SV	BELLCRANK
206-063-816-001	OH	FITTING
206-064-001-103	OH	FLOW SWITCH
206-064-105-101	OH	LEG ASSY, LH
206-064-105-102	OH	LEG ASSY, RH
206-064-106-101	OH	LEG ASSY, ENGINE MOUNT
206-064-107-109	OH	LEG ASSY, AFT, LH
206-064-107-111	OH	LEG ASSY, AFT, RH
206-064-111-001	OH	MOUNT
206-064-203-003	NE	DUCT ASSY
206-064-213-003	OH	SCREEN ASSY
206-064-601-001	OH	SWITCH, FUEL PRES.
206-064-601-001	OH	SWITCH, FUEL PRES.
206-064-601-001	OH	SWITCH, FUEL PRES.
206-064-601-001	OH	SWITCH, FUEL PRES.
206-064-601-103	OH	SWITCH, FUEL PRESS
206-064-624-101	SV	VENTURI
206-064-628-101	SV	TUBE
206-064-636-101	SV	FUEL XMTR
206-064-904-009	OH	BOX ASSY
206-064-904-010	OH	BOX ASSY
206-064-904-028	OH	BOX ASSY
206-070-203-001	OH	PLENUM
206-070-211-001	OH	ADAPTER ASSY
206-070-214-001	SV	ADAPTOR ASSY
206-070-218-003	OH	SHROUD ASSY
206-070-218-019	OH	SHROUD ASSY
206-070-228-001	OH	HEATER CONTROL ASSY
206-070-241-001	OH	IND. DUAL TACH
206-070-243-001	OH	INDICATOR N1
206-070-260-009	OH	INDICATOR, TACH
206-070-265-007	OH	DUAL TACH
206-070-265-007	OH	DUAL TACH
206-070-265-007	OH	DUAL TACH
206-070-265-011	OH	DUAL TACH
206-070-265-101	OH	IND. DUAL TORQUE
206-070-266-009	OH	INDICATOR, N1
206-070-266-009	OH	INDICATOR, N1
206-070-267-001	OH	INDICATOR TURBINE
206-070-267-011	OH	INDICATOR, TOT
206-070-268-009	OH	INDICATOR, TORQUE
206-070-268-009	OH	INDICATOR, TORQUE
206-070-269-001	OH	INSTRUMENT CLUSTER
206-070-274-005	OH	INDICATOR, TURN SLIP
206-070-274-005	OH	INDICATOR, TURN SLIP

206-070-274-005	OH	INDICATOR, TURN SLIP
206-070-320-003	OH	ATTITUDE, INDICATOR
206-070-360-001	OH	TORQUE IND.
206-070-399-001	OH	TORQUE IND.
206-070-399-003	OH	INDICATOR, TORQUE
206-070-399-003	OH	INDICATOR, TORQUE
206-070-399-003	OH	INDICATOR, TORQUE
206-070-457-003	SV	FAN
206-070-471-009	NS	NOZZLE ASSY
206-070-473-001	OH	INST CLUSTER
206-070-473-003	OH	INSTRUMENT CLUSTER
206-070-473-007	OH	INSTRUMENT CLUSTER
206-070-491-009	OH	VALVE, MIXING
206-070-497-001	OH	DUCT
206-070-547-001	NE	TUBE ASSY
206-070-553-001	SV	SUPPORT ASSY
206-070-559-003	AR	STRAP ASSY
206-070-564-003	OH	AXLE/CARGO HOOK
206-070-576-003	SV	PLATE
206-070-580-007	OH	FRAME H CARGO HOOK
206-070-584-001	OH	SUPPORT ASSY
206-070-725-003	NS	SCUFF PLATE
206-070-728-017	SV	CUSHION, CREW
206-070-729-009	SV	CUSHION SEAT
206-070-760-002	OH	COVER
206-070-767-012	OH	HEADLINER
206-070-782-003	OH	PANEL ASSY
206-070-784-016	OH	PANEL
206-070-785-016	OH	PANEL ASSY
206-070-989-001	OH	INDICATOR, TORQUE
206-071-251-105	SV	ALIGNMENT ASSY. PDU
206-071-292-101	SV	ALIGNMENT ASSY. LCHR
206-072-220-101	AR	SEAT BACK
206-072-531-001	NE	COMP. STORAGE BOX
206-072-748-003	OH	SKIRT ASSY
206-072-748-004	OH	SKIRT ASSY
206-072-748-005	OH	SKIRT ASSY
206-072-748-006	OH	SKIRT ASSY
206-072-748-103	OH	SKIRT ASSY
206-072-748-104	OH	SKIRT ASSY
206-072-901-001	OH	FRAME ASSY
206-072-903-001	NE	CABLE, ASSY
206-072-903-003	AR	RELEASE CABLE
206-072-904-001	NE	BRACKET
206-072-938-001	NS	SUPPORT ASSY
206-072-938-001	NS	SUPPORT ASSY
206-072-938-001	NS	SUPPORT ASSY

206-072-942-001	NE	WEIGHT
206-072-942-002	NS	RADIUS BLOCK
206-072-942-002	NE	RADIUS BLOCK
206-072-942-002	NS	RADIUS BLOCK
206-073-493-001	OH	DUCT ASSY
206-073-913-001	OH	BLOWER ASSY
206-073-913-001	OH	BLOWER ASSY
206-073-913-001	OH	BLOWER ASSY
206-073-924-101	OH	VALVE, SHUT-OFF
206-073-925-001	OH	CONTROL
206-073-926-107	OH	RELIEF VALVE
206-075-011-003	OH	LIGHTED PANEL
206-075-185-001	OH	TORQUE INDICATOR
206-075-186-003	OH	DUAL LOADMETER FUEL
206-075-186-003	OH	DUAL LOADMETER FUEL
206-075-187-001	OH	IND. P/T
206-075-187-001	OH	IND. P/T
206-075-188-001	OH	INDICATOR, T/P
206-075-188-001	OH	INDICATOR, T/P
206-075-188-001	OH	INDICATOR, T/P
206-075-188-001	OH	INDICATOR, T/P
206-075-188-003	OH	INDICATOR, T/P
206-075-188-005	OH	INDICATOR, OIL TEMP
206-075-189-001	OH	FUEL QTY INDICATOR
206-075-189-001	OH	FUEL QTY INDICATOR
206-075-189-001	OH	FUEL QTY INDICATOR
206-075-190-001	OH	INDICATOR, TOT
206-075-191-105	NE	PANEL ASSY
206-075-192-001	OH	PANEL, FUEL VALVE
206-075-193-001	OH	INDICATOR BOARD
206-075-193-003	OH	INDICATOR BOARD
206-075-210-001	OH	BOARD ASSY
206-075-224-007	NE	CABLE ASSY
206-075-224-007	SV	CABLE ASSY
206-075-303-001	OH	LIGHT ASSY
206-075-318-001	OH	LIGHT ASSY
206-075-319-011	OH	ADAPTER, POS. LIGHT
206-075-319-012	SV	ADAPTER ASSY RH
206-075-336-037	SV	CONSOLE, OVERHEAD
206-075-447-003	OH	VOLTAGE REGULATOR
206-075-447-007	OH	VOLTAGE REGULATOR
206-075-447-007	OH	VOLTAGE REGULATOR
206-075-447-007	OH	VOLTAGE REGULATOR
206-075-447-007	OH	VOLTAGE REGULATOR
206-075-545-001	SV	SENSOR, RPM ENG.
206-075-545-001	SV	SENSOR, RPM ENG.
206-075-550-001	OH	SWITCH PANEL

206-075-558-001	SV	PNL-INTEG LIT
206-075-572-005	OH	PANEL
206-075-607-101	OH	ATTITUDE GYRO
206-075-633-001	OH	TUBE ASSY
206-075-681-003	OH	TACH, DUAL
206-075-682-001	OH	INDICATOR, N1
206-076-006-007	OH	DUAL CONTROL KIT
206-076-009-015	OH	JACKET ASSY
206-076-022-101	OH	HYDRAULIC PUMP/RES.
206-076-030-101	OH	HYD. PUMP
206-076-030-111	OH	PUMP, HYDRAULIC
206-076-031-013	OH	SERVO, HYD.
206-076-031-017	OH	HYDRAULIC SERVO
206-076-031-023	OH	SERVO, M/R
206-076-035-101	OH	FILTER ASSY
206-076-037-001	OH	VALVE
206-076-047-101	OH	CYLINDER ASSY
206-076-072-001	OH	TUBE
206-076-376-003	SV	FITTING
206-076-389-001	OH	LINE/HYDRAULIC
206-076-513-001	OH	TUBE ASSY
206-282-001-000	NE	KIT, DECAL RANGE EXT
206-323-017	NS	CROSS TUBE FWD
206-332-008	OH	CROSSTUBE
206-343-157-000	OH	STRAP ASSY
206-351-0002	SV	LOADMETER
206-351-0003	OH	INDICATOR
206-351-0004	OH	GAUGE, TEMP
206-351-0006	OH	IND/ENG OIL PRESS
206-360-500-101	OH	OIL COOLER
206-375-007-101	OH	INDICATOR, TOT
206-410-005-000	NE	PANEL,HANDLE CREW LH
206-410-006-000	NE	PANEL,HANDLE CREW RH
206-410-017-000	NE	PANEL, CREW DOOR LH
206-410-018-000	NE	PANEL, CREW DOOR RH
206-420-005-000	NE	PANEL
206-430-003-000	NE	PANEL, PASS DOOR LH
206-430-004-000	NE	PANEL, PASS DOOR RH
206-430-005-000	NE	PANEL,HANDLE PASS LH
206-430-006-000	NE	PANEL,HANDLE PASS RH
206-531-001-000	NE	STEP ASSEMBLY
206-704-148-118	NE	GUTTER, RAIN
206-706-010-011	OH	FLOAT KIT
206-706-016-013	NS	CABLE ASSY
206-706-106-011	SV	HEATER, JANITROL
206-706-114-001	SV	RING
206-706-145-001	SV	SPACER





208374-1	OH	VALVE, SOLENOID
208374-1	OH	VALVE, SOLENOID
2085131-1001	OH	PA AMPLIFIER
20-872	NS	LAMP HOLDER
209-001-053-001	NE	BEARING
209-001-192-001	OH	BOX ASSY.
209-001-348-001	SV	BRACKET ASSY
209-001-719-001	NS	CLEVIS
209-001-721-001	NS	SUPPORT ASSY
209-010-443-001	NS	ROD END ASSY
209-011-713-003	OH	LINK
209-011-715-001	OH	IDLER ASSY
209-011-720-001	OH	HOUSING
209-011-721-001	SV	HOUSING
209-025-325-011	SV	LIGHT ASSY 01
209-025-372-001	SV	DELAY RELAY 01
209-030-357-001	NS	LINK ASSY
209-030-800-015	OH	TAIL BOOM ASSY
209-030-853-021	NE	RIB ASSY
209-031-816-105	OH	COVER ASSY
209-040-171-101	OH	RETAINER
209-040-173-103	OH	QUILL ASSY
209-060-221-101	OH	STARTER GENERATOR
209-060-501-001	OH	VALVE ASSY
209-060-522-003	NS	OIL COOLER
209-060-522-003	OH	OIL COOLER
209-062-104-001	OH	TUBE ASSY
209-062-104-002	SV	ENGINE MOUNT
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-214-001	OH	ACTUATOR, LINEAR
209-062-501-001	OH	OIL COOLER
209-062-501-001	NE	OIL COOLER
209-062-501-002	OH	OIL COOLER
209-062-501-002	OH	OIL COOLER
209-062-501-005	OH	OIL COOLER
209-062-502-101	OH	BLOWER ASSY
209-062-502-101	OH	BLOWER ASSY
209-062-502-101	OH	BLOWER ASSY
209-062-502-101	OH	BLOWER ASSY
209-062-502-101	OH	BLOWER ASSY
209-062-534-003	NE	FITTING
209-062-808-001	OH	FIRE EXTINGUISHER

209-062-808-001	OH	FIRE EXTINGUISHER
209-062-822-001	NS	STRUT
209-062-908-105	OH	FIRE BOTTLE
209-062-908-105	OH	FIRE BOTTLE
209-062-911-001	OH	FRAME ASSY
209-070-262-009	OH	INDICATOR, P/T
209-070-262-101	OH	INDICATOR, P/T
209-070-262-101	OH	INDICATOR, P/T
209-070-262-101	OH	INDICATOR, P/T
209-070-263-001	OH	VOLTAGE INDICATOR
209-070-263-003	OH	VOLTMETER, AC/DC
209-070-263-003	OH	VOLTMETER, AC/DC
209-070-264-001	OH	AMMETER, DUAL
209-070-264-003	OH	INDICATOR AMP
209-070-275-001	OH	INDICATOR, PRESS
209-070-280-007	OH	SWITCH ASSY
209-072-433-001	OH	VALVE ASSY
209-072-433-001	OH	VALVE ASSY
209-072-433-007	OH	VALVE, SHUTOFF
209-072-433-009	OH	VALVE ASSY
209-072-433-009	OH	VALVE ASSY
209-072-433-101	OH	VALVE, SHUTOFF
209-075-228-001	OH	VOLTAGE REGULATOR
209-075-325-011	OH	LIGHT ASSY
209-075-325-045	OH	ANNUNCIATOR PANEL
209-075-325-109	OH	PANEL, CAUTION
209-075-325-161	OH	MASTER CAUTION PANEL
209-075-326-001	OH	RPM DETECTOR
209-075-326-001	OH	RPM DETECTOR
209-075-326-001	OH	RPM DETECTOR
209-075-326-001	OH	RPM DETECTOR
209-075-326-005	OH	DETECTOR, RPM
209-075-326-005	OH	DETECTOR, RPM
209-075-326-005	OH	DETECTOR, RPM
209-075-326-101	OH	RPM DETECTOR
209-075-365-001	OH	DIRECTIONAL GYRO
209-075-365-003	OH	DIRECTIONAL GYRO
209-075-372-001	SV	TIME DELAY RELAY
209-075-387-001	SV	POWER SUPPLY
209-075-395-001	OH	CONTROL UNIT, FIRE
209-075-415-007	SV	CABLE ASSY.
209-075-535-001	OH	CONTROL UNIT
209-075-535-001	OH	CONTROL UNIT
209-076-174-103	NE	RETAINER
209-076-655-003	SV	CHECK VALVE
209-175-315-003	SV	CONTROL BOARD ASSY.
20B63-1	OH	VOLT REQ.

20B63-1C	OH	VOLT. REG. AC
20D23465-1	SV	LIFE RAFT
210-057-00	OH	LOAD CELL
21-007-9-13	OH	BUSHING
2100905-1	OH	BLOWER
210-110-00	OH	SUSPENSION ASSY
21-012C19H7H	NE	RING
211-1025	OH	FILTER ASSY
2112DH1NBC557	NE	RELAY
2112DH1NDC557	NE	RELAY
211DHINBC577	SV	RELAY
212-001-002-001	OH	BELLCRANK
212-001-011-009	OH	TUBE ASSY
212-001-012-029	OH	TUBE ASSEMBLY
212-001-020-001	SV	BELLCRANK 01
212-001-035-105	OH	FORCE GRADIENT ASSY
212-001-051-051	OH	TUBE ASSEMBLY
212-001-054-005	OH	TUBE ASSY
212-001-056-001	OH	TUBE ASSY
212-001-059-001	OH	CLEVIS
212-001-060-001	OH	TUBE ASSEMBLY
212-001-062-001	OH	TUBE ASSY
212-001-062-001	OH	TUBE ASSY
212-001-062-003	OH	TUBE ASSY
212-001-062-003	OH	TUBE ASSY
212-001-063-001	NE	TUBE ASSY
212-001-063-001	OH	TUBE ASSY
212-001-063-003	OH	TUBE ASSY.
212-001-063-003	OH	TUBE ASSY.
212-001-076-001	SV	GRIP ASSY.
212-001-079-025	OH	TUBE ASSY
212-001-082-001	SV	BELLCRANK
212-001-083-001	SV	BELLCRANK 01
212-001-092-001	SV	CONTROL TUBE 01
212-001-094-001	SV	IDLER 01
212-001-095-001	SV	IDLER 01
212-001-100-001	OH	BELLCRANK
212-001-100-001	OH	BELLCRANK
212-001-105-001	OH	ELBOW
212-001-109-001	OH	NUT
212-001-110-001	OH	GEAR SECTOR ASSY
212-001-111-001	OH	GEAR SECTOR ASSY
212-001-111-001	NS	GEAR SECTOR ASSY
212-001-113-001	SV	BELLCRANKS
212-001-116-001	OH	SUPPORT
212-001-116-006	SV	TUBE ASSY
212-001-124-001	OH	ELBOW ASSY

212-001-124-001	NS	ELBOW ASSY
212-001-126-005	OH	BELLCRANK
212-001-128-001	OH	BELLCRANK
212-001-156-001	NE	CAP
212-001-156-001	NS	CAP
212-001-162-007	OH	ELBOW/SUPPORT ASSY
212-001-162-015	OH	ELBOW AND SUPPORT
212-001-162-015	OH	ELBOW AND SUPPORT
212-001-162-015	AR	ELBOW AND SUPPORT
212-001-162-015	AR	ELBOW AND SUPPORT
212-001-164-001	OH	STICK ASSY
212-001-164-001	OH	STICK ASSY
212-001-164-007	OH	STICK ASSY, PILOTS COLLECTIVE
212-001-164-009	SV	STICK ASSY
212-001-164-105	OH	STICK ASSY
212-001-167-001	OH	STICK ASSY
212-001-181-101	NE	STICK TUBE
212-001-183-001	SV	SUPPORT
212-001-185-031	OH	TUBE ASSY
212-001-189-001	OH	BELLCRANK
212-001-189-005	OH	BELLCRANK
212-001-280-105	AR	TUBE ASSY
212-001-280-105	AR	TUBE ASSY
212-001-313-001	OH	SUPPORT
212-001-317-001	OH	BELLCRANK
212-001-321-001	OH	ARM ASSY
212-001-322-001	OH	TUBE ASSY
212-001-706-001	OH	SUPPORT
212-001-707-003	OH	SUPPORT
212-001-708-001	OH	WALKING BEAM ASSY
212-001-710-001	OH	BELLCRANK
212-001-748-001	OH	SUPPORT ASSY
212-001-750-001	OH	MIXER LEVER ASSY
212-001-780-001	OH	MIXER ASSY
212-001-900-001	OH	BELLCRANK
212-001-901-001	OH	WALKING BEAM ASSY
212-001-902-001	OH	BELLCRANK
212-001-908-001	OH	BELLCRANK
212-010-004-005	SV	GEAR BOX
212-010-042-005	OH	SUPPORT
212-010-300-001	OH	STABILIZER BAR
212-010-304-001	SV	WASHER
212-010-306-001	OH	WEIGHT
212-010-306-001	OH	WEIGHT
212-010-405-001	NE	SLEEVE
212-010-703-001	OH	TRUNNION SET
212-010-709-001	OH	BELLCRANK

212-010-714-003	NS	WASHER
212-010-716-001	OH	TRUNNION SET
212-010-716-011	NE	HORN ASSY
212-010-716-011	OH	HORN ASSY
212-010-716-011	OH	HORN ASSY
212-010-725-001	SV	CROSSHEAD 01
212-010-728-001	NS	WASHER
212-010-738-001	OH	TRUNNION SET
212-010-777-001	SV	BALANCE ARM
212-010-778-001	SV	INDICATOR
212-010-778-001	AR	INDICATOR
212-020-112-003	SV	HYD ACCUMULATOR
212-025-236-031	SV	RELAY 01
212-026-004-005	SV	ACTUATOR
212-030-009-097	OH	DECK ASSY
212-030-010-061	OH	PANEL ASSY
212-030-010-085	OH	PANEL ASSY
212-030-010-085	NE	PANEL ASSY
212-030-010-085	NE	PANEL ASSY
212-030-010-159	NE	PANEL ASSY
212-030-010-159	NE	PANEL ASSY
212-030-010-163	OH	PANEL, LH ROOF
212-030-014-001	OH	DOOR ASSY
212-030-014-001	OH	DOOR ASSY
212-030-019-90A	OH	NOSE ASSY LH
212-030-040-005	OH	POST INST LLH
212-030-064-025	OH	FLANGE LH
212-030-064-026	OH	FLANGE RH
212-030-065-003	NE	NOSE PANEL
212-030-065-077	NE	NOSE PANEL
212-030-065-087	NE	NOSE PANEL
212-030-065-103	NE	NOSE PANEL
212-030-065-111	NE	PANEL ASSY
212-030-065-111	NE	PANEL ASSY
212-030-065-151	NE	NOSE PANEL
212-030-065-171	NE	PANEL ASSY
212-030-065-175	NE	NOSE PANEL
212-030-065-179	NE	PANEL ASSY
212-030-065-179	NE	PANEL ASSY
212-030-065-205	NE	NOSE PANEL
212-030-065-221	NE	NOSE PANEL
212-030-065-227	NE	NOSE PANEL
212-030-065-231	NE	NOSE PANEL
212-030-065-233	NE	SHELF ASSY
212-030-065-241	NE	NOSE PANEL
212-030-065-257	NE	NOSE PANEL
212-030-066-147	OH	PANEL ASSY

212-030-069-030	OH	FRAME RH
212-030-069-033	OH	FRAME LH
212-030-072-013	OH	FLANGE
212-030-077-011	OH	PANEL
212-030-078-041	OH	FLANGE
212-030-079-085	OH	DOOR ASSY
212-030-079-086	OH	COVER
212-030-079-089	NE	NOSE SKIN
212-030-079-090	NE	NOSE SKIN
212-030-079-89A	OH	PANEL ASSY
212-030-079-89A	OH	PANEL ASSY
212-030-081-001	OH	HINGE INST. LH
212-030-081-002	OH	HINGE INST. RH
212-030-081-011	OH	BRACKET
212-030-084-015	OH	SKIN
212-030-084-017	OH	BRACKET
212-030-100-063	OH	TAILBOOM
212-030-100-063	OH	TAILBOOM
212-030-100-111	OH	TAIL BOOM
212-030-100-115	OH	TAIL BOOM
212-030-100-203	OH	TAIL BOOM
212-030-100-229	OH	TAIL BOOM
212-030-100-229FM	OH	TAILBOOM
212-030-100-229FM	OH	TAILBOOM
212-030-101-003	OH	PANEL ASSY
212-030-104-005	OH	LIFT LINK
212-030-104-101	OH	LIFT LINK
212-030-108-005	OH	FILLER ASSY
212-030-108-007	OH	FILLER ASSY
212-030-143-003	SV	PANEL
212-030-143-009	OH	PANEL ASSY
212-030-143-009	SV	PANEL ASSY
212-030-153-027	OH	PANEL ASSY
212-030-164-147	SV	FIREWALL
212-030-169-217	OH	MAIN BEAM
212-030-179-081	NE	PANEL ASSY
212-030-179-093	OH	PANEL ASSY
212-030-179-101	OH	PANEL ASSY
212-030-182-002	NE	COVER R/H
212-030-186-015	OH	PANEL
212-030-188-001	OH	PANEL ASSY
212-030-188-001	NE	PANEL ASSY
212-030-188-002	OH	FLOOR PANEL
212-030-188-002	NE	FLOOR PANEL
212-030-188-002	OH	FLOOR PANEL
212-030-188-003	NE	FLOOR PANEL
212-030-188-004	NE	FLOOR PANEL

212-030-188-005	NE	FLOOR PANEL
212-030-188-006	NE	FLOOR PANEL
212-030-205-001	OH	PANEL ASSY
212-030-206-001	OH	PANEL ASSY
212-030-208-017	SV	COVER
212-030-217-011	OH	DOOR ASSY
212-030-217-011	OH	DOOR ASSY
212-030-219-005	OH	DOOR ASSY
212-030-244-001	OH	DOOR ASSY
212-030-244-001	NE	DOOR ASSY
212-030-244-001	NE	DOOR ASSY
212-030-244-001	OH	DOOR ASSY
212-030-244-003	NE	DOOR PANEL
212-030-244-101	NE	DOOR PANEL
212-030-244-103	NE	DOOR PANEL
212-030-244-109	NE	DOOR ASSY
212-030-244-111	NE	DOOR PANEL
212-030-250-001	OH	DOOR ASSY
212-030-250-001	OH	DOOR ASSY
212-030-262-001	OH	DOOR ASSY
212-030-262-001	OH	DOOR ASSY
212-030-262-002	OH	DOOR ASSY
212-030-265-015	OH	COVER ASSY
212-030-268-003	OH	PANEL ASSY LH
212-030-268-003	NE	PANEL ASSY LH
212-030-268-004	OH	PANEL ASSY RH
212-030-268-004	NE	PANEL ASSY RH
212-030-268-004	NE	PANEL ASSY RH
212-030-268-007	NE	PANEL ASSY LH
212-030-268-007	NE	PANEL ASSY LH
212-030-268-008	NE	PANEL
212-030-273-001	OH	STRAP ASSY
212-030-275-001	OH	DOOR ASSY
212-030-276-001	OH	DOOR ASSY
212-030-276-001	NE	DOOR ASSY
212-030-282-101	OH	DOOR, ASSY
212-030-282-101	OH	DOOR, ASSY
212-030-285-018	OH	COVER
212-030-307-008	OH	STEP ASSY
212-030-309-001	OH	ARM
212-030-330-001	NE	BULKHEAD
212-030-330-002	NE	PANEL ASSY
212-030-330-003	NE	BULKHEAD
212-030-330-004	NE	BULKHEAD
212-030-330-005	NE	BULK HEAD
212-030-330-006	NE	BULKHEAD
212-030-330-101	NE	BULKHEAD



212-030-330-102	NE	BULKHEAD
212-030-330-105	NE	BULKHEAD
212-030-330-106	NE	BULK HEAD
212-030-348-001	SV	DOOR ASSY
212-030-348-003	OH	NOSE DOOR
212-030-348-003	NE	NOSE DOOR
212-030-348-009	OH	DOOR ASSY
212-030-348-101	NE	DOOR PANEL
212-030-348-103	OH	DOOR ASSY, NOSE
212-030-378-001	OH	PANEL ASSY
212-030-378-003	OH	PANEL ASSY
212-030-378-004	OH	PANEL ASSY
212-030-378-004	OH	PANEL ASSY
212-030-378-005	OH	PANEL ASSY
212-030-378-007	OH	PANEL ASSY
212-030-379-001	OH	SUPPORT, FLOAT KIT
212-030-379-007	OH	TUBE ASSY
212-030-381-017	OH	RETAINER
212-030-381-019	OH	RETAINER
212-030-381-021	OH	RETAINER
212-030-381-025	OH	RETAINER
212-030-381-039	OH	RETAINER
212-030-384-005	OH	SUPPORT
212-030-384-005	OH	SUPPORT
212-030-384-006	OH	SUPPORT
212-030-385-004	NS	SUPPORT
212-030-386-003	OH	SUPPORT ASSY
212-030-386-004	OH	SUPPORT
212-030-387-001	OH	SUPPORT
212-030-470-003	OH	STEP ASSY
212-030-496-001	OH	COVER, INTERIOR
212-030-498-001	OH	FIN ASSY IFR
212-030-498-001	OH	FIN ASSY IFR
212-030-503-103	OH	PANEL ASSY
212-031-332-009	OH	PANEL ASSY, FLOOR
212-040-003-007	OH	GEARBOX 42 DEG.
212-040-003-023	OH	GEAR BOX 42 DEG
212-040-004-005	OH	GEAR BOX 90 DEG.
212-040-004-005	OH	GEAR BOX 90 DEG.
212-040-004-009	OH	GEAR BOX 90 DEG.
212-040-004-009	OH	GEAR BOX 90 DEG.
212-040-005-103	OH	DRIVE SHAFT
212-040-005-103	OH	DRIVE SHAFT
212-040-118-001	NE	BUSHING
212-040-147-001	SV	SLINGER
212-040-153-001	NE	NUT
212-040-189-001	OH	SLEEVE

212-040-206-003	OH	COUPLING
212-040-207-001	NS	SPACER
212-040-216-101	SV	RETAINER
212-040-237-001	OH	VALVE ASSY
212-040-237-003	OH	VALVE BODY
212-040-363-001	NE	QUILL ASSY
212-040-365-025	OH	QUILL ASSY
212-040-365-033	OH	QUILL ASSY
212-040-365-113	OH	QUILL ASSY
212-040-450-001	OH	PINION
212-040-451-001	OH	GEAR
212-040-451-001	SV	GEAR
212-040-451-001	OH	GEAR
212-040-452-001	OH	SLEEVE ASSY
212-040-456-001	OH	BEARING SET
212-040-458-001	OH	NUT
212-040-500-004	OH	OUTPUT QUILL PINION
212-040-500-005	OH	INPUT QUILL PINION
212-040-501-001	OH	NUT
212-040-502-001	OH	SLEEVE ASSY
212-040-505-001	OH	PLUG
212-040-514-001	OH	SLEEVE & HOUSING
212-040-600-001	OH	HANGAR ASSY
212-040-600-001	AR	HANGAR ASSY
212-040-600-001	OH	HANGAR ASSY
212-040-600-005	OH	HANGAR ASSY
212-040-600-005	OH	HANGAR ASSY
212-040-600-005	OH	HANGAR ASSY
212-040-600-005	OH	HANGAR ASSY
212-040-602-001	OH	SHAFT
212-040-602-001	OH	SHAFT
212-040-602-003	OH	SHAFT
212-040-602-005	OH	SHAFT
212-040-602-007	OH	SHAFT
212-040-602-007	OH	SHAFT
212-040-602-007	OH	SHAFT
212-040-602-007	OH	SHAFT
212-040-614-001	NE	COUPLING
212-040-614-001	OH	COUPLING
212-040-630-005	OH	ADAPTER
212-040-686-001	OH	SHAFT DRIVE
212-040-771-001	OH	MOUNT
212-050-010-077	OH	DOOR POST
212-050-198-001	SV	SEAT BACKS
212-050-208-001	NS	FLOAT COVER L/H
212-051-113-003	OH	LINK
212-052-157-101	OH	OLEO MLG

212-060-203-001	OH	VALVE ASSY
212-060-203-001	OH	VALVE ASSY
212-060-203-001	OH	VALVE ASSY
212-060-203-003	OH	DUCT ASSY
212-060-203-003	OH	DUCT ASSY
212-060-203-005	OH	DOOR ASSY
212-060-203-027	OH	COVER
212-060-203-027	OH	COVER
212-060-204-001	OH	DUCT ASSY
212-060-204-001	OH	DUCT ASSY
212-060-204-001	OH	DUCT ASSY
212-060-204-002	NE	DUCT ASSY
212-060-204-002	AR	DUCT ASSY
212-060-204-002	NE	DUCT ASSY
212-060-204-002	AR	DUCT ASSY
212-060-208-001	SV	FITTING
212-060-208-001	SV	FITTING
212-060-222-101	OH	ADAPTER
212-060-224-011	SV	CONTROL ROD 01
212-060-304-110	SV	COWLING ASSY
212-060-600-003	OH	SUMP PANEL
212-060-629-001	NS	TUBE ASSY
212-060-649-001	OH	TUBE ASSEMBLY
212-060-710-005	OH	CAM
212-060-713-001	SV	BELLCRANK ASSEMBLY
212-060-714-033	SV	CONTROL TUBES 01
212-060-715-001	OH	MOUNT
212-060-720-001	OH	MOUNT ASSY
212-060-720-001	OH	MOUNT ASSY
212-060-723-001	OH	LEVER
212-060-723-001	OH	LEVER
212-060-724-001	OH	TUBE ASSY
212-060-724-011	OH	TUBE ASSY
212-060-724-011	OH	TUBE ASSY
212-060-724-013	SV	CONTROL ROD 01
212-060-724-013	OH	CONTROL ROD 01
212-060-724-015	OH	TUBE ASSY.
212-060-724-017	OH	TUBE ASSY
212-060-724-017	NE	TUBE ASSY
212-060-724-021	OH	CONTROL TUBE
212-060-724-029	OH	TUBE ASSY.
212-060-728-005	OH	JACKSHAFT ASSY
212-060-728-005	OH	JACKSHAFT ASSY
212-060-730-001	OH	MOUNT
212-060-730-005	SV	MOUNT
212-060-730-005	OH	MOUNT
212-060-732-005	SV	TORQUE TUBE

212-060-732-007	SV	TORQUE TUBE
212-060-734-003	OH	TUBE ASSY
212-060-737-005	OH	TUBE ASSY, TORQUE, LH
212-060-737-005	OH	TUBE ASSY, TORQUE, LH
212-060-737-007	OH	TUBE ASSY, TORQUE, RH
212-060-737-007	OH	TUBE ASSY, TORQUE, RH
212-060-737-007	OH	TUBE ASSY, TORQUE, RH
212-060-738-001	AR	STOP
212-060-740-001	OH	BELLCRANK ASSY
212-060-740-001	OH	BELLCRANK ASSY
212-060-740-001	OH	BELLCRANK ASSY
212-060-742-001	OH	MOUNT
212-060-743-001	OH	BELLCRANK
212-060-744-005	SV	LEVERS 01
212-060-745-001	OH	BELLCRANK ASSY
212-060-745-001	NS	BELLCRANK ASSY
212-060-746-001	OH	LEVER
212-060-747-001	OH	BELLCRANK
212-060-771-001	OH	MOUNT
212-060-771-001	OH	MOUNT
212-060-771-001	OH	MOUNT
212-060-771-1C	OH	BRACKET
212-060-774-001	OH	JACKSHAFT ASSY
212-060-775-001	OH	JACKSHAFT ASSY
212-060-777-001	OH	BELLCRANK
212-060-777-001	OH	BELLCRANK
212-060-777-001	OH	BELLCRANK
212-060-782-003	SV	JACKSHAFT ASSY.
212-060-785-003	OH	CAM
212-060-785-003	OH	CAM
212-060-785-003	OH	CAM
212-060-801-001	OH	FAIRING
212-060-801-001	OH	FAIRING
212-060-801-003	AR	FAIRING ASSY
212-060-801-005	OH	FAIRING ASSY
212-060-801-007	OH	FAIRING ASSY
212-060-802-057	OH	FAIRING ASSY
212-060-802-058	OH	FAIRING ASSY
212-060-802-058	NS	FAIRING ASSY
212-060-802-097	OH	FAIRING ASSY LH
212-060-802-098	OH	FAIRING ASSY RH
212-060-802-098	OH	FAIRING ASSY RH
212-060-802-111	OH	FAIRING ASSY
212-060-802-112	OH	FAIRING ASSY
212-060-802-151	OH	FAIRING ASSY
212-060-802-152	OH	FAIRING ASSY
212-060-802-153	OH	FAIRING ASSY

212-060-802-157	OH	FAIRING, INLET
212-060-803-009	OH	COWL ASSY TOP
212-060-803-119	NE	COWL ASSY
212-060-803-119	OH	COWL ASSY
212-060-803-119	OH	COWL ASSY
212-060-803-119	OH	COWL ASSY
212-060-803-133	OH	COWLING ASSY
212-060-803-133	OH	COWLING ASSY
212-060-803-133	AR	COWLING ASSY
212-060-803-161	OH	COWLING ASSY
212-060-803-163	OH	COWL ASSY
212-060-803-165	OH	COWL ASSY
212-060-804-005	OH	COWL ASSY
212-060-804-006	NS	COWL ASSY
212-060-804-006	OH	COWL ASSY
212-060-804-006	NS	COWL ASSY
212-060-804-006	NS	COWL ASSY
212-060-804-009	OH	COWL ASSY
212-060-804-010	OH	COWL ASSY
212-060-804-109	OH	COWLING ASSY
212-060-804-119	OH	COWLING ASSY
212-060-804-120	OH	COWLING ASSY
212-060-805-014	OH	COWLING ASSY
212-060-805-015	OH	COWLING ASSY
212-060-805-016	OH	COWLING ASSY
212-060-805-043	NE	GASKET
212-060-805-115	OH	COWLING ASSY
212-060-805-116	OH	COWLING ASSY
212-060-810-001	OH	LATCH FITTING
212-060-811-013	OH	COWLING ASSY
212-060-813-001	OH	HINGE ASSY
212-060-815-003	NS	HINGE HALF
212-060-817-007	OH	PILLAR ASSY, LH
212-060-817-008	OH	PILLAR ASSY, RH
212-060-817-008	NE	PILLAR ASSY, RH
212-060-818-001	OH	COWL ASSY
212-060-818-001	OH	COWL ASSY
212-060-818-001	OH	COWL ASSY
212-060-818-002	OH	COWLING ASSY
212-060-818-002	OH	COWLING ASSY
212-060-818-005	OH	COWLING ASSY LH
212-060-818-006	OH	COWLING ASSY RH
212-060-818-107	OH	COWLING ASSY LH
212-060-818-108	OH	COWLING ASSY RH
212-060-818-112	OH	COWLING ASSY
212-060-823-105	OH	BAFFLE
212-060-826-008	SV	LOCKPLATE,RH

212-060-900-173	OH	FIREWALL ASSY
212-060-900-183	OH	FIREWALL ASSY
212-060-900-184	OH	FIREWALL ASSY
212-060-900-287	OH	FIREWALL ASSY, FWD
212-060-900-303	OH	FIREWALL ASSY
212-060-901-109	OH	CHANNEL
212-060-901-117	OH	FIREWALL ASSY
212-060-901-117	OH	FIREWALL ASSY
212-060-901-119	OH	FIREWALL ASSY
212-060-901-121	OH	FIREWALL ASSY
212-060-901-122	OH	FIREWALL ASSY
212-060-901-123	NE	FIREWALL ASSY LH
212-060-901-125	OH	FIREWALL ASSY RH
212-060-901-149	OH	SKIN ASSY
212-060-901-163	OH	FIREWALL ASSY LH
212-060-901-163	OH	FIREWALL ASSY LH
212-060-901-164	OH	FIREWALL ASSY RH
212-060-901-164	OH	FIREWALL ASSY RH
212-060-901-191	OH	FIREWALL ASSY
212-060-901-191	OH	FIREWALL ASSY
212-060-901-193	OH	FIREWALL ASSY
212-060-901-193	OH	FIREWALL ASSY
212-060-901-205	OH	FIREWALL ASSY LH
212-060-901-207	OH	FIREWALL ASSY RH
212-060-901-210	OH	FIREWALL ASSY
212-060-909-003	OH	MOUNT ASSY
212-060-915-001	SV	TUBE ASSY. R/H
212-060-918-002	SV	SUPPORTS 01
212-060-919-001	AR	TUBE ASSY
212-060-921-001	SV	TUBE ASSY
212-060-921-001	OH	TUBE ASSY
212-060-921-002	SV	TUBE ASSY
212-060-923-005	SV	SENSING ELEMENT
212-060-930-001	SV	TUBE ASSY
212-060-933-001	OH	TUBE ASSY
212-060-934-001	OH	TUBE ASSY
212-061-015-001	NS	HOSE ASSY
212-061-100-101	AR	ENGINE MOUNT
212-061-102-001	OH	FITTING
212-061-103-001	OH	FITTING L/H
212-061-103-002	OH	FITTING R/H
212-061-107-003	OH	TRIPOD ASSY
212-061-108-003	OH	BIPOD ASSY
212-061-108-003	OH	BIPOD ASSY
212-061-111-002	OH	FITTING RH
212-061-113-001	OH	FITTING ASSY
212-061-114-001	OH	FITTING

212-061-115-007	OH	FITTING
212-061-115-008	OH	FITTING
212-061-201-11	OH	EJECTOR, EXHAUST LH
212-061-201-11	OH	EJECTOR, EXHAUST LH
212-061-201-12	OH	EJECTOR, EXHAUST
212-061-201-12	OH	EJECTOR, EXHAUST
212-061-202-009	OH	DUCT, EXHAUST LH
212-061-202-010	OH	DUCT, EXHAUST RH
212-061-202-101	OH	DUCT, EXHAUST LH
212-061-203-001	SV	BRACKET
212-061-203-002	SV	BRACKET
212-061-203-009	SV	COWL ASSY
212-061-205-001	SV	BRACKET - CASTING
212-061-205-002	SV	BRACKET
212-061-207-023	OH	FAIRING ASSY
212-061-207-023	OH	FAIRING ASSY
212-061-207-025	OH	FAIRING ASSY
212-061-207-025	OH	FAIRING ASSY
212-061-207-025	OH	FAIRING ASSY
212-061-207-033	OH	WEB ASSY
212-061-207-033	OH	WEB ASSY
212-061-207-035	OH	SCREEN ASSY
212-061-207-147	OH	SKIN ASSY LH
212-061-207-148	OH	SKIN ASSY RH
212-061-207-148	OH	SKIN ASSY RH
212-061-207-149	OH	SKIN ASSY LH
212-061-207-159	OH	SKIN ASSY
212-061-207-161	OH	SKIN ASSY
212-061-207-275	OH	BAFFLE ASSY, INDUCTION
212-061-207-285	OH	WEB ASSY LH
212-061-207-285	OH	WEB ASSY LH
212-061-207-285	OH	WEB ASSY LH
212-061-207-287	OH	WEB ASSY
212-061-207-288	OH	WEB ASSY
212-061-207-289	OH	WEB ASSY LH
212-061-207-290	OH	WEB ASSY
212-061-207-291	OH	WEB ASSY
212-061-207-291	OH	WEB ASSY
212-061-207-291	OH	WEB ASSY
212-061-207-293	OH	BAFFLE ASSY
212-061-207-295	OH	BAFFLE ASSY
212-061-210-001	OH	DUCT ASSY
212-061-210-001	OH	DUCT ASSY
212-061-210-002	OH	DUCT ASSY
212-061-210-002	OH	DUCT ASSY
212-061-210-003	OH	DUCT ASSY
212-061-210-003	OH	DUCT ASSY

212-061-210-004	SV	DUCT ASSY RH
212-061-210-037	NE	Gasket
212-061-521-073	OH	COVER ASSY LH
212-061-521-077	OH	DUCT ASSY
212-061-521-078	OH	DUCT ASSY
212-061-629-003	SV	CONNECTOR
212-061-631-001	SV	BRACKET
212-061-698-001	OH	BRACKET
212-061-724-013	OH	TUBE ASSY
212-061-807-011	OH	PANEL ASSY
212-061-807-011	OH	PANEL ASSY
212-061-808-003	OH	COWLING ASSY
212-061-808-004	OH	COWLING ASSY
212-061-808-004	OH	COWLING ASSY
212-061-811-007	OH	COWLING ASSY
212-061-811-007	OH	COWLING ASSY
212-061-811-044S	OH	SKIN
212-061-812-009	OH	COWL ASSY
212-061-812-010	OH	COWL ASSY
212-061-812-010	OH	COWL ASSY
212-061-812-011	OH	FRAME ASSY
212-061-812-101	OH	DOOR ASSY
212-061-812-101	OH	DOOR ASSY
212-061-812-101	AR	DOOR ASSY
212-061-812-101	OH	DOOR ASSY
212-061-812-102	OH	DOOR ASSY
212-061-812-102	OH	DOOR ASSY
212-061-812-102	OH	DOOR ASSY
212-061-812-102	OH	DOOR ASSY
212-061-812-103	OH	COWLING ASSY
212-061-812-104	OH	COWLING ASSY
212-061-812-104	NS	COWLING ASSY
212-061-812-106	OH	FRAME ASSY
212-061-812-106	OH	FRAME ASSY
212-061-813-011	OH	FAIRING ASSY
212-061-813-091	SV	FAIRING
212-061-814-001	OH	SCOOP ASSY
212-061-814-101	OH	SCOOP ASSY
212-061-814-101	OH	SCOOP ASSY
212-061-814-102	OH	SCOOP ASSY
212-061-814-102	OH	SCOOP ASSY
212-061-814-103	OH	FAIRING ASSY
212-061-814-104	OH	FAIRING ASSY
212-061-816-001	SV	HINGE HALF
212-061-817-001	SV	HINGE
212-061-901-210	OH	FIREWALL ASSY RH
212-061-902-007	OH	STIFFENER
212-061-902-007	OH	STIFFENER



212-061-902-008	OH	STIFFENER
212-061-902-008	OH	STIFFENER
212-061-902-008	OH	STIFFENER
212-061-902-009	OH	STIFFENER ASSY
212-061-902-009	OH	STIFFENER ASSY
212-061-902-010	OH	STIFFENER ASSY
212-061-902-010	OH	STIFFENER ASSY
212-061-902-010	OH	STIFFENER ASSY
212-061-902-013	OH	FIREWALL
212-061-902-013	OH	FIREWALL
212-061-902-013	OH	FIREWALL
212-061-902-113	OH	SEAL ASSY
212-061-902-113	OH	SEAL ASSY
212-061-902-114	OH	SEAL ASSY
212-061-902-173	OH	FIREWALL ASSY
212-061-902-174	OH	FIREWALL ASSY
212-061-902-174	OH	FIREWALL ASSY
212-061-902-174	OH	FIREWALL ASSY
212-061-902-179	OH	FIREWALL ASSY
212-061-902-179	OH	FIREWALL ASSY
212-061-902-185	OH	FIREWALL ASSY
212-061-902-187	OH	FIREWALL ASSY
212-061-902-233	OH	FIREWALL ASSY
212-061-903-005	OH	WEB ASSY, LOWER
212-061-903-007	OH	FIREWALL
212-061-903-009	OH	COVER ASSY
212-061-903-009	OH	COVER ASSY
212-061-903-009	OH	COVER ASSY
212-061-903-151	OH	FIREWALL ASSY
212-061-903-159	OH	COVER ASSY
212-061-903-159	RP	COVER ASSY
212-061-903-177	OH	FIREWALL ASSY
212-061-903-177	OH	FIREWALL ASSY
212-061-903-179	OH	FIREWALL ASSY
212-062-010-001	SV	BRACKET
212-062-212-001	OH	COMPENSATOR
212-062-503-001	OH	VALVE ASSY
212-062-503-001	NS	VALVE ASSY
212-062-504-001	OH	CAP AND ADAPTER ASSY
212-062-514-101	OH	BLOWER ASSY
212-062-709-001	OH	HOUSING
212-062-709-001	OH	HOUSING
212-062-709-001	OH	HOUSING
212-062-710-001	OH	SLIDER ASSY
212-062-710-001	OH	SLIDER ASSY
212-062-710-001	OH	SLIDER ASSY
212-062-710-003	OH	KEY

212-062-710-005	OH	SLIDER
212-062-710-005	OH	SLIDER
212-062-711-001	OH	BELLCRANK
212-062-711-005	OH	BELLCRANK ASSY
212-062-712-001	OH	MOUNTING ASSY
212-062-714-001	OH	RETAINER ASSY
212-062-717-001	SV	CLAMP HALF
212-062-780-001	OH	ACTUATOR, LINEAR
212-070-108-005	OH	TRIPLE TACH IND
212-070-108-007	OH	TRIPLE TACH IND.
212-070-108-103	OH	TRIPLE TACH
212-070-116-007	OH	INDICATOR, OIL
212-070-116-007	OH	INDICATOR, OIL
212-070-116-009	OH	INDICATOR, P/T
212-070-122-009	OH	INDICATOR, AIRSPEED
212-070-130-011	OH	INSTRUMENT PANEL
212-070-151-009	OH	PANEL ASSY
212-070-160-005	OH	IND DUAL TORQUE
212-070-160-101	OH	IND. DUAL TORQUE
212-070-160-101	OH	IND. DUAL TORQUE
212-070-160-129FM	OH	INDICATOR, DUAL TORQUE
212-070-176-003	OH	PANEL, LIGHTED
212-070-182-001	OH	INDICATOR, HYD
212-070-238-003	OH	ALTIMETER
212-070-238-003	OH	ALTIMETER
212-070-238-003	OH	ALTIMETER
212-070-238-005	OH	ALTIMETER
212-070-238-007	OH	ALTIMETER
212-070-239-001	OH	RATE OF CLIMB IND
212-070-240-001	OH	IND INLET TEMP
212-070-242-001	OH	TACHOMETER
212-070-362-001	OH	HOIST ASSY
212-070-412-001	OH	FLAPPER ASSY
212-070-413-002	OH	SHAFT ASSY
212-070-435-005	OH	DUCT ASSY
212-070-444-001	OH	SENSOR
212-070-444-001	OH	SENSOR
212-070-444-001	OH	SENSOR
212-070-449-007	OH	TUBE ASSY
212-070-449-007	OH	TUBE ASSY
212-070-449-007	OH	TUBE ASSY
212-070-457-002	OH	GRILLE ASSY
212-070-482-005	OH	TUBE ASSY
212-070-714-001	OH	ATTITUDE INDICATOR
212-072-811-008	OH	PLENUM ASSY
212-073-115-001	SV	CLAMP ASSY
212-073-433-101	SV	ORIFICE

212-073-433-101	SV	ORIFICE
212-073-518-001	OH	CONTROL ASSEMBLY
212-073-526-001	OH	LEVER ASSY
212-073-532-001	OH	TUBE ASSY
212-073-536-001	OH	FITTING
212-073-539-001	OH	TUBE ASSY
212-073-539-001	SV	TUBE ASSY
212-073-542-001	SV	TUBE ASSY
212-073-543-001	SV	TUBE ASSY
212-073-545-001	NS	TUBE ASSY
212-073-549-001	OH	TUBE ASSY, FLOAT BOTTLE
212-073-558-001	OH	MANIFOLD
212-073-714-001	OH	BRACKET
212-073-800-003	OH	TUBE ASSY L/H FWD
212-073-800-005	OH	TUBE ASSY L/H AFT
212-073-800-007	OH	TUBE ASSY L/H FWD
212-073-800-009	OH	TUBE ASSY L/H AFT
212-073-842-001	SV	BRACKET
212-073-868-001	SV	SPACER
212-073-874-001	SV	LEVER ASSY
212-073-896-001	NE	HOSE
212-073-912-001	OH	SQUIB VALVE
212-073-912-001	OH	SQUIB VALVE
212-073-912-101	OH	SQUIB VALVE
212-073-912-103	OH	SQUIB VALVE
212-073-916-001	SV	SWITCH-FLOAT
212-073-927-001	OH	MOTOR, TEMP CONTROL
212-073-927-001	OH	MOTOR, TEMP CONTROL
212-073-927-001	OH	MOTOR, TEMP CONTROL
212-073-927-013	OH	SERVO CONTROLLER
212-074-200-001	NE	TEST ASSY
212-074-200-005	OH	TEST ASSY
212-074-200-005	OH	TEST ASSY
212-075-037-113	OH	GAS PRODUCER IND
212-075-037-113	OH	GAS PRODUCER IND
212-075-139-001	OH	LANDING LIGHT
212-075-139-001	OH	LANDING LIGHT
212-075-143-001	OH	HOIST CNTL
212-075-154-003	OH	PLATE
212-075-188-001	OH	PLATE
212-075-199-001	OH	CONTACTOR
212-075-202-001	OH	APU PORT COVER
212-075-209-015	OH	PANEL
212-075-225-005	OH	PLATE ASSY
212-075-236-021	OH	CONTROL, OVERLOAD
212-075-266-001	SV	SWITCH
212-075-277-001	OH	PLATE MOUNTING

212-075-282-001	OH	COVER
212-075-282-001	OH	COVER
212-075-342-001	OH	ACTUATOR ASSY
212-075-375-001	SV	PLATE
212-075-394-003	OH	PANEL LIGHTING
212-075-406-003	OH	CONTROL PANEL ASSY
212-075-406-003	OH	CONTROL PANEL ASSY
212-075-406-103	OH	PANEL ASSY, CONTROL
212-075-411-003	SV	PANEL ASSY
212-075-418-003	OH	ACTUATOR, STEP
212-075-418-003	OH	ACTUATOR, STEP
212-075-418-003	OH	ACTUATOR, STEP
212-075-418-003	OH	ACTUATOR, STEP
212-075-418-103	OH	ACTUATOR, STEP
212-075-420-003	OH	INDICATOR, T5
212-075-459-001	OH	PANEL ASSY
212-075-459-001	OH	PANEL ASSY
212-075-459-001	OH	PANEL ASSY
212-075-459-001	OH	PANEL ASSY
212-075-496-001	OH	LIGHTED PANEL
212-075-497-001	SV	PANEL ASSY, PLATE
212-075-509-003	OH	PANEL, LIGHTED
212-075-509-003	NE	PANEL, LIGHTED
212-075-510-003	OH	PANEL, LIGHTED
212-075-514-101	OH	CLOCK
212-075-538-001	SV	TEMP SENSOR RETAINER
212-075-540-021	SV	SENSOR ASSY
212-075-540-023	SV	SENSOR
212-075-562-003	OH	INDICATOR, ITT
212-075-572-005	OH	PANEL
212-075-601-015	OH	CABLE ASSY
212-075-601-101	SV	HARNESS(C-BOX)L/H
212-075-601-102	SV	HARNESS(C-BOX)R/H
212-075-719-049	OH	FITTING
212-075-719-050	OH	FITTING
212-075-962-001	SV	POWER SUPPLY
212-075-962-001	SV	POWER SUPPLY
212-075-962-001	SV	POWER SUPPLY
212-075-962-001	SV	POWER SUPPLY
212-075-962-001	SV	POWER SUPPLY
212-075-962-001	NS	POWER SUPPLY
212-076-003-105	OH	SERVO
212-076-004-101	OH	SERVO, T/R
212-076-004-101	OH	SERVO, T/R
212-076-005-007	OH	SERVO, M/R
212-076-005-011	OH	M/R SERVO
212-076-005-101	OH	SERVO, HYDRAULIC

212-076-005-111	OH	SERVO
212-076-006-003	OH	MANIFOLD
212-076-006-005	OH	VALVE & FILTER ASSY
212-076-006-007	OH	VALVE & FILTER ASSY
212-076-006-007	OH	VALVE & FILTER ASSY
212-076-006-007	OH	VALVE & FILTER ASSY
212-076-006-007	OH	VALVE & FILTER ASSY
212-076-006-007	OH	VALVE & FILTER ASSY
212-076-006-007	OH	VALVE & FILTER ASSY
212-076-008-001	OH	VALVE
212-076-010-001	OH	PUMP, HYDRAULIC
212-076-010-101	OH	PUMP, HYDRAULIC
212-076-011-101	OH	PUMP, HYD.
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-015-001	OH	VALVE, CHECK
212-076-023-005	OH	MANIFOLD ASSY, HYD.
212-076-109-001	AR	FITTING
212-076-116-003	OH	SUPPORT ASSY
212-076-120-001	SV	NUT
212-076-130-003	OH	BRACKET
212-076-173-001	OH	TUBE ASSEMBLY
212-076-334-001	OH	TUBE ASSY
212-076-337-001	OH	TUBE ASSY
212-076-348-001	SV	TUBE ASSY
212-076-637-101	OH	SELF POWERED LIGHT
212-077-163-001	OH	COMPASS CONTROL
212-077-178-003	AR	PANEL ASSY, LIGHTED
212-077-200-001	OH	CONTROL UNIT, COMM.
212-077-200-105	OH	CONTROL UNIT, COMM.
212-160-720-001	OH	MOUNT ASSY
212-200-002-005	OH	PYLON INSTL.
212-226-80	OH	ONS TRANCEIVER
212-266-80	OH	TRANCEIVER
212-360-602-102	NE	FUEL CELL
212-360-603-101	NE	FUEL CELL
212-706-002-003	NS	LITTER MOD KIT
212-706-002-003	SV	LITTER MOD KIT
212-706-111-105	OH	AUTO PILOT INSTALL
214-001-033-113	OH	TUBE ASSY
214-001-039-001	OH	CLEVIS
214-001-051-013	NE	ROD END ASSY

214-001-070-001	OH	FORCE GRADIENT
214-001-070-103	OH	FORCE GRADIENT ASSY
214-001-071-001	OH	FORCE GRADIENT ASSY
214-001-071-101	OH	FORCE GRADIENT ASSY
214-001-088-025	OH	TUBE ASSY
214-001-088-129	OH	CONTROL TUBE
214-001-128-009	OH	MOUNT
214-001-130-001	SV	LEVER ASSY.
214-001-164-101	OH	IDLER ASSY
214-001-184-101	OH	GEAR ASSY, THROTTLE
214-001-305-001	OH	IDLER
214-001-316-103	OH	CYCLIC STICK ASSY, COPILOTS
214-001-347-005	OH	ACTUATOR, ROTARY
214-001-347-005	OH	ACTUATOR, ROTARY
214-001-347-103	OH	ACTUATOR, ROTARY
214-001-354-001	OH	LINK ASSY
214-001-370-101	SV	SERVOMOTOR, TRIM ATT
214-001-370-101	SV	SERVOMOTOR, TRIM ATT
214-001-371-101	OH	BELLCRANK
214-001-423-105	SV	ACTUATOR
214-001-423-109	OH	ACTUATOR, ROTARY
214-001-500-001	OH	BELLCRANK
214-001-540-107	OH	ACTUATOR
214-001-540-109	OH	ACTUATOR, SCAS
214-001-540-111	SV	ACTUATOR, SCAS YAW
214-001-540-115	NE	ACTUATOR
214-001-540-115	SV	ACTUATOR
214-001-541-103	OH	SUPPORT ASSY
214-001-541-105	OH	SUPPORT ASSY
214-001-543-107	SV	BELLCRANK ASSY.
214-001-550-105	SV	MOTOR ASSY, SERVO
214-001-550-105	SV	MOTOR ASSY, SERVO
214-001-550-105	SV	MOTOR ASSY, SERVO
214-001-553-101	OH	ARM ASSY
214-001-556-101	OH	CASE
214-001-560-107	AR	ACTUATOR ASSY, SCAS
214-001-560-107	SV	ACTUATOR ASSY, SCAS
214-001-570-101	OH	SOLENOID
214-001-570-101	SV	SOLENOID
214-001-701-001	OH	BELLCRANK
214-001-710-001	SV	IDLER ASSY.
214-001-740-001	SV	LINK ASSY.
214-001-769-101	NE	LEVER
214-001-769-103	OH	IDLER ASSY
214-001-770-101	OH	SUPPORT ASSY
214-001-782-101	AR	COLLAR ASSY
214-001-783-101	SV	BELLCRANK

214-001-784-101	SV	MOUNT
214-001-786-101	OH	SUPPORT ASSY
214-001-786-101	OH	SUPPORT ASSY
214-001-787-101	OH	SUPPORT ASSY
214-001-787-101	OH	SUPPORT ASSY
214-001-788-101	OH	BELLCRANK
214-001-788-101	OH	BELLCRANK
214-001-789-101	OH	BELLCRANK
214-001-789-101	OH	BELLCRANK
214-001-790-101	OH	PUSH ROD
214-001-790-101	OH	PUSH ROD
214-001-793-101	SV	RUDDER PEDAL
214-001-793-102	SV	RUDDER PEDAL
214-001-794-101	SV	TOE BRAKE PEDAL
214-001-794-102	SV	TOE BRAKE PEDAL
214-001-931-010	SV	BELLCRANK
214-001-970-107	OH	ACTUATOR FBW
214-001-970-111	OH	ACTUATOR, ELEVATOR
214-010-122-001	SV	HOISING, OIL RESERVOIR
214-010-156-001	SV	CAP, OIL RESERVOIR
214-010-156-001	SV	CAP, OIL RESERVOIR
214-010-162-003	OH	MAST NUT
214-010-202-001	SV	TRUNNION ASSY
214-010-414-001	OH	RING CLAMP
214-010-435-003	NE	BEARING
214-010-460-001	SV	BEARING ASSY.
214-010-472-001	OH	RING
214-010-473-005	OH	RING
214-010-506-105	OH	SCISSORS ASSY
214-010-506-105	OH	SCISSORS ASSY
214-010-528-101	SV	BEARING
214-010-535-101	NE	BEARING
214-010-708-003	OH	BELLCRANK
214-010-721-001	OH	LEVER ASSY
214-010-851-103	NS	BEARING
214-010-855-101	OH	ROD, CONTROL, T/R
214-011-805-101	NE	PITCH HORN
214-011-811-101	OH	LINK
214-020-210-009	OH	COVER, VERTICAL FIN
214-021-100-103	SV	ELEVATOR ASSY
214-021-100-103	OH	ELEVATOR ASSY
214-021-100-104	OH	ELEVATOR ASSY
214-021-100-104	OH	ELEVATOR ASSY
214-021-100-104	OH	ELEVATOR ASSY
214-021-212-103	OH	FAIRING ASSY
214-025-149-001	SV	DELAY RELAY
214-030-474-001	OH	TUBE ASSY

214-030-603-001	OH	SUPPORT ASSY.
214-030-603-001	OH	SUPPORT ASSY.
214-030-603-111	OH	SUPPORT ASSY
214-030-609-005	OH	STOP ASSY
214-030-610-001	OH	SUPPORT, WEIGHT
214-030-610-002	OH	SUPPORT, WEIGHT
214-030-615-003	OH	CLEVIS ASSY.
214-030-615-004	OH	CLEVIS ASSY
214-030-616-003	OH	WASHERS
214-030-632-001	SV	PLATE, WEIGHT
214-030-980-101	SV	BUMPER
214-031-003-331	OH	TAILBOOM ASSY
214-031-034-108	SV	WORK STAND
214-031-125-141	OH	PANEL ASSY
214-031-144-105	SV	COVER
214-031-215-101	SV	BRACKET ASSY.
214-031-218-321	OH	PANEL ASSY
214-031-241-104	OH	PANEL ASSY
214-031-247-103	OH	PANEL ASSY
214-031-253-106	OH	PANEL ASSY
214-031-253-753	NE	PLUG
214-031-284-113	OH	PANEL ASSY
214-031-285-111	OH	PANEL ASSY
214-031-285-111	OH	PANEL ASSY
214-031-290-143	OH	PANEL ASSY
214-031-290-144	OH	PANEL ASSY
214-031-291-110	OH	PANEL ASSY
214-031-292-159	OH	PANEL ASSY, STA
214-031-292-160	OH	PANEL ASSY
214-031-298-106	OH	PANEL ASSY
214-031-307-121	NE	BULKHEAD
214-031-314-105	OH	PANEL ASSY
214-031-414-102	OH	COVER ASSY, PYLON
214-031-428-104	OH	PANEL ASSY
214-031-487-101	NE	FITTING
214-031-488-101	OH	BEAM ASSY
214-031-530-101	OH	PANEL ASSY
214-031-542-133	NE	FAIRING
214-031-608-105	OH	STOP ASSY
214-031-608-105	OH	STOP ASSY
214-031-610-101	OH	CLEVIS ASSY
214-031-610-106	OH	SUPPORT, WEIGHT
214-031-614-105	OH	ARM ASSY LH
214-031-614-107	OH	PLATE ASSY
214-031-614-108	OH	PLATE ASSY
214-031-614-125	OH	TORSION ARM ASSY RH
214-031-614-125	AR	TORSION ARM ASSY RH



214-031-614-125	OH	TORSION ARM ASSY RH
214-031-614-127	OH	PLATE ASSY, LH
214-031-614-128	OH	PLATE ASSY, RH
214-031-614-128	OH	PLATE ASSY, RH
214-031-614-128	OH	PLATE ASSY, RH
214-031-615-105	OH	CLEVIS ARM ASSY
214-031-615-105	OH	CLEVIS ARM ASSY
214-031-615-106	OH	CLEVIS ARM ASSY
214-031-617-113	OH	SPRING
214-031-617-113	OH	SPRING
214-031-617-113	OH	SPRING
214-031-630-102	OH	PANEL ASSY
214-031-632-101	NE	COVER
214-031-633-101	SV	COVER
214-031-633-103	SV	COVER
214-031-661-113	SV	SUPPORT
214-031-661-115	OH	COVER
214-031-661-119	SV	WEIGHT
214-031-663-102	NS	SEAL
214-031-701-105	OH	PANEL ASSY
214-031-708-103	OH	PANEL ASSY
214-031-709-104	OH	PANEL ASSY
214-031-714-106	OH	PANEL ASSY
214-031-748-103	OH	PANEL ASSY
214-031-772-102	OH	PANEL ASSY
214-031-775-101	OH	PANEL ASSY
214-031-795-102	OH	HINGE HALF
214-031-795-102	OH	HINGE HALF
214-031-803-104	OH	WINDOW ASSY
214-031-803-104	OH	WINDOW ASSY
214-031-813-101	OH	STRAP
214-031-834-105	OH	WORK STAND
214-031-834-106	OH	WORK STAND
214-031-834-108	OH	WORK STAND
214-031-839-101	OH	STRAP ASSY
214-031-839-101	OH	STRAP ASSY
214-031-860-113	OH	PANEL ASSY
214-031-891-102	NS	WINDOW
214-031-892-105	OH	WINDOW ASSY, LH
214-031-892-106	NS	WINDOW ASSY, RH
214-031-892-106	NE	WINDOW ASSY, RH
214-031-892-106	NE	WINDOW ASSY, RH
214-031-892-106	AR	WINDOW ASSY, RH
214-031-899-102	SV	STEP
214-031-904-102	OH	DOOR ASSY
214-031-934-101	OH	SLIDING DOOR SWITCH
214-031-935-135	OH	SHIM

214-031-935-135	OH	SHIM
214-031-935-151	SV	DOOR ASSY.
214-031-935-151	OH	DOOR ASSY.
214-031-935-152	OH	DOOR ASSY
214-031-960-104	NE	BLOCK ASSY
214-031-977-101	NE	HINGE HALF
214-031-992-113	OH	ACCESS DOOR
214-031-992-114	OH	PANEL ASSY
214-032-900-102	SV	DOOR,CARGO
214-032-901-102	OH	DOOR ASSY
214-032-903-102	SV	DOOR,CARGO
214-032-903-117	NS	WINDOW AFT, LH
214-032-903-118	NS	WINDOW, AFT, RH
214-032-903-170	OH	DOOR ASSY
214-032-929-101	OH	SUPPORT ASSY
214-032-929-102	OH	SUPPORT ASSY RH
214-032-932-102	OH	SUPPORT ASSY RH
214-032-945-101	NE	PLATE
214-040-008-103	OH	XMSN ASSY LOWER
214-040-014-105	OH	MAIN DRIVESHAFT ASSY
214-040-018-105	OH	FRAME, OIL COOLER
214-040-019-101	OH	QUILL ASSY, INPUT
214-040-022-101	OH	ROTOR BRAKE
214-040-023-101	OH	QUILL ASSY
214-040-027-101	OH	SPIRAL LEVEL GEAR
214-040-028-103	OH	PLANETARY ASSY,LOWER
214-040-032-101	OH	REAR UPPER RING
214-040-033-101	OH	GEAR, LOWER SUN
214-040-034-001	OH	REAR, PLANETARY
214-040-043-001	SV	GEAR
214-040-054-105	OH	REAR ASSY,SPIRAL LEV
214-040-063-003	OH	SUPPORT CASE
214-040-063-109	OH	CASE ASSY, PYLON RES
214-040-064-001	OH	CASE ASSY, T/R DRIVE
214-040-065-001	OH	SUPPORT, ACC. DR.
214-040-066-005	OH	CASE ASSY, SUMP
214-040-081-005	OH	PLATE
214-040-122-101	OH	BEARING DUPLEX
214-040-133-001	SV	TUBE, OIL TRANSFER
214-040-146-005	OH	COLLECTOR
214-040-146-007	OH	COLLECTOR
214-040-154-003	OH	LUBE MANIFOLD ASSY
214-040-156-001	OH	MANIFOLD ASSY
214-040-169-011	SV	COLLECTER CASE
214-040-169-011	OH	COLLECTER CASE
214-040-170-001	OH	214-040-170-001
214-040-185-001	OH	OIL JET

214-040-186-001	OH	214-040-186-001
214-040-187-001	OH	214-040-187-001
214-040-190-003	OH	ADAPTER, FLANGE
214-040-302-001	NS	GEAR
214-040-409-009	SV	HOUSING
214-040-414-001	OH	LINER
214-040-600-101	OH	HANGER ASSY
214-040-600-103	OH	HANGER ASSY
214-040-600-109	OH	HANGAR ASSY
214-040-600-109	OH	HANGAR ASSY
214-040-600-109	OH	HANGAR ASSY
214-040-600-111	OH	HANGER ASSY
214-040-603-001	NE	COUPLING, CROWNED
214-040-617-003	OH	HANGAR
214-040-617-105	SV	HANGER
214-040-628-101	OH	SHAFT
214-040-629-101	OH	RETAINER GREASE
214-040-630-001	NE	COUPLING ASSY
214-040-631-001	OH	SHAFT,COUPLING ADAPT
214-040-656-101	OH	INNER COUPLINGS
214-040-658-103	OH	OUTTER COUPLING
214-040-712-001	OH	OIL FILTER ASSY
214-040-719-001	OH	JET ASSY
214-040-720-001	OH	214-040-720-001
214-040-721-001	OH	214-040-721-001
214-040-725-001	OH	FITTING ASSY, OIL MANIFOLD
214-040-726-003	OH	MANIFOLD ASSY
214-040-760-101	OH	FILTER ASSY.
214-040-767-001	AR	CASE ASSY
214-040-773-001	OH	SUPPORT
214-040-776-005	SV	JET ASSY.
214-040-816-009	SV	FILLER CAP ASSY.
214-040-861-101	OH	FAN, AIR DRIVEN
214-040-861-101	OH	FAN, AIR DRIVEN
214-040-862-101	OH	HEAT EXCHANGER
214-040-862-101	OH	HEAT EXCHANGER
214-040-862-101	OH	HEAT EXCHANGER
214-040-863-101	OH	HEAT EXCHANGER
214-040-863-101	OH	HEAT EXCHANGER
214-040-863-101	OH	HEAT EXCHANGER
214-040-863-101	OH	HEAT EXCHANGER
214-040-865-101	SV	MONITOR, FAN PERFORMANCE
214-052-002-103	OH	CROSS TUBE, FWD
214-052-053-105	SV	SKID TUBE, RH
214-052-064-101	SV	LINK,ASSY.
214-052-065-101	SV	LINK,ASSY.
214-052-100-107	SV	LANDING GEAR INSTL

214-052-102-103	SV	BEAM ASSY, LH
214-052-120-103	NE	WHEEL ASSY
214-052-120-109	OH	BRAKE ASSY
214-052-157-101	OH	OLEO ASSY
214-052-200-105	OH	FLOAT BAG
214-052-200-105	NE	FLOAT BAG
214-052-200-106	NE	FLOAT BAG
214-052-200-107	NE	FLOAT BAG AFT
214-060-056-103	OH	STARTER
214-060-056-109	OH	STARTER
214-060-056-109	OH	STARTER
214-060-058-101	OH	TEMP. BULB
214-060-108-005	OH	BIPOD
214-060-108-005	OH	BIPOD
214-060-108-005	OH	BIPOD
214-060-111-001	SV	FITTING
214-060-221-101	OH	ADAPTER
214-060-221-101	OH	ADAPTER
214-060-222-101	OH	ADAPTER
214-060-224-101	OH	HEX NUT
214-060-726-093	OH	TUBE ASSY
214-060-726-83	OH	ROD ASSY
214-060-768-001	SV	BELLCRANK ASSY.
214-061-854-103	OH	SUPPORT
214-061-861-175	OH	PANEL ASSY
214-061-868-107	OH	PANEL ASSY
214-061-868-109	OH	PANEL ASSY
214-061-868-110	OH	PANEL ASSY
214-061-869-103	OH	FAIRING ASSY
214-061-869-111	OH	DOOR ASSY
214-061-876-101	OH	SUPPORT
214-061-876-101	OH	SUPPORT
214-061-876-102	NE	BRACKET
214-061-886-101	OH	SUPPORT
214-061-900-103	OH	BONDED PANEL ASSY
214-061-900-105	OH	BONDED PANEL ASSY
214-061-900-106	OH	BONDED PANEL ASSY
214-061-900-111	OH	SUPPORT ASSY
214-061-900-112	OH	SUPPORT ASSY
214-061-901-104	OH	FAIRING ASSY
214-062-214-001	SV	COVER STRAP ASSY.
214-062-284-105	OH	BELLMOUTH, HEATED
214-063-210-109	OH	EXHAUST EJECTER
214-063-210-111	OH	EXHAUST EJECTOR
214-063-210-155	OH	DUCT, EXHAUST LH
214-063-210-155	OH	DUCT, EXHAUST LH
214-063-210-157	OH	DUCT, EXHAUST RH

214-063-210-157	OH	DUCT, EXHAUST RH
214-063-210-157	SV	DUCT, EXHAUST RH
214-063-210-157	OH	DUCT, EXHAUST RH
214-063-214-103	OH	UPPER ASSY
214-063-214-105	OH	LOWER ASSY
214-063-214-105	NE	LOWER ASSY
214-066-011-001	SV	COVER ASSY
214-066-205-101	SV	FUEL TANK ADAPTER
214-066-207-103	SV	FUEL TANK TUBE
214-066-208-101	SV	TUBE ADAPTER
214-066-212-101	OH	FUEL PROBE, LOW AFT
214-066-212-103	OH	TRANSMITTER
214-066-212-105	OH	TRANSMITTER
214-066-215-109	SV	BRACKET
214-066-217-101	SV	FUEL TANK ADAPTER
214-066-220-101	SV	TUBE,FUEL EJECTER
214-066-220-102	SV	TUBE,FUEL EJECTER
214-066-225-101	SV	FUEL TANK ADAPTER
214-066-227-101	SV	CHECK VALVE
214-066-228-103	SV	FUEL PUMP EJECTER
214-066-241-101	SV	RETAINER
214-066-255-103	NE	FUEL CELL
214-066-256-104	RD	FUEL CELL
214-066-257-104	OH	FUEL CELL
214-066-603-101	SV	FUEL CHECK VALVE
214-067-316-101	RP	SERVO ACTUATOR
214-069-800-101	SV	FIRE WALL
214-069-800-101	OH	FIRE WALL
214-069-932-101	SV	TUBE ASSY
214-069-933-101	SV	SUPPORT ASSY
214-069-961-103	SV	FIREWALL
214-069-961-104	SV	FIREWALL
214-069-962-107	OH	FIREWALL ASSY AFT
214-069-980-105	OH	CONTAINER, FIRE
214-070-060-001	NS	BRACKET ASSY
214-070-060-001	AR	BRACKET ASSY
214-070-081-155	SV	TIE-DOWN, M/R
214-070-520-124	SV	SOUND-PRFING
214-070-841-107	NS	ADAPTER ASSY
214-070-917-101	OH	FITTING
214-070-917-101	OH	FITTING
214-070-921-003	OH	CARGO HOOK
214-070-921-003	OH	CARGO HOOK
214-070-921-003	OH	CARGO HOOK
214-070-932-101	OH	SUSPENSION ASSY
214-070-932-101	OH	SUSPENSION ASSY
214-070-932-101	OH	SUSPENSION ASSY

214-070-939-101	OH	BUSHING
214-070-961-113	NE	LEG ASSY
214-073-612-101	OH	VALVE ASSY.
214-073-884-010	SV	VALVE ASSY.
214-073-912-001	SV	FAN ASSY.
214-073-917-101	OH	BLOWER, VANEAXIAL
214-073-919-001	SV	TEMP. SENSOR
214-073-919-001	OH	TEMP. SENSOR
214-073-919-101	OH	MIXING VALVE ASSY.
214-073-919-101	OH	MIXING VALVE ASSY.
214-073-919-101	OH	MIXING VALVE ASSY.
214-073-919-107	SV	NOISE SUPPRESSOR
214-073-925-102	SV	WIPER
214-073-932-110	SV	GEARCASE, MOTOR
214-073-935-101	SV	HYDRAULIC RELEASE
214-073-936-103	OH	EJECTION BAG
214-073-939-101	OH	SHUT OFF VALVE ASSY.
214-074-104-101	OH	SENSOR, DUAL RATE
214-074-104-101	OH	SENSOR, DUAL RATE
214-074-104-101	OH	SENSOR, DUAL RATE
214-074-108-101	NE	TRANSDUCER, LINEAR
214-074-149-101	OH	TRANSDUCER
214-074-149-101	OH	TRANSDUCER
214-074-149-101	OH	TRANSDUCER
214-074-149-101	OH	TRANSDUCER
214-074-152-101	RD	TRANSDUCER
214-074-153-101	NE	TRANSDUCER
214-074-153-101	NE	TRANSDUCER
214-074-153-101	NE	TRANSDUCER
214-074-200-105	OH	INDICATOR,CHIP
214-074-280-107	OH	DETECTOR, RPM LIMIT
214-074-300-101	OH	AFCS PANEL
214-074-300-105	OH	PANEL, AFCS ANNUNC
214-074-300-105	OH	PANEL, AFCS ANNUNC
214-074-305-105	OH	AMP ASSY, FBW
214-074-305-105	OH	AMP ASSY, FBW
214-074-305-105	OH	AMP ASSY, FBW
214-074-339-103	FN	CARD, CURCUIT
214-075-112-003	OH	CONTRL PANEL ASSY.
214-075-151-001	OH	RELAY
214-075-151-001	OH	RELAY
214-075-186-001	OH	TEMP. CONTROL UNIT
214-075-186-001	OH	TEMP. CONTROL UNIT
214-075-186-001	OH	TEMP. CONTROL UNIT
214-075-186-001	OH	TEMP. CONTROL UNIT
214-075-187-003	OH	VOLTAGE REGULATOR
214-075-187-003	OH	VOLTAGE REGULATOR

214-075-231-005	OH	CDI INDICATOR
214-075-244-001	OH	RATE GYRO
214-075-244-001	OH	RATE GYRO
214-075-244-001	OH	RATE GYRO
214-075-244-001	OH	RATE GYRO
214-075-244-001	OH	RATE GYRO
214-075-244-001	OH	RATE GYRO
214-075-244-001	OH	RATE GYRO
214-075-268-101	OH	GYRO, ATTITUDE
214-076-012-001	OH	ACTUATOR, HYD/ELECT
214-076-015-005	OH	RES. MOD. & MANIFOLD
214-076-015-005	OH	RES. MOD. & MANIFOLD
214-076-016-001	OH	TRANSMITTER, PRESS
214-076-016-001	OH	TRANSMITTER, PRESS
214-076-017-005	OH	FILTER MODULE, HYD.
214-076-017-007	OH	MODULE, FILTER
214-076-022-001	OH	HOUSING
214-076-023-003	OH	MANIFOLD ASSY
214-076-027-101	OH	MASTER CYLINDER
214-076-032-011	OH	BRACKET ASSY
214-076-033-001	OH	HYD. PUMP
214-076-033-001	SV	HYD. PUMP
214-076-033-001	OH	HYD. PUMP
214-076-033-101	OH	HYD PUMP
214-076-033-101	OH	HYD PUMP
214-076-033-101	OH	HYD PUMP
214-076-127-101	OH	ROTOR BRAKE ASSY
214-076-146-101	OH	M/R SERVO
214-076-153-001	OH	PULSATION DAMPENER
214-076-153-001	OH	PULSATION DAMPENER
214-076-168-101	OH	ACCUMULATOR
214-076-168-101	OH	ACCUMULATOR
214-076-294-101	AR	T/R SERVO
214-076-294-101	OH	T/R SERVO
214-076-315-101	AR	MODULE ASSY
214-076-315-101	OH	MODULE ASSY
214-076-315-101	OH	MODULE ASSY
214-076-315-101	AR	MODULE ASSY
214-076-316-101	OH	HYDRAULIC MODULE
214-076-317-101	OH	RESERVOIR, UTILITY
214-076-320-101	OH	MASTER BRAKE CYL
214-076-320-101	OH	MASTER BRAKE CYL
214-076-333-107	OH	HYDRAULIC MOTOR
214-076-333-107	OH	HYDRAULIC MOTOR
214-076-334-101	OH	HYD.PUMP
214-076-334-101	OH	HYD.PUMP
214-076-334-101	OH	HYD.PUMP

214-076-334-105	OH	HYD. PUMP
214-076-533-001	SV	ADAPTER
214-076-706-101	OH	TUBE ASSY
214-076-749-101	OH	TUBE ASSY
214-076-762-101	NS	TUBE ASSY
214-076-765-101	OH	TUBE ASSY
214-076-801-101	OH	TUBE ASSY
214-077-216-103	OH	COVER ASSY
214-157-384-101	OH	PANEL ENG GOV
214-175-122-105	OH	CAUTION PANEL
214-175-122-111	OH	CAUTION PANEL
214-175-133-101	OH	RELAY
214-175-140-101	OH	POWER SUPPLY
214-175-140-103	OH	POWER SUPPLY
214-175-149-101	OH	INDICATOR, LOAD METER
214-175-149-101	OH	INDICATOR, LOAD METER
214-175-149-101	OH	INDICATOR, LOAD METER
214-175-150-105	OH	GENERATOR D.C.
214-175-150-105	OH	GENERATOR D.C.
214-175-153-105	OH	VOLTAGE REGULATOR DC
214-175-209-101	OH	PANEL ASSY
214-175-209-101	OH	PANEL ASSY
214-175-251-107	OH	TRIPLE TACH
214-175-251-107	OH	TRIPLE TACH
214-175-251-107	OH	TRIPLE TACH
214-175-253-103	OH	OIL PRESSURE/TEMP
214-175-255-103	AR	OIL PIX/ TEMP IND
214-175-256-103	SV	DUAL GEAR BOX OIL TEMP INDICATOR
214-175-257-105	SV	INDICATOR, FUEL QTY
214-175-270-103	SV	AIR DATA COMP.
214-175-271-103	OH	INDICATOR, AIRSPEED
214-175-271-103	SV	INDICATOR, AIRSPEED
214-175-271-107	OH	INDICATOR AIRSPEED
214-175-271-107	OH	INDICATOR AIRSPEED
214-175-271-107	OH	INDICATOR AIRSPEED
214-175-271-107	SV	INDICATOR AIRSPEED
214-175-271-107	SV	INDICATOR AIRSPEED
214-175-356-101	OH	PANEL ASSY, CONTROL
214-175-360-101	OH	TUBE SENSOR
214-175-360-101	OH	TUBE SENSOR
214-175-360-101	OH	TUBE SENSOR
214-175-379-103	OH	BATTERY CHARGER
214-175-396-101	OH	TEMP CONTROL
214-175-396-101	OH	TEMP CONTROL
214-175-396-101	OH	TEMP CONTROL
214-551-101	NE	L/H CREW WINDOW
214HS5	OH	SPACER



214HS5-82	NS	SPACER, SLEEVE
215-72031-3	OH	CYLINDER ASSY
21637-1	OH	SPACER
21668-1	OH	HANDLE & CABLE ASSY
217-00141	OH	INDICATOR, PRESS
217-00141	OH	INDICATOR, PRESS
2-170-430-01	SV	ENGINE FILTER ASSY.
217-08261	OH	TORQUE INDICATOR
217363-01	OH	SOLENOID VALVE
21817-22	OH	REGULATOR ASSY
21B17-10B	OH	PANEL, SUPERVISORY
21B17-10B	SV	PANEL, SUPERVISORY
21B17-10B	OH	PANEL, SUPERVISORY
2200740-2	OH	E
22-008823-40-20	OH	BUSHING
2201018-3	OH	DUCT
2201019-1	OH	DUCT
22-015-43-15-36	OH	BUSHING
220T-16BB	OH	VALVE, CHECK
22-169-018LBW5	OH	INSTRUMENT CLUSTER
22-169-019-002	OH	INSTRUMENT CLUSTER
222 CABIN	AR	CABIN SECTION
222-001-006-001	SV	CONTROL TUBE
222-001-006-101	SV	CONTROL TUBE
222-001-007-025	OH	TUBE ASSY
222-001-008-001	SV	TUBE ASSY.
222-001-015-101	SV	TUBE ASSY.
222-001-016-107	OH	TUBE ASSY
222-001-017-001	SV	TUBE ASSY.
222-001-017-105	OH	TUBE ASSY
222-001-017-108	OH	TUBE ASSY
222-001-017-109	OH	TUBE ASSY
222-001-017-113	OH	TUBE ASSY
222-001-017-121	OH	TUBE ASSEMBLY
222-001-018-109	OH	TUBE ASSY
222-001-018-113	SV	TUBE ASSY.
222-001-018-117	OH	TUBE ASSY
222-001-019-101	OH	TUBE ASSY
222-001-020-101	OH	TUBE ASSY
222-001-021-101	OH	TUBE ASSY
222-001-071-107	OH	SPRING CARTRIDGE
222-001-141-001	SV	BELLCRANK ASSY.
222-001-233-107	SV	COLLECTIVE STICK
222-001-238-101	OH	HEAD ASSY
222-001-256-101	OH	ARM
222-001-290-001	OH	SHAFT ASSY
222-001-294-101	SV	BELLCRANK ASSY.

222-001-295-101	SV	SUPPORT
222-001-296-101	SV	LINK ASSY.
222-001-358-001	SV	CYCLIC STICK ASSY.
222-001-367-001	OH	SHAFT ASSY
222-001-381-101	SV	SUPPORT
222-001-382-101	SV	BELLCRANK ASSY.
222-001-400-101	OH	BOOT
222-001-402-001	OH	BELLCRANK ASSY
222-001-403-001	OH	FITTING ASSY
222-001-405-001	OH	FITTING ASSY
222-001-407-101	OH	ARM ASSY
222-001-434-101	OH	BOX ASSY.
222-001-436-101	SV	SUPPORT
222-001-512-103	SV	SUPPORT
222-001-513-101	OH	LINK ASSY.
222-001-516-101	SV	BELLCRANK ASSY.
222-001-520-101	OH	SHAFT ASSY
222-001-527-101	SV	IDLER ASSY.
222-001-528-101	OH	SUPPORT ASSY
222-001-530-101	OH	BELLCRANK ASSY
222-001-532-101	SV	BELLCRANK ASSY.
222-001-706-001	OH	BELLCRANK ASSY
222-001-711-101	OH	BELLCRANK ASSY
222-001-713-101	OH	BELLCRANK ASSY
222-001-714-005	OH	SUPPORT ASSY
222-001-727-005	SV	LEVER ASSY.
222-001-733-101	SV	SUPPORT
222-001-734-001	SV	LEVER ASSY.
222-001-735-101	SV	SUPPORT
222-001-736-005	OH	BELLCRANK ASSY
222-001-737-001	OH	LINK ASSY
222-001-740-101	OH	PEDAL ASSY LH
222-001-740-102	OH	PEDAL ASSY RH
222-001-741-101	OH	LEVER ASSY
222-001-742-001	SV	SUPPORT
222-001-748-001	OH	SUPPORT ASSY
222-001-768-101	OH	SUPPORT ASSY
222-001-769-101	SV	LEVER
222-001-770-101	OH	SUPPORT ASSY
222-005-005-101	SV	CHIP INDICATOR
222-010-401-111	OH	DRIVE ASSY
222-010-409-107	OH	IDLER LINK ASSY
222-010-412-101	SV	CAP
222-010-415-117	OH	WALKING BEAM ASSY
222-010-420-003	OH	CAP
222-010-426-001	SV	BOOT
222-010-490-109	OH	CAP ASSY

222-010-494-101	SV	BOOT
222-011-417-101	OH	TRUNNION
22201BE080030L	SV	BOLT
222-020-540-101	SV	SUPPORT ASSY.
222-020-548-101	SV	BEZEL
222-020-652-101	SV	SEAT BACK
222-020-663-103	OH	SEAT SUPPORT BRACKET
222-020-664-101	OH	SEAT SUPPORT BRACKET
222-020-747-101	SV	HINGE
222-020-748-101	SV	HINGE
222-020-810-109	AR	SEAT ASSY
222-025-150-119	SV	NOZZLE ASSY
222-025-150-120	SV	NOZZLE ASSY
222-025-152-001	SV	ADAPTER
222-025-176-105	SV	DUCT, FLAPPER LH
222-025-177-101	SV	DUCT ASSY,RH
222-025-177-105	SV	DUCT, FLAPPER RH
222-025-193-102	SV	VALVE ASSY,FLAPPER,R
222-025-193-103	SV	VALVE ASSY,FLAPPER L
222-025-194-101	SV	DUCT, LH
222-025-194-102	SV	DUCT, RH
222-025-195-101	SV	DUCT, LH
222-025-195-102	SV	DUCT, RH
222-025-202-001	OH	BRACKET ASSY
222-025-202-002	OH	BRACKET ASSY
222-025-414-101	OH	DUCT
222-025-511-101	SV	TUBE ASSY R/H
222-025-512-101	SV	TUBE ASSY L/H
222-025-747-101	SV	DUCT,LH
222-025-748-101	SV	DUCT,LH
222-025-750-101	OH	DUCT
222-025-757-101	SV	DUCT ASSY
222-025-765-101	SV	DUCT, LH
222-025-766-101	SV	DUCT
222-025-767-101	SV	DUCT,LH
222-025-768-101	SV	DUCT ASSY, LH
222-025-769-101	SV	DUCT
222-025-776-101	SV	DUCT, LH
222-025-776-102	SV	DUCT ASSY, RH
222-025-894-101	OH	TUBE ASSY
222-030-817-004	OH	DOOR ASSY RH
222-031-008-110	OH	WINGLET
222-031-102-103	OH	DOOR ASSY
222-031-102-104	OH	DOOR ASSY
222-031-103-113	AR	DOOR, PASS LH
222-031-103-113	AR	DOOR, PASS LH
222-031-103-130	OH	DOOR ASSY PASS. RH

222-031-120-101	OH	DOOR ASSY
222-031-120-102	OH	DOOR ASSY
222-031-153-103	OH	HINGE
222-031-244-105	SV	SUPPORT
222-031-254-109	OH	COVER ASSY
222-031-255-102	OH	SUPPORT
222-031-275-101	OH	FITTING ASSY
222-031-279-101	SV	RELEASE
222-031-281-101	SV	BRACKET
222-031-285-113	OH	SUPPORT ASSY
222-031-290-103	AR	WINDOW OPENER
222-031-290-103	AR	WINDOW OPENER
222-031-290-103	AR	WINDOW OPENER
222-031-295-101	SV	COVER ASSY
222-031-295-103	SV	COVER ASSY
222-031-297-115	OH	COVER
222-031-303-039	OH	PANEL
222-031-319-115	SV	BRACKET ASSY.
222-031-320-101	OH	STEP ASSY
222-031-349-101	OH	PLATE STRIKER
222-031-351-101	SV	PLATE STRIKER
222-031-352-101	OH	STRIKER DOOR
222-031-402-007	OH	PANEL ASSY
222-031-405-107	OH	BAGGAGE DOOR ASSY
222-031-406-103	OH	DOOR ASSY
222-031-426-103	OH	PANEL ASSY
222-031-426-104	NE	PANEL R/H
222-031-426-104	OH	PANEL R/H
222-031-431-103	OH	PANEL ASSY LH
222-031-450-117	SV	WINDOW ASSY
222-031-450-118	SV	WINDOW ASSY
222-031-536-159	SV	BRACKET
222-031-603-123	OH	ARM ASSY
222-031-603-127	OH	ARM ASSY
222-031-613-001	OH	LIFT LINK
222-031-615-101	OH	FITTING ASSY
222-031-616-103	OH	FITTING ASSY
222-031-621-101	SV	UP STOP
222-031-622-101	OH	FITTING ASSY
222-031-639-107	SV	SUPPORT
222-031-644-125	OH	ARM ASSY
222-031-657-101	SV	SUPPORT
222-031-658-101	SV	SUPPORT
222-031-662-105	NE	BEARING ASSY
222-031-787-104	SV	PANEL ASSY
222-031-835-104	SV	FAIRING ASSY.
222-031-890-101	OH	WING ASSY LH

222-031-890-102	OH	WING ASSY RH
222-035-152-115	NE	BULKHEAD
222-035-153-115	NE	BULKHEAD
222-035-160-117	NE	LONGERON
222-035-220-107	OH	FIN ASSY
222-035-220-127	OH	CHANNEL
222-035-250-105	OH	STABILIZER ASSY
222-035-300-102	OH	WINGLET R/H
222-036-002-103	SV	WHEEL AND TIRE, NOSE
222-036-028-101	OH	SUPPORT AFT TUB
222-036-029-101	OH	SUPPORT LOWER AFT
222-036-0390-111	OH	STRAP ASSY FWD
222-036-040-111	OH	STRAP ASSY
222-036-049-102	OH	PANEL ASSY
222-036-049-111	OH	PANEL, FLOAT
222-036-131-101	OH	SUPPORT ASSY
222-036-131-101	OH	SUPPORT ASSY
222-036-131-102	OH	SUPPORT ASSY
222-036-134-101	SV	RETAINER L/H
222-036-134-102	OH	RETAINER R/H
222-036-137-101	NE	COVER, FLOAT
222-040-031-001	OH	BEARING
222-040-048-001	OH	BEARING
222-040-050-101	OH	GEAR
222-040-059-101	OH	TRANSFER RING
222-040-060-001	OH	RETAINER
222-040-065-001	OH	SLEEVE ASSY
222-040-069-101	OH	CASE ASSY
222-040-076-001	OH	ADAPTER
222-040-077-101	OH	RETAINER
222-040-077-103	OH	RETAINER
222-040-078-101	OH	CASE ASSY
222-040-078-102	OH	CASE ASSY
222-040-079-001	OH	CASE ASSY
222-040-079-002	OH	CASE ASSY
222-040-091-105	OH	MANIFOLD ASSY
222-040-100-103	OH	GEAR
222-040-108-101	OH	GEAR
222-040-110-103	OH	GEAR
222-040-111-101	OH	SHAFT
222-040-113-005	OH	GEAR
222-040-114-005	OH	GEAR
222-040-115-001	OH	GEAR
222-040-117-101	OH	GEAR
222-040-118-001	OH	ADAPTER
222-040-121-001	OH	ADAPTER ASSY
222-040-122-001	OH	RACE

222-040-123-001	OH	SHAFT
222-040-124-001	OH	SHAFT
222-040-124-001	OH	SHAFT
222-040-126-001	OH	RETAINER
222-040-182-001	OH	NUT
222-040-185-001	OH	NUT
222-040-195-101	OH	PLATE
222-040-215-009	OH	SLEEVE ASSY
222-040-222-001	OH	NUT
222-040-223-101	OH	NUT, UPPER MAST
222-040-224-001	OH	NUT
222-040-225-001	OH	NUT
222-040-226-001	OH	NUT
222-040-228-001	OH	NUT
222-040-234-001	OH	NUT
222-040-235-001	OH	NUT
222-040-236-001	OH	NUT
222-040-269-001	OH	NUT
222-040-286-001	OH	RETAINER
222-040-287-001	OH	RING
222-040-305-101	OH	LINER
222-040-306-101	OH	SHAFT
222-040-307-101	OH	NUT
222-040-615-101	OH	GEAR
222-041-041-003	OH	BEARING SET
222-044-616-001	SV	FLANGE
222-044-617-101	OH	GEAR
222-060-084-103	NE	SWITCH PRESS
222-060-090-001	SV	SUPPORT
222-060-112-001	OH	SHIM
222-060-122-003	OH	SHIM
222-060-122-005	OH	SHIM
222-060-145-001	OH	MOUNT
222-060-146-001	OH	FITTING ASSY
222-060-149-001	OH	MOUNT
222-060-150-001	OH	MOUNT ASSY
222-060-151-001	OH	MOUNT
222-060-152-001	OH	MOUNT
222-060-155-001	OH	MOUNT
222-060-200-001	SV	JACKSHAFT ASSY.
222-060-205-001	OH	JACKSHAFT
222-060-215-003	OH	JACKSHAFT ASSY
222-060-217-102	OH	PELNUM ASSY.
222-060-218-001	SV	TUBE ASSY.
222-060-219-101	SV	SUPPORT
222-060-230-101	OH	SHAFT
222-060-232-101	SV	LEVER

222-060-238-101	SV	LEVER
222-060-239-101	SV	BELLCRANK ASSY.
222-060-253-101	SV	LEVER
222-060-706-005	SV	BELLCRANK ASSY.
222-060-717-001	SV	BELLCRANK ASSY.
222-060-726-001	SV	ARM ASSY.
222-060-733-101	OH	TUBE ASSY
222-060-767-101	SV	SUPPORT
222-060-790-001	OH	BELLCRANK ASSY
222-060-792-001	OH	BRACKET ASSY
222-060-793-001	SV	SUPPORT
222-060-798-001	OH	MOUNT ASSY
222-060-798-002	OH	MOUNT ASSY
222-060-799-001	SV	LEVER
222-061-810-001	OH	FITTING
222-061-810-001	SV	FITTING
222-061-819-101	SV	TRANS. COWL ASSY.
222-061-820-101	SV	L.H.INLET COWL ASSY.
222-061-820-107	SV	R.H.INLET COWL ASSY.
222-061-821-101	OH	COWL ASSY
222-061-821-102	OH	COWL ASSY
222-061-822-101	SV	FRONT FAIRING
222-061-823-102	SV	R.H.AFT.FAIRING ASSY
222-061-824-105	SV	FAIRING ASSY
222-061-825-101	OH	FAIRING ASSY
222-061-825-102	OH	FAIRING ASSY
222-061-825-103	OH	COVER
222-061-825-106	SV	R.H.AFT.FAIRING ASSY
222-062-216-105	OH	EXHAUST EJECTOR LH
222-062-217-101	OH	PLENUM ASSY
222-062-220-101	SV	BRACKET ASSY
222-063-307-102	OH	TAILPIPE ASSY
222-065-505-117	SV	OIL TANK ASSY L/H
222-065-512-001	OH	FLANGE ASSY.
222-065-562-101	OH	DUCT ASSY
222-065-563-101	SV	DUCT ASSY.
222-065-588-103	SV	FITTING
222-066-624-101	SV	SCREEN ASSY.
222-066-625-103	SV	BRACKET
222-066-687-101	SV	PLATE
222-069-933-101	OH	FIRESHIELD ASSY
222-069-933-109	OH	FIREWALL ASSY
222-069-944-101	SV	SHIELD ASSY.
222-069-953-101	OH	FITTING
222-069-957-101	SV	FITTING
222-075-092-101	OH	START CONTROL PANEL
222-075-095-101	SV	COVER

222-075-112-105	SV	INT. PANEL ASSY.
222-075-217-101	SV	PANEL ASSY, INSTRU
222-080-060-001	OH	MASTER CYLINDER
222-080-127-103	OH	BRACKET ASSY
222-080-127-104	OH	BRACKET ASSY
222-080-134-101	OH	BRACE
22208BC0500	SV	SCREW
222-131-008-109	OH	WINGLET
222-301-008-101	SV	CABLE, CONTROL
222-305-002-103	OH	HELIPLOT CONTROLLER
222-320-223-107	SV	SEAT BELT
222-320-823-107	SV	REEL AND HARNESS
222-325-001-006	SV	WIPER
222-325-001-028	SV	GUIDE ARM ASSY.
222-325-001-101	SV	DRIVE ARM ASSY.
222-325-008-101	SV	COUPLING
222-325-012-103	SV	AIR VALVE ASSY
222-325-013-101	OH	VALVE SHUT OFF
222-325-013-102	OH	VALVE ASSY
222-325-014-101	NE	SWITCH
222-325-014-103	OH	SWITCHASSY
222-325-015-101	OH	VALVE
222-325-015-102	OH	VALVE ASSY
222-325-023-101	OH	SWITCH-FLOAT
222-336-101-107	OH	FLOAT BAG
222-336-101-108	OH	FLOAT BAG
222-336-101-113	NE	FLOAT ASSY
222-340-030-001	OH	BEARING
222-340-039-001	AR	BEARING
222-340-040-001	OH	BEARING
222-340-047-001	OH	BEARING
222-340-048-001	SV	BEARING SET
222-340-051-001	OH	BEARING
222-340-052-103	OH	OIL PUMP
222-340-054-101	OH	BEARING
222-363-300-001	SV	CLAMP ASSY
222-365-507-101	OH	MANIFOLD ASSY
222-365-509-101	SV	CHIP DETECTOR ASSY.
222-365-510-003	OH	OIL COOLER
222-366-257-104	SV	FUEL CELL
222-366-635-101	SV	CHECK VALVE
222-366-677-103	OH	FUEL CELL
222-366-678-102	OH	FUEL CELL
222-366-678-103	OH	FUEL CELL
222-366-679-105	OH	FUEL CELL
222-366-679-106	OH	FUEL CELL
222-366-680-101	OH	FUEL CROSSFEED VALVE



222-366-680-105	OH	FUEL CROSSFEED VALVE
222-366-684-103	OH	FUEL TRANSMITTER
222-366-685-101	OH	CONTROL UNIT
222-366-688-101	SV	VALVE, BREAKAWAY
222-375-010-105	OH	LIGHT ASSY
222-375-019-005	SV	F/O PRESS. X-MITTER
222-375-019-009	SV	XMTR, PRESS
222-375-019-105	NE	XMTR, PRESS
222-375-019-105	SV	XMTR, PRESS
222-375-019-107	SV	TRANSMITTER PRESS
222-375-023-107	OH	MGT INDICATOR
222-375-036-101	NE	PRESS SWITCH
222-375-062-109	OH	MAST. TORQUE SIG.
222-375-073-101	OH	PANEL INTEG LIT
222-375-077-107	NE	XMTR, PRESS
222-375-509-101	SV	CHIP DETECTOR ASSY
222-380-020-001	OH	MODULE, HYD.
222-382-001-107	OH	SERVO, M/R
222-382-001-107	AR	SERVO, M/R
222-382-001-107	AR	SERVO, M/R
222-382-001-111	OH	SERVO M/R
222-382-002-103	OH	SERVO, T/R
222-531-202-157	OH	CLIP
222-531-722-117	SV	WINDOW ASSY
222-531-722-118	OH	WINDOW ASSY, RH
22255M070	OH	SERVO
222-625-001-101	OH	MOTOR CONTROLLER
22-285-01-1A	OH	DUAL TACH
22-285-03-2	OH	DUAL TACH
22-294-02B	OH	IND. FREE AIR TEMP
2231230-10-A-1	OH	FDAU
2231896-3	OH	HUMS CONTROL PANEL
22322-S-ET-12	OH	CLOCK
2233-14	OH	SWITCH, PRESSURE
22433-40	OH	ANTENNA
225L11N060	SV	NUT
227-20682-400	SV	PANEL, LIGHTED
22722-014	OH	SET ALT IND
2272419-2	OH	MOTOR
22A623	NS	TACH GENERATOR
22A649	OH	TACH GENERATOR
22H623	OH	TACH-GENERATOR
230020-2	SV	TACHOMETER TESTER
2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE

2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE
2-300-321-03	NS	FUEL INJECTOR NOZZLE
23031-004	OH	STARTER GENERATOR
23031-004	OH	STARTER GENERATOR
23032-010	OH	STARTER GENERATOR
23032-022	OH	STARTER GENERATOR
23032-1297	OH	SHAFT
23032-1586	NS	CLAMP ASSY
23032-2452	OH	ADAPTER
23032-2452	OH	ADAPTER
23032-2452	OH	ADAPTER
23048-1000	SV	SUPPORT
23048-1041	OH	AIR INLET ASSY
23072-1125	NS	CLAMP ASSY
23081-002	OH	STARTER GENERATOR
23081-002	OH	STARTER GENERATOR
23081-012	OH	STARTER GENERATOR
23081-042	OH	STARTER GENERATOR
23111353-1	OH	AIR BOTTLE EMERG. LG
2311M-93-1	OH	MOTOR ASSY, W/W
2311-M-93-1	OH	MOTOR ASSEMBLY
2312M-41-3	OH	CONVERTER, W/W
2312M-41-3	OH	CONVERTER, W/W
2312M-41-3	OH	CONVERTER, W/W
2313M186-3	NE	WIPER MOTOR
2313M186-4	NE	WIPER MOTOR
2314M-109-2	OH	WIPER ARM
2314M-22-15	OH	WIPER ARM
2314M-22-15	OH	WIPER ARM
2314M-22-15	OH	WIPER ARM
2315M-7-5	NS	WIPER ASSY
2317M-19-1	SV	SHAFT ASSY, FLEX
237EA	NE	RELAY
237-EAU	NE	RELAY
2-43330-501	OH	SERVO CYLINDER
244-627-1	NE	LINING ASSY
24-64229-13	NE	L/H FWD WDW W/TRACK
24-64229-14	NE	R/H FWD WDW W/TRACK
24-64239-1	NE	L/H AFT WDW NO TRACK
24-64239-2	NE	R/H AFT WDW NO TRACK
2476-001	OH	NOSE RADOME
24929-532	OH	ENCODING ALTIMETER
24D248	OH	SWITH, DIFF. PRESS.
2504-3002A-040M	OH	MILITARY COMPUTER

2504-901-M	OH	TRANSDUCER ASSY
250-954-001	SV	VALVE ASSY
250-954-002	SV	VALVE ASSY
250-954-101	SV	VALVE
250-954-102	SV	VALVE
250-A-7-11	OH	PISTONS SHOE
250B	NE	LOG BOOK
25100A37B1B1	OH	IND. HYD. PRESS
2524429-3	OH	CHECK VALVE
2524502-1	SV	ACUMULATOR
2524528-13	OH	GOVERNOR
2524644-26K	OH	AFCU
2524644-29	OH	FUEL CONTROL
2524644-29	OH	FUEL CONTROL
2524644-31H	OH	FUEL CONTROL
2524677-12H	OH	GOVERNOR
2524677-9	OH	GOVERNOR
2524692-11	OH	GOVERNOR
2524692-12H	OH	GOVERNOR
2524769-11	AR	GOVERNOR
2524769-11	OH	GOVERNOR
2524769-11	AR	GOVERNOR
2524769-14H	OH	GOVERNOR
2524883-8	OH	GOVERNOR
2524998-13	OH	MFCU
2524998-14	OH	MFCU
2524998-8	OH	MFCU
2524999-4	OH	GOVERNOR
2524999-4	OH	GOVERNOR
2524999-4	OH	GOVERNOR
2524999-5	OH	GOVERNOR
2524999-5	OH	GOVERNOR
2524999-5	OH	GOVERNOR
2524999-5	OH	GOVERNOR
25344-6	OH	IMPELLER ASSY
25362P003	OH	SLEEVE
2537531-28	NE	ORIFICE
2537531-40	NE	ORIFICE
2537531-50	NE	ORIFICE
2537533-10	NE	SHIM
2537533-11	NE	SHIM
2537533-12	NE	SHIM
2537533-14	NE	SHIM
2537533-16	NE	SHIM
2537533-18	NE	SHIM
254-10056	SV	RECEIVER
2-54860	OH	VOLT AMP METER

2551-2	SV	FITTING
25514B25A3A3	OH	FUEL FLOW GAUGE
2577-054	NE	RETAINER
2586047-902	OH	CONTROLLER, ASN
2586077-8	OH	GYRO SUB ASSY
2587193-43	OH	GYRO, DIRECTIONAL
2587909-914	OH	HORIZON, FLT. DIRECT
2588767-901	OH	INDICATOR RAD DIRECT
2588785-901	SV	RACK/AMP
2592555-901	OH	GYRO, DIRECTIONAL
2593379-1	OH	REMOTE COMPENSATOR
2593379-1	OH	REMOTE COMPENSATOR
2593379-1	OH	REMOTE COMPENSATOR
2593379-1	OH	REMOTE COMPENSATOR
2593996-333	OH	GYRO, TARSYN
2593996-333	OH	GYRO, TARSYN
2593996-555	OH	TARSYN-555 3-AXIS, GYRO
2594775-200	OH	ALTITUDE CONTROL
25ET24-S	SV	SWITCH, TOGGLE
25ET24-S	NS	SWITCH, TOGGLE
26000-4	OH	M-R DAMPER
260-0137-4002	SV	CONTROL/DISPLAY
262-0523-00	OH	LENS
26207-10002-120	OH	CREW DOOR
26552-00110-107	SV	HARNESS
26552-00110-108	SV	HARNESS
2660-1534-01	OH	GUIDEVANE ASSY
2660-1565-01	OH	CASING ASSY
266-061-432-005	OH	IMPELLER COVER
266-1534-01	OH	GUIDEVANE ASSY
2662D10	SV	TEE
266700-1003	OH	PUMP MANUAL
267-997-002	NE	INDICATOR
270-2436-060	OH	CONTROL, TRANSPONDER
2720-072-2000	SV	SPRING
275-583914	NE	MECHANISM ASSY
27700-26	OH	SHUTOFF VALVE
27700-26	OH	SHUTOFF VALVE
2770052-101	OH	DEFUEL VALVE-FUEL
27713-02	OH	SHIM
27734-1	SV	PRESS GAUGE
27734-1	SV	PRESS GAUGE
28050-E	NS	FILTER
2833127-101	AR	GUIDE
2840008268056CN	OH	TUBE ASSY
28847-4	RP	CONNECTOR
289-00341	OH	RATIO INDICATOR

289-1ESR	AR	GYRO, DIRECTIONAL
28B135-145A	OH	GENERATOR, AC
28B135-145AM	OH	GENERATOR, AC
28B135-29AM	OH	GENERATOR, AC
28B135-93	OH	GENERATOR, AC
28B135-93	OH	GENERATOR, AC
28B135-93	OH	GENERATOR, AC
28B135-93	OH	GENERATOR, AC
28B135-93A	OH	GENERATOR AC
28B23-15A	OH	GENERATOR, ALT.
28B302-8-DM	OH	GENERATOR, AC
28E20-27AM	OH	AC GEN
28E20-27AM	OH	AC GEN
28R61	OH	TURN AND BANK
28VS200Y-13	OH	CONVERTER
28VS200Y-13	OH	CONVERTER
291C349G1	NE	SUPPORT, YOKE & BEAM
2935UHI-002-2	OH	OIL COOLER
294-18023	NS	CABLE ASSY
2941832745-1	OH	ACTUATOR MOTOR
294UH12	OH	MOTOR, AC FLYWHEEL
295-060-605-001	OH	FUEL CELL
296-00741	OH	OIL PRESSURE IND
29698-4	OH	ACTUATOR VALVE
29698-40	OH	ACT. VALVE
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
2978-0001-2	OH	VALVE ASSY
299C934G001	OH	GEAR
2A17680	NE	ASHTRAY
2B18-2	OH	TRANSFORMER
2B18-2	OH	TRANSFORMER
2B28-1	AR	TRANSFORMER ASSY
2C27-1	OH	CARTRIDGE, BOOST
2C27-1	OH	CARTRIDGE, BOOST
2C27-1	OH	CARTRIDGE, BOOST
2C27-3	OH	CARTRIDGE
2C5040	NE	CHECK VALVE
2C5060	OH	CHECK VALVE
2C5080	OH	CHECK VALVE
2CM272B1	AR	STARTER

2CM73C	OH	GENERATOR
2CM73C4AL	OH	GENERATOR, DC
2F1-1-14513	NS	GASKET
2F1-2-14522	NS	GASKET
2F1-2-18546	NS	VENT B/U PLATE
2F1-3-15224-1	NS	NUT RING
2F1-3-15264-1	NS	NUT RING
2F1-4-20993-5	NS	FUEL CELL
2F1-6-35457	OH	FUEL CELL
2F1-6-35459	OH	FUEL CELL
2F1-6-35460	OH	CELL, FUEL
2I4-066-228-101	SV	PUMP,FUEL EJECTER
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2L4739-3	NS	COVER, LEVER, SLOT
2NG162	SV	TRANSISTOR
2NT1-12	NE	SWITCH, SEALED LOCK
30006804-005	NE	SPOOL AND SLEEVE
30006857-001	NE	WASHER
30-0087-9	NE	LIGHT
3001-01-101	OH	ACCELEROMETER, DUAL AXIAL
3001-01-111	OH	ACCELEROMETER, 3-AXIS
300184-1	NE	CROSSOVER ASSY
300184-3	OH	CROSSOVER ASSY
300184-7	NS	CROSSOVER ASSY RH
300184-7	NS	CROSSOVER ASSY RH
300184-7	NS	CROSSOVER ASSY RH
300184-7	NS	CROSSOVER ASSY RH
300-2070-000	OH	AUX BELL
30-0218-1	NS	LIGHT ASSY
300289-1	NS	CROSSOVER ASSY
300290-102-004	SV	COVER, RAFT
300290-102-005	SV	COVER, RAFT
30-0437-100	OH	STROBE LIGHT
3005T88POL	SV	GASKET
300758-5567-01	OH	MOUNTING PLATE
30076-007	OH	DC GENERATOR
30-076D3	NS	COUPLING
30-0849-17	OH	STROBE LIGHT
3009C	OH	FUEL PUMP
3009C	OH	FUEL PUMP

3009C1	OH	PUMP, FUEL
3009E	OH	FUEL PUMP
300S	OH	TENT/SURVIVAL SHELTE
3010636-01	OH	AGB BEARING
30-1131-1	OH	LIGHT ASSY
3012269-01	OH	LOOP CLAMP BRACKET
30-1314-1	SV	STROBE LIGHT
3014T56P01	OH	ANTI-ICE VALVE
30169-002	NS	INDICATOR LIGHT
3017368 CL18	OH	ADJUSTING SPACER
3019438CL2	NS	SHROUD
3019438CL4	NS	SHROUD
3019438CL6	NS	SHROUD
3019438CL9PR	NS	SHROUD
3020269-A	SV	HOUSING
30-207-026	OH	FIRE DETECTOR
3020937A	OH	HOUSING
30-231-31	OH	SMOKE DETECTOR
30-231-31	OH	SMOKE DETECTOR
30-231R7B	OH	DETECTOR/SMOKE
30-231R7B	OH	DETECTOR/SMOKE
30-231R7B	OH	DETECTOR/SMOKE
30-242	OH	BRAKE ASSY, MLG
30-242	OH	BRAKE ASSY, MLG
30-242	OH	BRAKE ASSY, MLG
30-242	OH	BRAKE ASSY, MLG
30-242	OH	BRAKE ASSY, MLG
30295-R61	NE	LIGHT
302DD	SV	VALVE CORE
3030-AM	OH	CONTACTOR
30-326E-7	SV	CONTROL AMP.FIRE/SMOKE
30-326E-7	SV	CONTROL AMP.FIRE/SMOKE
30-326E-7	SV	CONTROL AMP.FIRE/SMOKE
3032E	NE	TRACTOR
3032T42P01	NS	GASKET
3033T72G01	OH	SHAFT ASSY
3033T72G01	NS	SHAFT ASSY
3033T72G61	OH	DRIVELINK
3045478-01	OH	COMPENSATOR, TRIM
3045478-01	OH	COMPENSATOR, TRIM
3049038-03	OH	BLEED VALVE
305-015-3	OH	PRESSURE REDUCING VALVE
3054015-3	OH	VALVE ASSY
3054015-3	OH	VALVE ASSY
3054015-3	OH	VALVE ASSY
3057-3-134	OH	TORQUE INDICATOR
306-001-339-023	OH	LEVER ASSY

3062674-1	OH	ACCUMULATOR ASSY
3062674-1	OH	ACCUMULATOR ASSY
3062674-2	OH	UPPER ACCUMILATOR
30765400-10	NE	CABLE
309017-4-0196	NE	HOSE
30A6-175	OH	VALVE
30A6-350	OH	VALVE
30A8-690	OH	VALVE, HYDRAULIC
30A8-690	AR	VALVE, HYDRAULIC
30E20-11-C	OH	START GEN
30E20-97A	OH	GENERATOR DC
30E20-97A	OH	GENERATOR DC
3100345-01	OH	CT SHROUD HSG
3100358-01	OH	AGB COUPLING SHAFT
3100498-02	OH	GEARSHAFT
3100498-03	OH	INPUT SHAFT R/H
3100498-03	OH	INPUT SHAFT R/H
3100591-02	OH	DUCT, EXIT
3100635-01	OH	FLANGED BEARING
3100648-01	OH	GEAR, SPUR R/H, IDLER
3100649-01	OH	#8 NUT L/H
3100649-01	OH	#8 NUT L/H
3100651-01	OH	#5 NUT L/H
3101636-01	OH	AGB BEARING
3101638-01	SV	#15 BEARING
3-101784	AR	VALVE, PLUG
3-101784	OH	VALVE, PLUG
3-101784	OH	VALVE, PLUG
3-101784	OH	VALVE, PLUG
3-101784	NS	VALVE, PLUG
3101905-01	OH	OIL NETWK ADAPT L/H
3101907-01	OH	OIL ELBOW
3102546-01	OH	#15 NUT
3102634-01	OH	#5 KEYWASHER
3102634-02	OH	#8 KEYWASHER
3103-2	SV	INTERRUPTER
3103345-01	OH	BLEED VALVE RETAINER
3103949-01	OH	#10 BEARING
3104368-01	OH	CENTER FIRESEAL
3104370-01	NS	VALVE
3105079-01	OH	CASE ASSY, GAS GENERATOR
3105435-01	OH	BLEED VALVE COVER
3106186-01	OH	PT SHAFT HSG
3106186-01	OH	PT SHAFT HSG
3106198-01	OH	EXHAUST DUCT
3107498-01	SV	#11/#12 BEARING
3110-00-115-7360	OH	BEARING ROLLER CYLND



3113772-01	OH	HOUSING, OUTPUT
3113772-01	AR	HOUSING, OUTPUT
31-1601-001	SV	BEACON
3117924-01	OH	WIRING HARNESS
3123203-01	OH	VALVE, AIR BLEED
312-8	NS	BULBS
3130.S-4610560	OH	CONTROL ASSY
3130S95-00-491	NS	PUMP, LUBRICANT, TRANSFER
31512-1	OH	ACTUATOR LINEAR
3160S76-21-911	OH	DUAL TACH IND
3190200-2	OH	SWITCH ASSY
319980-2-1	OH	SOLENOID VALVE
32005-007	OH	TACH/GENERATOR
3201-1001	OH	TORQUE IND
320353-13	OH	SOLENOID
3214072-4	OH	VALVE, ANTI ICING MODULATING
3214102-2	OH	VALVE
3224796-7	OH	VALVE,ANTI-ICE START
322A22116500003	SV	L/H CREW DOOR
3240393H	OH	SOLENOID VALVE
3244706-6	OH	CONTROL, TORQUE
3244706-6	OH	CONTROL, TORQUE
3244709-7	OH	TCU
3244709-7	OH	TCU
3244721-11	OH	CONTROL UNIT, FUEL
3244721-8	OH	AFCU
3244736-8	OH	MFCU
3244736-8	OH	MFCU
3244737-14	OH	AFCU
3244737-9	OH	AFCU
3246-1	NE	FLASHER, EXT LIGHTS
324B418G11	NE	ACTUATOR ASSEMBLY
32-53005-0007-1	OH	GEAR PUMP
325-75-325S	SV	CLAMP
3260010-0201	OH	REGULATOR, OXYGEN
3260010-0201	OH	REGULATOR, OXYGEN
32-62037-42	OH	BELLCRANK
32644-30	NE	BASE ASSY
32-69089-1	OH	CYLINDER ASSY.
326D737	NE	RELAY
327-20105-700	OH	SWITCH PANEL
32-81024-53	NE	PANEL, LIGHT
32-82026-007	OH	A/P INTERFACE
328527X292	OH	FILLER ASSY
3289522-3-1	OH	VALVE FAN AIR
3302-6	OH	COUPLING
3305-6	NS	COUPLING HALF



332A64-1612-10	OH	CONTROL BOX
332A67A76821	SV	PANEL
332A75-2220-01	OH	COLLECTOR ASSY/L.H.
332A75-2420-02	OH	COLLECTOR ASSY
332A-84-1100-01	OH	BOOM ASSY
33776-02016-048	OH	PANEL ASSY
33776-44019-042	OH	CAUTION BOX
33776-44050-041	OH	JUNCTION BOX ASSY
33776-44074-041	OH	LORAN SW ASSY
33776-44075-041	OH	COMPASS
33776-44094-047	OH	COPILOT NAV CLUSTER
33776-44094-048	OH	PILOT NAV CLUSTER
33776-44120-041	OH	2 STAGE DIM
33776-44176-041	OH	RADIO MASTER SWITCH ASSY
33776-44177-042	OH	MKR BEACON SWITCH
33776-44250-KHC	OH	SWITCH PANEL
33776-44257-063	OH	PANEL ASSY
33776-44261-046	OH	COMPASS CONTROL
33776-44279-041	OH	CONTROL PANEL
33776-44287-044	OH	2 STAGE DIM
33776-44302-054	OH	PANEL, TEST
33776-44448-041	OH	2 STAGE DIM
33776-44465-041	OH	NAV SWITCH PANEL
33776-44465-042	OH	PILOT NAV SWITCH PANEL
33776-44481-041	OH	F/D DISPLAY
33776-44546-102	OH	PANEL ASSY
33776-44581-043	OH	MKR BEN CONTROL PANEL
33776-44685-065	OH	PANEL ASSY
33776-44795-041	OH	PANEL ASSY
33776-44796-041	OH	SWITCH PANEL PLTS LWR
33776-44798-041	OH	SWITCH PANEL CPLT LWR
33776-44802-041	OH	GRIP ASSY
33776-46028-041	OH	JUNCTION BOX
33776-46320-041	OH	EGPWS SWITCHING UNIT
33776-54209-041	OH	BRACKET ASSY
33776-62200-000	OH	JUNCTION BOX
33776-70009-041	OH	BRACKET ASSY, COLLECTIVE TRIM SERVO
33776-70009-041	OH	BRACKET ASSY, COLLECTIVE TRIM SERVO
33776-70013-101	OH	LINK
33776-70017-101	OH	LINK
33776-70018-101	OH	BRACKET
33776-70025-041	OH	PLATE ASSY
33776-70038-041	OH	CIRCUIT-BREAKER REMOTE CONTROL
33776-82027-042	SV	RELAY PANEL
33776-84096-044	OH	FRAMES
33776-84339-049	AR	HOIST CONTROLLER
34149-2B	NS	PLUG GAUGE

34149-3B	NS	PLUG GAUGE
34170-1-X	OH	LIGHT ASSY
34200850-800G	OH	GPS, NAVIGATION
34-24V19	OH	ACTUATOR
34290-001	NE	COVER
34401-30A22-1	SV	PRESS XMTR
3474-1	NS	LATCH ASSY
35000-5	SV	CONTROL UNIT
35000-5	SV	CONTROL UNIT
35000-5	SV	CONTROL UNIT
35000-5	SV	CONTROL UNIT
35000-5	SV	CONTROL UNIT
35000-5	SV	CONTROL UNIT
35000-5	SV	CONTROL UNIT
3500950-8	NS	HOUSING
3501180-2	OH	HOUSING ASSY, GEAR
3501180-2	OH	HOUSING ASSY, GEAR
350A21-0025-01	OH	FAIRING
350A23-0014-0101	SV	REAR FAIRING
350A23-0014-0302	SV	REAR FAIRING
350A-25-0060-0001	OH	DOOR ASSY
350A27159020	OH	CAP
350A54-1067-20	SV	DUCT/INTAKE
350A55-1001-20	OH	FUEL TANK
350A55-1127-20	SV	SPACER
350A64-5182-00	OH	P.C.BOARD
350A67-5110-00	OH	CIRCUIT BOARD
350A72072200	NE	DUCT
350A75105290	OH	FLUID MANIFOLD
350A77-0180-03	SV	SEAT ASSY
350A82-0000-19	RP	MIRROR ASSY
350A89-1032-00	SV	BELLCRANK
35225-1	NE	STUD
35302-61	NE	CABLE ASSY
35344-7807	NE	RELAY
3542-1-P1	NE	FILTER ASSY
3542-1-P1	SV	FILTER ASSY
3542-1-P1	SV	FILTER ASSY
3542-1-P1	SV	FILTER ASSY
3542-1-P1	SV	FILTER ASSY
355-35-2031-00	OH	CAP
355A14-05220202	OH	STABILIZER
355A14-0522-0202	OH	STABILIZER
355A32-2092-30	OH	BODY SIGHT
355A58-0514-11	OH	FAIRING
355A67951601	OH	PCB, HYDRAULIC
355A72-3003-00	NS	TUBE ASSY

355A-72-3003-00	OH	TUBE ASSY
3567401-1501	OH	XMTR, PRESS
3567707-9801	OH	TRANSMITTER, PRESS
3567758-6503	OH	XMTR, TORQUE
3567758-6503	OH	XMTR, TORQUE
3571281-6001	OH	TACH IND
3571371-8001	OH	TRIPLE TACH
3571371-8001	OH	TRIPLE TACH
3571810-2001	OH	FUEL FLOW GAUGE
35800-0	OH	FIRE DETECTION UNIT
3600S-1-501	NS	POTENTIOMETER
3602-4	OH	VALVE
3605876-0501	NS	SUPPORT
36-2867-003	OH	SHUT OFF VALVE
365-A25-30-22	NE	R/H FWD WINDOW W/TRK
36680B	OH	PRIME PUMP
369-3505-1	NS	WINDOW
369A15025-07	NE	PANEL, DOOR
369A15025-19	NE	MAP CASE
369A15025-20	NE	PANEL
369A15525-05	NE	PANEL, DOOR
369A15525-06	NE	PANEL, DOOR
369-A-2046-501	NE	L/H FWD CLEAR WINDOW
369-A-2046-502	NE	R/H FWD CLEAR WINDOW
369-A-2046-506	NE	WINDOW, TINTED RH
369D-012	NS	PITOT TUBE
369D24518	OH	TACH N2
369D292567-11	OH	SUPPORT ASSY
369-H-2032-52	NE	R/H AFT CLEAR WINDOW
369H2068-1	SV	LOWER DOOR HINGE
369H2090-2	NS	HINGE
369H4505	OH	ALTIMETER
369H4518	OH	DUAL TACH
369H6426-3	SV	ICS AMPLIFIER
369H90123-42	OH	ROTOR BRAKE KIT
369H92565	OH	CALIPER ASSY
369H92584	OH	MASTER CYL ASSY
369H92829-1	SV	LEVER ASSY
369HP902-1	NS	SEAL
36B5107539I	NE	BRUSHSTARTER
36B510753PI214	RP	BRUSHSTARTER
371-589680	OH	VALVE
371-907	OH	PLATE ASSY
374-589867	OH	SHUT OFF VALVE
375200-4	NS	COUPLING HALF
375204-12	NS	COUPLING
375204-16	NS	COUPLING HALF

375213-5	SV	COUPLING HALF
375275-6	OH	COUPLING
37555-4	OH	COUPLING
3755-8	NS	COUPLING
37800-2	OH	HYD VALVE
379017-7-1	OH	VALVE, SHUTOFF
379017-7-1	OH	VALVE, SHUTOFF
37B200004G004	OH	HOUSING
37B200072T101	NS	COVER
37C300266P101	OH	VALVE/AIR ANTI ICING
37C300368G001	NS	VALVE ASSY
37D400347P101	OH	IGNITION UNIT
37D400386G005	AR	FLOW DIVIDER
37D400413G002	SV	SWITCH, OVERSPEED LIMIT
37D400413G002	SV	SWITCH, OVERSPEED LIMIT
37D400413G002	SV	SWITCH, OVERSPEED LIMIT
37D400413G002	SV	SWITCH, OVERSPEED LIMIT
37D400413G002	NS	SWITCH, OVERSPEED LIMIT
37D400413G002	SV	SWITCH, OVERSPEED LIMIT
37D400422G003	OH	ACTUATOR ASSY
37D400422G01	OH	FUEL CONTROL
37D400479P101	OH	HEATER, FUEL/OIL
37D400479P101	OH	HEATER, FUEL/OIL
37E500156P107	OH	SUPPORT
37E502084G003	NS	SEAL, SHROUD
37E502084G003	NS	SEAL, SHROUD
381065-009	OH	TRANSMITTER
382542S	NE	SCREW
383030-02434	OH	IND FUEL QTY
384124-023	SV	LEVEL CONTROL UNIT
384124-023	OH	LEVEL CONTROL UNIT
384124-023	OH	LEVEL CONTROL UNIT
384124-023	OH	LEVEL CONTROL UNIT
384178-001	OH	SELECTOR SWITCH, FUEL
384178-091	OH	SWITCH FUEL QTY
384178-091	OH	SWITCH FUEL QTY
384178-103	OH	FUEL QTY SELECTOR
384198-091	OH	FUEL SWITCH
384301-004	OH	LEVEL CONTROL UNIT
3863039-1	OH	PLUNGER, VALVE, STE.
386500-5	OH	PUMP, FUEL
38850-0001-044	NS	SLING, CARGO
38850-0001-044	NS	SLING, CARGO
38950-00903-104	NE	BEARING
38950-00914-101	NS	BEARING, ROD END
38950-00914-101	NS	BEARING, ROD END
38950-00914-101	NS	BEARING, ROD END



3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3B7-6	OH	PUMP, FUEL BOOSTER
3G10014-107	OH	DRAG LINK, LANDING
400-0028	SV	COCKPIT/CONTROL
400-0030-2	OH	CONTROL PHONE
400-0038-001	SV	CONTROL/FM
400-005-31	SV	C960/CONTROL
400-0102-000	OH	TRANSCEIVER, FM
400-0140-024	OH	TRANSCEIVER
4000371-1	OH	ROTOR BRAKE
4000371-1	OH	ROTOR BRAKE
4000371-1	OH	ROTOR BRAKE
4000397-1	OH	CALIPERS
4000397-1	AR	CALIPERS
4000397-1	AR	CALIPERS
4000397-2	OH	CALIPER ASSY
4000397-2	OH	CALIPER ASSY
4000466-1	OH	ROTOR BRAKE ASSY
4000466-1	OH	ROTOR BRAKE ASSY
4000466-1	OH	ROTOR BRAKE ASSY
4000466-1	SV	ROTOR BRAKE ASSY
4000476-3	OH	ROTOR BRAKE
4000660-4802	SV	AUDO/PANEL/SWITCH
4000664-7002	OH	ADF/RECEIVER
4000937-6202	OH	RECEIVER, RADIO
4000966-0101	OH	RADAR RT-1301A
4000966-0107	OH	RECIEVER, XMTR RADAR
4000T98P02	OH	PUMP, LUBE
4000T98P02	OH	PUMP, LUBE
4000T98P02	OH	PUMP, LUBE
4000T98P02	OH	PUMP, LUBE
4000T98P02	OH	PUMP, LUBE
4000T98P02	OH	PUMP, LUBE
4001597-230	OH	REMOTE COMPUTER UNIT
4002963-404	OH	RMI, INDICATOR
4002F2-437	NE	CAMLOCKS
4002T00G009	OH	DRIVE ASSY
4002T11P01	OH	SHIELD



4002T12P01	OH	SHIELD
4002T79G02	OH	DRIVE ASSY
4002T80G01	OH	DRIVE ASSY
4002T80G05	OH	DRIVE ASSY
4002T80G05	OH	DRIVE ASSY
4003T11P01	OH	SHROUD
4003T62P04	OH	VALVE, START BLEED
4004508-0001	NS	FIITING
4004510-0001	NS	FITTING
4004T63G04	OH	ACTUATOR, STATOR
4004T63G04	OH	ACTUATOR, STATOR
4004T63G10	OH	ACTUATOR ASSY
4005461-01	SV	CRT
4005T01P03	OH	PURIFIER, FUEL
4005T01P03	OH	PURIFIER, FUEL
4005T01P03	OH	PURIFIER, FUEL
4005T01P03	OH	PURIFIER, FUEL
4006096-A	NE	ARM
4006096-A	NE	ARM
4006096-A	NE	ARM
4006096-F	NE	FLOATS
4006096-F	NE	FLOATS
4006096-P	NE	PIN
4006096-P	NS	PIN
4006096-P	NE	PIN
4006096-S	NE	SLEEVE
4006096-S	NE	SLEEVE
4006096-U	NS	FALCRUM
4006096-W	NS	WASHERS
4006096-W	NE	WASHERS
40062G02	NE	COVER, MICROPHONE
4006989-0501	NS	FITTING
4007159P01	OH	BLADE GUARD
4007T59P01	NE	GUARD
4007T59P01	OH	GUARD
4012373-905	OH	ACTUATOR, LINEAR
4012373-907	AR	ACTUATOR, LINEAR
4014T03G07	NS	SHROUD,SECT.,TURBINE
4015985-902	SV	COMPUTER, COMMAND
40-181B	NE	WHEEL ASSY
401-A	SV	BATT/TEMP/IND
4020-501-130	SV	GYRO
4020936-903	OH	TARSYN 3 AXIS
4020936-903	OH	TARSYN 3 AXIS
4025008-912	OH	HELIPILOT COMPUTER
4025008-918	OH	COMPUTER, HELIPILOT
4025T44P01	OH	FLEX DRIVE SHAFT

4025T87P03	OH	VALVE, ANTI-ICE
4026206-902	OH	CONTROL PANEL, HEADING
40314-3	OH	ROD ASSY
4033089-901	OH	FLIGHT DIRECTOR
4036980-1	OH	COUNTER BALANCE
4040T18P02	OH	IGNITION EXCITER
40-412	OH	WHEEL ASSY
40-413	OH	WHEEL ASSY
4042T90G03	NS	FILTER
4042T90G03	NS	FILTER
4042T90G03	NS	FILTER
4046T26G04	OH	RECORDER, HISTORY
4050T82G02	OH	FLOW DIVIDER
4053T35G01	OH	TUBE ASSY, METAL
406-030-121-101	SV	T/R SUPPORT ASSY.
406-075-837-101	NS	PRESSURE TRANSDUCER
406-092-001-101	SV	PYLON ALIGNMENT
406-271-001-101	SV	BORESIGHT TOOL KIT
40-628	NE	SPRINGS
4064T00G05	AR	VALVE DRAIN,FUEL
406-782-111-101	SV	BLOCK ASSY
4067R170	OH	WINCH RESCUE & CARGO
4068T25G03	OH	BRACKET
4068T27G01	OH	BRACKET
4068T28G02	OH	BRACKET
4068T96P01	OH	SWITCH, PRESS
4068T96P101	OH	switch, differential press
406-961-024-119	SV	LG. SUPPORT ASSY.
4069T09P01	SV	SLEEVE, OUTER
4069T10G01	OH	SLEEVE
4075008-912	SV	HELIPILOT COMP.
4085-11	OH	STUD
40980-1000	OH	INDICATOR
40S37-20	NE	STUD
41000670-005	OH	SERVO, M/R
41000670-005	OH	SERVO, M/R
41000670-005	OH	SERVO, M/R
41001140-001	OH	SCAS ACTUATOR
41004004-101	NE	LEVER ASSY
41005047-102	NE	MANIFOLD ASSY
41005053-101	OH	OUTPUT END ASSY
41005056-101	OH	FIXED END ASSY
41005059-101	OH	SPOOL AND SLEEVE
41005072-101	OH	LEVER ASSY
41005077-101	OH	LINK ASSY, FEEDBACK
41005295-101	AR	HOUSING ASSY
4-101-027-01	NE	LOCKING CUP

4101-B-63C	NS	PUMP
41-0694-17	NE	MOTOR ASSY
410SS-7	NE	SEALS
41100334-003	SV	SHIM
41103650-009	AR	T/R SERVO
41103650-009	OH	T/R SERVO
41103650-009	OH	T/R SERVO
41103650-009	OH	T/R SERVO
41103650-009	OH	T/R SERVO
41103750-017	OH	SERVO
41105950-11	OH	SERVO
41105C5A4E3	OH	DUAL TACH
4-111-019-08	NE	SEAL PLATE
4-111-040-59	NE	SUPPORT ASSY
4-111-053-01	NS	HOUSING
4114R60	OH	HOIST ASSY
411570R	OH	CYLINDER
411590-39	OH	VALVE
411590-39	OH	VALVE
412-001-301-101	OH	BELLCRANK ASSY
412-001-318-101	OH	BELLCRANK ASSY
412-001-700-101	NE	CONTROL ROD ASSY
412-001-900-61	OH	BRACKET
412-001-910-103	OH	TUBE ASSY
412-010-425-113	NE	TUBE ASSY
412-015-300-101	OH	M/R BLADE
412-015-300-101	OH	M/R BLADE
412-015-300-104	OH	M/R BLADE
412-015-300-106	OH	M/R BLADE
412-030-103-103	SV	STOP ASSY
412-030-216-153	OH	DOOR ASSEMBLY
412-030-216-153	NE	DOOR ASSEMBLY
412-030-300-108	SV	DOOR ASSY, PASS
412-030-324-102	OH	PANEL ASSY, FLOOR RH
412-030-324-111	OH	PANEL ASSY
412-030-326-101	OH	FLOOR PANEL
412-030-326-101	NE	FLOOR PANEL
412-030-326-103	NE	PANEL
412-030-339-107	NE	FLOOR PANEL
412-030-340-107	NE	FLOOR PANEL
412-030-373-101	NE	FLOOR PANEL
412-030-373-103	NE	FLOOR PANEL
412-030-374-101	NE	FLOOR PANEL
412-030-374-102	NE	FLOOR PANEL
412-030-378-101	NE	DOOR ASSY
412-030-379-101	NE	COVER ASSY
412-030-379-101	NE	COVER ASSY

412-030-437-101	OH	CAP ASSY
412-030-437-103	OH	STRAP ASSY
412-040-004-143	OH	TRANSMISSION ASSY
412-040-005-103	OH	MAIN DRIVE SHAFT
412-040-005-103	OH	MAIN DRIVE SHAFT
412-040-601-101	OH	HANGER ASSY
412-050-003-101	OH	SUPPORT BEAM ASSY
412-050-009-101	OH	CROSS TUBE ASSY
412-050-015-110	OH	SKID TUBE R/H
412-060-601-103	OH	FUEL CELL LH
412-060-612-101	OH	FITTING
412-060-614-109	SV	SUPPORT ASSY
412-060-617-001	SV	FITTING
412-060-618-101	SV	COVER
412-060-634-101	SV	FLANGE
412-060-644-001	AR	VALVE
412-060-801-101	OH	FAIRING ASSY
412-060-802-101	OH	FAIRING ASSY
412-060-802-123	OH	FAIRING ASSY
412-060-803-103	OH	DOOR ASSY
412-060-803-104	OH	DOOR ASSY
412-060-803-161	OH	FAIRING ASSY
412-061-603-105	OH	PLATE
412-061-604-102	OH	PLATE
412-061-627-101	SV	FITTING
412-061-636-101	OH	BRACKET
412-0660-620-101	AR	SUMP ASSY
412-066-241-101	SV	RETAINER
412-073-421-101	SV	BRACKET
412-074-030-101	OH	ISOLATION AMPLIFIER
412-074-101-101	SV	TRANSDUCER LINEAR
412-074-101-101	NS	TRANSDUCER LINEAR
412-074-101-101	NE	TRANSDUCER LINEAR
412-074-101-103	SV	TRANSDUCER
412-075-008-111	OH	DUAL TORQUE IND.
412-075-008-111	OH	DUAL TORQUE IND.
412-075-008-113	OH	IND. DUAL TORQUE
412-075-008-113	OH	IND. DUAL TORQUE
412-075-010-111	OH	TRIPLE TACH
412-075-010-111	OH	TRIPLE TACH
412-075-101-101	OH	STATIC INVERTER
412-075-205-101	OH	XMTR, TORQUE
412-075-513-103	OH	PANEL, CONTROL
412-075-701-113	OH	PANEL, LIGHTED
412-310-146-103	OH	DAMPER YOKE SET
412-361-637-101	OH	CELL, FUEL
412-361-639-101	OH	CELL, FUEL

412-375-001-105	OH	INDICATOR, DUAL
412-375-007-105	OH	IND. TRIPLE TORQUE
412-375-700-101	NE	PANEL ASSY, LIGHTED
412-375-702-101	OH	INSTRUMENT PANEL
412-375-702-101	NE	INSTRUMENT PANEL
412-706-007-109	OH	TANK ASSY
412-706-007-113	OH	KIT, FUEL AUX
412-706-007-114	OH	TANK ASSY, AUX FUEL
412-706-009-111	OH	TANK ASSY
412-801-301-133	OH	SUPPORT
4131204-2A1A	NE	BEARING
4140-00-153	OH	PUMP, BOOST, FUEL
4-141-140-R14	NE	SUPPORT
4-141-144-03	NE	SHIM
4-141-410-01	NE	PLATE
415-565	OH	ADAPTER ASSY
416-107	OH	CAP AND ADAPTER ASSY
4-162-035-02	SV	BRACKET
416-447A	NE	CAP ASSY, FUEL
416-50	AR	FUEL CAP ASSY
416-50	NS	FUEL CAP ASSY
416-50	NS	FUEL CAP ASSY
417-289	OH	CAP, ADAPTER
417-410	NE	CAP & ADAPTER ASSY
418-00014	NS	XMTR, PRESSURE
418-00084	OH	XMTR, PRESS
418-00475-001	OH	GENERATOR, AIRDATA
419-641	OH	ROTOR BRAKE CALIPER
419-6D27	OH	VALVE, SHUTTLE
419-6D27	AR	VALVE, SHUTTLE
41D880-3	OH	VALVE
41D880-3	OH	VALVE
4214X	OH	RADOME (S61)
422201E-594-Z	SV	CLAMP
42325-707	OH	JUNCTION BOX
42325-707	OH	JUNCTION BOX
42325-707	OH	JUNCTION BOX
42325-707	OH	JUNCTION BOX
425-125-978	SV	ANTENNA/SUPPORT
42550-2	OH	VALVE, IRREVERSIBLE
4273-1157S	SV	CLAMP
42801-061201-01	OH	POWER SUPPLIES
4290268-501	OH	MOUNTING BASE PLATE
4296-2	SV	CABLE ASSY
42C42641-1	OH	SERVO
42C42641-3	OH	SERVO
42C42641-3	OH	SERVO

42C42655	NS	VALVE, SYLINOID
42D166	OH	SWITCH, PRESS
42D248	OH	DIF. PRESS SWITCH
42D248	OH	DIF. PRESS SWITCH
42DA21	NE	BRUSH
4300(6980L)	OH	ATTITUDE GYRO
43006980L	OH	GYRO ATTITUDE
4-301-243-01	OH	PUMP, OIL
4-301-286-02	OH	MANIFOLD, FUEL
4-301-636-01	OH	FUEL MANIFOLD
4305-7150L	AR	DIRECTIONAL GYRO
4305-7150L	AR	DIRECTIONAL GYRO
4306-1014	SV	FUEL PRESS. IND.
4309-3003	OH	INDICATOR
4322-1002	OH	INDICATOR, OIL PRESS
4322-1003	OH	IND. FUEL PRESS
4-322-1097	SV	OILPRESS/IND
432-30521-100	OH	FRAME
433-30105-100	OH	SHIELD, GLARE
43622-02-03-03	OH	CONTROL ROD ASSY
43-622-02-03-04-10	SV	NUT
43-622-02-04-2	SV	BRACKET, AFC C.PITCH
4380-1007	OH	TORQUE METER
4423-01	NE	CASE ASSY
44410-2-24	OH	ROTATING BEACON
44410-2-24	OH	ROTATING BEACON
446000458-00	OH	VERTICAL SPEED, IND
45-0013-7	OH	LANDING LIGHT, RETRACTABLE
45-0013-7	OH	LANDING LIGHT, RETRACTABLE
45-0019-11	AR	SEARCH, LIGHT
45-0019-15	OH	SEARCH LIGHT, LANDING
45-0019-15	OH	SEARCH LIGHT, LANDING
45-0019-15	OH	SEARCH LIGHT, LANDING
45-0128-3	OH	SEARCH LIGHT
45-0182-1	OH	SEARCH LIGHT
45-0182-1	OH	SEARCH LIGHT
45-0182-1	OH	SEARCH LIGHT
45-0500-00	SV	LOADCELL METER
45291G	OH	FAN/ VENT
453-0112-01	RP	FUEL FLOW
453-012-0B	SV	REMOTE/DATA/BASE
4546A	OH	MOTOR ASSY
4546A	OH	MOTOR ASSY
4546A	OH	MOTOR ASSY
4550-2	OH	SWITCH, AUX
4563-125	NS	CLAMP ASSY
4563-125	SV	CLAMP ASSY

457-779	SV	FUEL CAP/ADAPTER
457-859	OH	FUEL CAP
458-4D1-6	NS	VALVE, CHECK
458-4D1-6	NS	VALVE, CHECK
4600H054	OH	NUT
46060-3	OH	DISP. GYRO
460920-03-06-02	SV	RPU
461690-02-02-01	SV	CDU
4619-773-0	SV	LOAD-IND
4650-2	OH	PRESSURE SWITCH
4650-2	OH	PRESSURE SWITCH
4650-2	OH	PRESSURE SWITCH
4650-2	OH	PRESSURE SWITCH
4650-2	OH	PRESSURE SWITCH
4650-2	OH	PRESSURE SWITCH
4650-2	OH	PRESSURE SWITCH
465C-63TW	OH	VALVE
47-0000-00	SV	LOADCELL & METER
470ZN01ABWY01	NS	DETECTOR, CONTINUOUS CURRENT
4730-00-135-6529	NS	POST CENTER
473-147-000	SV	BRACKET
473203-003	SV	SIGNAL COND. UNIT
473203-003	OH	SIGNAL COND. UNIT
473205-01	OH	FIRE DETECTOR
473205-01	OH	FIRE DETECTOR
473205-01	OH	FIRE DETECTOR
473205-01	OH	FIRE DETECTOR
47-351-020-1	SV	U-BOLT
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-3690364	NS	TRAYS
47-380-153-100	NE	R/H CLEAR WDW W/TRAC
47-40200-29	NE	LINK
4757R5	OH	VALVE
475C-14NW	OH	AUTO VALVE
475C-14WP	OH	AUTOVALVE
475C-81NW	NS	COCK POPPET DRAIN
475D12	OH	FLANGE ASSY
4811B-1	OH	SENSOR ANTI-LOCK
4820-01-299-7146	AR	TESTER,SENSOR LOOP

4820-01-299-7146	AR	TESTER,SENSOR LOOP
48203-2	OH	A/C MOTOR
484-81	NE	END BELL
485000K	OH	HYDRAULIC DAMPER
487316G1	OH	KIT
488-6D1-5	NE	FUEL FLOW SWITCH
488-8D1-1-4	NS	VALVE
4920T87G02	OH	VALVE, PILOT
500-019-001	NE	WINDOW
50-004-2A	SV	FAIR READ
5001-145-5	OH	RING
5001-3008	OH	INDICATOR, AIR TEMP
500-27	OH	ELT
500-27	OH	ELT
5003-1002	OH	IND. TEMP
5003426-2	OH	BRAKE ASSY
5003426-2	OH	BRAKE ASSY
5003426-2	OH	BRAKE ASSY
5003426-2	OH	BRAKE ASSY
50-038-1	OH	FITTING
5003927-1	OH	WHEEL HALF I.B. SUB ASSY.
5003928-1	OH	WHEEL HALF O.B.
5003T42P02	OH	FUEL PUMP
5003T80P01	NE	SHAFT SEAL
50-040-3	SV	FITTING
5006-1008	OH	INDICATOR, TEMP
500702-2595	OH	FAN ASSY
500702-3021	OH	BLOWER ASSY
500702-4491	OH	BLOWER ASSY
500702-5110	OH	BLOWER ASSY
500702-5442	OH	BLOWER ASSY
500702-5442	SV	BLOWER ASSY
5007554-2	OH	WHEEL ASSY
5007554-2	OH	WHEEL ASSY
5007554-2	OH	WHEEL ASSY
5007555-3	OH	BRAKE ASSY
5007555-3	OH	BRAKE ASSY
5007681-2	OH	WHEEL HALF, OUTBOARD
5007681-2	OH	WHEEL HALF, OUTBOARD
5008T47G01	NE	SUPPORT
501010-C-2251	NS	SEAT BELT
501-1113-01	OH	DISP. GYRO
501-1197-18	AR	STDBY ATTITUDE IND
501-1201-01	OH	INST.SWITCH RELAY
501-1255-01	OH	GYRO, VERTICAL
501-1318-01	OH	STATIC INVERTER
5012T75G25	SV	ADAPTER FLANGE





505C01-2	NS	TIRE
508-1103-02	OH	KNOB
50869-125	OH	CAP
5105-12H	NE	RING
511431-3	NS	DISC ASSY
51208-241	NE	SCREW
5-1259	OH	TRANSFORMER
51406-002	NE	STUD
5-14864-B	OH	MOTOR
51509-002R	OH	VOLTAGE REGULATOR
51509-002R	OH	VOLTAGE REGULATOR
51509-002R	OH	VOLTAGE REGULATOR
515433-P3	OH	PRESSURE VALVE
5-1580A1	OH	SOLENOID
51663-RR-54220	OH	PUMP DUMP FUEL SYST
5170D16X26-5	NS	HOSE ASSY
517D870P03	SV	SWITCH, PRESSURE
517D870P03	SV	SWITCH, PRESSURE
52-0500-1	NE	RETAINER
52-0500-1	NS	RETAINER
52-0520-3	OH	COVER & HOUSING ASSY
52-0520-9	AR	HOUSING/COVER ASSY
52-0520-9	AR	HOUSING/COVER ASSY
52-0520-9	AR	HOUSING/COVER ASSY
52-124-4	NE	SWIVEL ASSY,OUTBOARD
52-2145-009	OH	FUEL FILTER ASSY
52-2145-009	OH	FUEL FILTER ASSY
522-4114-003	OH	INDICATOR, RAD ALT
52-2889-016A	OH	FILTER ASSY
52-2889-018	OH	FUEL FILTER
5232480-H	OH	FUEL NOZZLE
52352-11	OH	VALVE
524-061	NE	GENERATOR STARTER
524SUE/13	OH	PITCH COMPUTER
524SUE/13	OH	PITCH COMPUTER
524SUE/9	OH	COMPUTER, PITCH
524SUE/9	OH	COMPUTER, PITCH
524SUE/9	OH	COMPUTER, PITCH
528315-1	NS	SCREWJACK, ACTUATOR
52-86-1	SV	SWITCH
5290277-502	OH	FILL PORT COMSEC
52S219	NS	KIT, ELEMENT
53060-1	OH	CYL, MSTR HYDR BRAKE
530984A	NS	SCREEN ASSY
530984-A	NS	SCREEN ASSY
531-1	OH	CURRENT LIMITER
53-32-6	SV	PRESSURE/SWITCH

5340-01-089-3535	-	Bracket,Fuel Filter
536936-11	OH	REGULATOR
536936-11	OH	REGULATOR
53X2270	SV	SEAL
540-001-029-001	OH	FORCE GRADIANT
540-001-050-007	OH	TUBE ASSY
5406-1	OH	PROP FEATHER SWITCH
541632-4-1	OH	ACTUATOR ROTARY
54279-7	OH	HYD. VALVE
544-0011-002	OH	GEAR SPUR
544090-1-1	OH	GEAR CASE
548607-1	OH	MODULE, SYNC YAW
548607-1	OH	MODULE, SYNC YAW
548607-1	OH	MODULE, SYNC YAW
548607-1	OH	MODULE, SYNC YAW
548607-1	OH	MODULE, SYNC YAW
54A35	NE	IGNITOR
55-1110-1	NS	WIPER INSERT
55-1316-1	SV	DRIVE SHAFT-FLEXIBLE
55-1316-1	SV	DRIVE SHAFT-FLEXIBLE
55200-3	OH	CYL ACCUM
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
554199-1	OH	MODULE ASSY, AMP
555533-3	OH	CAPSULE, PITCH
555533-3	OH	CAPSULE, PITCH
555536-5	OH	CAPSOLE COLL
555536-5	OH	CAPSOLE COLL
555536-5	OH	CAPSOLE COLL
555536-5	OH	CAPSOLE COLL
555536-5	OH	CAPSOLE COLL
555537-2	OH	CAPSOLE PITCH
555537-2	OH	CAPSOLE PITCH
555537-2	OH	CAPSOLE PITCH
555537-2	OH	CAPSOLE PITCH
555537-2	OH	CAPSOLE PITCH
555538-5	OH	CAPSOLE ROLL
555538-5	OH	CAPSOLE ROLL
555538-5	OH	CAPSOLE ROLL
555538-5	OH	CAPSOLE ROLL
555538-5	OH	CAPSOLE ROLL



570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-080-003	NE	TRANSDUCER, LINEAR
570-074-100-001	OH	SENSOR-AMP UNIT-SAS
570-074-1001	SV	SENSOR
570-074-150-001	RP	AFCS CNTRL PANEL ASY
570-074-252-005	OH	SENSOR AMP
570-074-320-003	SV	BOX
570-074-321-011	OH	SENSOR AMP MODULE

570-076-002-001	OH	SERVO ACTUATOR
570-076-002-001	OH	SERVO ACTUATOR
571935-1	OH	TURBINE, COOLING
571936-1	OH	TURBINE, COOLING
573506-9	NE	STRAP
573D346P1	OH	RING, SUPPORT
573D346P5	OH	RING HALF, STG 1
573D347P1	OH	RING, SUPPORT
573D347P5	OH	RING, SUPPORT
573D348P2	OH	RING, STG 3
573D349P1	OH	RING ASSY
574-074-101-015	OH	SYNCHRONIZER, PITCH
574-074-101-017	OH	SYNCHRONIZER, SCAS
574-074-101-019	RE	SYNCHRONIZER, SCAS
574-074-140-003	OH	PANEL, CONTROL AFCS
574-074-150-001	OH	PANEL ASSY, TRIM CTL
574-074-295-003	OH	CONTROL PANEL, SCAS
574-074-314-003	OH	PANEL, TRIM CONTROL
575-1022	OH	DETECTOR
58200-02009-117	NS	SEAL
58201-02012-117	OH	ROD ASSY
58300-02041-66	NE	PLATE ASSY
5841-00-536-0778	OH	RECIEVER/TRANSMITTER
58550-10283-041	OH	FIRE WARN TEST PANEL
585857-1	SV	CAPSOLE, COLLECTIVE
585857-1	SV	CAPSOLE, COLLECTIVE
585857-1	OH	CAPSOLE, COLLECTIVE
585857-1	OH	CAPSOLE, COLLECTIVE
585857-1	OH	CAPSOLE, COLLECTIVE
5934-1	OH	ALTIMETER
5934P-1	OH	ALTIMETER
595224-2	OH	AMPLIFIER VERT ACCEL
59D62	SV	RELIEF VALVE
5ET1-S	OH	SWITCH
5F155-504	OH	TANK ASSY
60-002-300	OH	VALVE SHUTTLE
60-0104-1	NE	WASHER
6001-088-00	OH	SELF POWERED LIGHT
6006T87G04	SV	NOZZLE
60-1431-3	OH	POWER SUPPLY
60-2694-3	OH	POWER SUPPLY ASSY
60-2694-3	OH	POWER SUPPLY ASSY
60-2694-3	OH	POWER SUPPLY ASSY
6028T23G01	OH	VALVE, PILOT
6028T23G01	OH	VALVE, PILOT
60-2977-3	OH	STROBE LIGHT POWER SUPPLY
60-3274-5	OH	POWER SUPPLY

60-3274-5	OH	POWER SUPPLY
60-3274-5	OH	POWER SUPPLY
6033T79G02	NS	TUBE ASSY
6034T40G04	OH	DUCT
6034T62P16	OH	BLOWER, PARTICLE SEP
60-3557-1	OH	POWER SUPPLY
60-3557-1	OH	POWER SUPPLY
60-3557-1	OH	POWER SUPPLY
6038T31PQ2	OH	SEAL
6038T59P03	OH	BLOWER, PARTICAL
6038T59P05	OH	BLOWER ASSY
6038T64G02	OH	ACCESORY HOUSING
6038T68G03	OH	FRAME, EXHAUST
6038T71G04	OH	CASE DIFFUSER
6038T83G02	OH	HOUSING, REAR
6038T92G01	OH	TURBINE CASE
6038T92G07	OH	TURBINE CASE
6038T92G08	OH	CASE ASSY
6039T02G01	OH	CASE ASSY
6039T04P01	OH	CASE HALF, RH
6039T04P02	OH	CASE HALF, LH
6039T21G01	OH	SUPPORT, SHROUD
6039T25G01	OH	SHAFT, ACTUATOR
6039T60G17	OH	STATOR ASSY
6039T61G01	OH	SUPPORT, SHROUD
6039T95G02	OH	HOUSING, C-SUMP
6042H1	OH	RELAY
6042H166	OH	RELAY
6042H166	OH	RELAY
6042H167	SV	200 AMP RELAY
6042H167	SV	200 AMP RELAY
6043T36P01	OH	IMPELLER, SHROUD
6043T40G04	OH	DUCT ASSY
6044T04G10	OH	CASING ASSY
6044T12G01	OH	HOUSING - REAR GEARBOX ASSY
6044T53G01	AR	COLD SECTION MODULE
60-4876	NS	ROLLER ASSY.
606065-1	OH	HOUSING, FAN
6061-1	NS	DUCT, ANTI-ICING
6061-1	NS	DUCT, ANTI-ICING
6061T40G01	OH	DUCT, INNER STG 1
6063-2	OH	BELLMOUTH, HEATED
6063-2	AR	BELLMOUTH, HEATED
6063-2	OH	BELLMOUTH, HEATED
6063-2	OH	BELLMOUTH, HEATED
6063-2	OH	BELLMOUTH, HEATED
606T86-3	NS	TIRE

609-7936-400	SV	VHF TRANSCEIVER
6098027-410	OH	NAV/REC
6098027-410	OH	NAV/REC
6098032-400	OH	RCVR, GLIDE SLOPE
6098032-400	OH	RCVR, GLIDE SLOPE
61000-014	OH	INDICATOR TOT
6106-08000-044	SV	LAG DAMPER
61070-36118-046	SV	TUBE
61088-20222-041	OH	PLATFORM ASSY LH
61088-20222-042	OH	PLATFORM ASSY RH
61088-45282-041	OH	INTER COM
61088-50067-043	OH	DUCT
61088-50074-042	OH	DUCT
61088-50081-042	OH	DUCT
61088-50084-042	OH	DUCT
61088-50087-041	OH	DUCT
61088-50087-042	OH	VALVE ASSY
61088-50087-109	SV	FITTING
61088-50087-110	SV	FITTING
61088-50092-042	OH	NOISE SUPPRESSOR
61088-60774-041	OH	H.F. ADAPTOR
6115-01-119-9696	OH	AK GENERATOR
61150-30321-044	NS	BRACKET ASSY
61170-20240-101	NE	STRIP, ABRASION
61200-72537-101	NE	CLEVIS
61200-72537-102	NS	CLEVIS
61200-72538-105	NS	STRIKER
6122-85131-015	OH	TREAD ASSY
6122-86260-001	OH	SUPPORT ASSY
6122-91104-83	OH	PANEL ASSY
6122-91153-002	OH	QUADRENT
61250-51214-002	OH	AFT UPPER TUBE ASSY
61250-51233-041	OH	TUBE ASSY
61250-51233-041	OH	TUBE ASSY
61250-51233-041	OH	TUBE ASSY
61250-51233-041	OH	TUBE ASSY
61250-51233-042	OH	TUBE ASSY
61250-51233-043	OH	AFT LOWER TUBE ASSY
61250-51234-041	OH	TUBE ASSY, LH
61250-51234-041	OH	TUBE ASSY, LH
61250-51235-041	OH	TUBE ASSY
61250-51235-041	OH	TUBE ASSY
61250-51235-041	OH	TUBE ASSY
61250-51235-041	OH	TUBE ASSY
61250-51235-041	OH	TUBE ASSY
61250-51235-041	OH	TUBE ASSY
61250-51235-041	OH	TUBE ASSY
61250-51235-042	OH	TUBE ASSY
61250-51235-042	OH	TUBE ASSY



61250-51235-042	OH	TUBE ASSY
61250-51235-042	OH	TUBE ASSY
61250-55014-101	OH	RESERVOIR,PNEUMATIC
6125-51235-042	OH	TUBE ASSY
61300-63247-041	OH	COVER ASSY
61300-63247-042	OH	COVER ASSY
61301-05012-101	OH	MOTOR
6130-63210-000	OH	FITTING
61350-20436-051	OH	SUMP, EMERGENCY LUB
61350-20436-051	OH	SUMP, EMERGENCY LUB
61350-20886-106	NS	SHIM
61350-20886-106	OH	SHIM
61350-20886-108	NE	SHIM
61350-20886-108	OH	SHIM
61350-20886-109	NE	SHIM
61350-20886-109	OH	SHIM
61350-20886-111	NE	SHIM
61350-20886-111	OH	SHIM
61350-20886-112	NE	SHIM
61350-20886-112	OH	SHIM
6137-66500-001	OH	GEAR BOX
6140-61110	OH	YOKE
6140-61628	OH	PETAL RUDDER
6140-61629	OH	LEVER
6140-62619	OH	LINK ASSY
6142-66604-16	OH	GRADIENT
6142-66607	OH	QUADRENT
6142R3HC3-J	SV	VALVE,SELECTOR
6142R3HC3-J	SV	VALVE,SELECTOR
614U-3A	OH	CONTROL BOX
61500-70002-011	OH	SEAT INSTALL OBSERVE
61-51-58	OH	SCREEN INSTALL,INLET
61-51-58	OH	SCREEN INSTALL,INLET
61-51-58	SV	SCREEN INSTALL,INLET
61-51-58-00	OH	SCREEN ASSY,WELDED
61-51-58-00	OH	SCREEN ASSY,WELDED
6152-62710-002	OH	TRACK SEAT
61533-109-4	OH	T4 IND.
61550-61335-045	SV	PANEL ASSY
61550-61357-042	OH	RING/RETAINING
61550-61360-102	OH	SLIP RING ASSY
61550-62250-041	OH	PUMP/MOTOR
61551-02029	OH	READING LIGHT
6157-62268-010	OH	PANEL,LIGHTED
61650-20300-041	OH	SERVO, PRIMARY
61650-20300-041	OH	SERVO, PRIMARY
61650-20300-042	OH	SERVO, PRIMARY

61650-20300-042	OH	SERVO, PRIMARY
61650-20300-042	OH	SERVO, PRIMARY
61650-20300-042	OH	SERVO, PRIMARY
61650-20300-042	OH	SERVO, PRIMARY
61650-20300-043	OH	SERVO, PRIME, LH LAT
61650-20300-043	OH	SERVO, PRIME, LH LAT
61650-20300-043	OH	SERVO, PRIME, LH LAT
6167-64244-3	OH	CYLINDER, HYDRAULIC
6172-50107-001	OH	SHIELD ASSY APU
61-785-139-1	OH	SPRING
6182-80135-006	OH	FITTING
618T-3	OH	HF RADIO
62052RSJ	NS	BEARING
62-108	SV	TRIM WHEEL ASSY
622-0876-012	OH	RECEIVER VOR
622-0876-211	OH	RECEIVER
622-0876-211	OH	RECEIVER
622-1204-004	OH	RADAR ALTIMETER INDICATOR
622-1270-001	OH	ATC TRANSPONDER
622-1879-001	OH	TRANSCEIVER, VHF
622-1879-001	OH	TRANSCEIVER, VHF
622-1959-011	OH	DIGITAL READOUT UNIT
622-2093-001	SV	POWER CONVERTER
6251M4	SV	ACCELEROMETER
6251M4	SV	ACCELEROMETER
6251M4	SV	ACCELEROMETER
6259M6-10	OH	HUMS ACCELEROMETER
628-8132-001	SV	CONTROL/HF
629-7150-002	OH	TRANSMITTER
63097-01	OH	PUMP, HYDRAULIC
63203LLB	NE	BEARING
634-0054-001	OH	NAV ASSY
64/66310	NE	INDICATOR, ATTITUDE
64004-122	NE	R/H TINTED CHIN BUBB
64004-123	NE	L/H TINTED CHIN BUBB
64-032	NE	CONTROL CABLE
64090-5	NE	DOOR BUBBLE, LWR LH
64090-6	NE	L/H TINTED UP WDW
64090-7	NE	L/H TINTED LOW DOOR
64-094	OH	TORQUE WRENCH 400'LB
64279-004-1	SV	TRANSMITTER, PRESS
6440-61410-013	OH	CONTROL STICK, COLLECTIVE
64536-501-1	OH	IND. TACH
645442-2	OH	HOUSING
645443-1	OH	HOUSING
645444-1	OH	IMPELLER
645448-1	OH	SHAFT, FAN

64550-023-1	OH	TACH TRANSMITTER
6465-62027-008	OH	UTILITY TANK
6465-62121-101	NS	GUIDE SPRING
64809-416-1	OH	INDICATOR
64809-419-1	OH	PRESS IND. MFG
65000-212	OH	INDICATOR, TRANSMISSION OIL
6501-1006	OH	TACH. IND.
6502-3045	OH	INDICATOR, DUAL TACH
6503A-1058	OH	TACHOMETER
65-0700-1	OH	INDICATOR
65-0700-3	OH	INDICATOR LIGHT
65112-07003R042	OH	SLEEVE ASSY
65130-07400-043	OH	PITCH BEAM
65209-06002-042	OH	TUBE ASSY
652-94	SV	ATC
65317-03006-109	OH	VALVE, FUEL SELECTOR
65317-03006-110	OH	VALVE, FUEL SELECTOR
65317-03006-110	OH	VALVE, FUEL SELECTOR
65317-03006-111	OH	VALVE, FUEL SELECTOR
65317-03006-112	OH	VALVE, FUEL SELECTOR
65317-03006-112	OH	VALVE, FUEL SELECTOR
65317-08089-101	OH	VALVE SHUTOFF GATE
65370-04100-045	OH	CLUTCH ASSY
65-499270-2C	OH	TRIM STABILIZER
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-04023-103	SV	AMP, FIRE DETECTOR
65550-11004-103	OH	CABLE ASSY.
65550-12019-101	OH	CONTROLLER, ANTI-ICE
65550-12019-101	AR	CONTROLLER, ANTI-ICE

65550-12019-101	AR	CONTROLLER, ANTI-ICE
65651-03011-103	OH	BOTTLE ASSY
65652-09022-117	OH	PRESSURE SWITCH
65652-09025-101	SV	VALVE
6577-1	OH	FAN ASSY
65901-02458-102	NE	RELAY
65952-11413-101	NS	BEARING, ROLLER
65D56	OH	ELBOWS
66005-01	OH	HYDRAULIC PUMP
6604-3001	OH	VERT. SPEED IND.
66052-6	OH	FUEL FLOW TRANSDUCER
6607-1-83	SV	SWITCH, PRESS
6607-1-83	OH	SWITCH, PRESS
6607-2-102	OH	SWITCH, PRESS
6607-2-12A	NE	PRESSURE SWITCH
6607-2-12A	NE	PRESSURE SWITCH
6607-6-28A	OH	SWITCH, PRESS
6607A-4-93	OH	PRESSURE SWITCH
6607A-A-41	OH	OIL PRESSURE SWITCH
6620-21-809-9744	OH	TACH GENERATOR
6638T45P01	OH	NOZZLE
6638T92G01	OH	ROTOR & CASE
66WAN200	OH	PUMP, HYDRAULIC
66WAN200	OH	PUMP, HYDRAULIC
66WAN200-2	OH	PUMP, HYDRAULIC
66WAP200	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WAP200-2	OH	PUMP, HYDRAULIC
66WBL200	OH	PUMP, HYDRAULIC
66WBL200	OH	PUMP, HYDRAULIC
66WBL200	OH	PUMP, HYDRAULIC
66WBL200	OH	PUMP, HYDRAULIC
66WBL200	OH	PUMP, HYDRAULIC
6752-2-50	OH	BREAKER
677B10024	NE	FITTING UPPER SPT
67A118	OH	BLOCK ASSY
67A118	OH	BLOCK ASSY
67A674	OH	SHAFT ASSY
67A674	OH	SHAFT ASSY
67H100-3	OH	PUMP
68-1172	NE	SEALS
6876097-01	SV	BOLT

68GBO-1D500	SV	RELAY
69917-094MB12C	-	PIN, SPIRAL SPRING
6D128	OH	Drain Valve
70-001812F25Z2	OH	HOSE
70-00181F8Z2	OH	HOSE
7000298-901	OH	COMPUTER, TRIM
7000299-901	OH	HELIPILOT CONTROLLER
7000299-903	OH	HELIPILOT CONTROLLER
7000466-914	OH	ADI
7000469-902	OH	HSI, INDICATOR
7000469-902	OH	HSI, INDICATOR
70-004A10F14Z2	OH	HOSE
70-004A10F29Z2	OH	HOSE
7000789-901	OH	FLIGHT DIRECTOR
70-008-24-23-22	SV	BUSHING
70-009F000Y100A	NE	HOSE ASSY
70-009F000Y114A	NE	HOSE ASSY
70-009G000Z104A	NE	HOSE ASSY
70-009H07SW204	NE	HOSE ASSY
70-010J000C080	SV	HOSE ASSY
7001484-901	OH	CONTROL ROD ASSY
7001484-901	OH	CONTROL ROD ASSY
70-0158-5	SV	DIMMER CONTROL
700-255-1	SV	CAPSOLE GAIN, PITCH
70-051-08D060A	SV	HOSE
7006108-902	SV	7006108-902
7006109-002	SV	LEVER
7006127-901	OH	ROD ASSY
7006128-901	OH	ROD ASSY
7006129-901	OH	LINK ASSY
7006129-901	OH	LINK ASSY
7006137-901	OH	RELAY BOX
70-061E000D250A	NE	HOSE ASSY
70-061F000	NS	HOSE ASSY
70-061F000X110A	NE	HOSE ASSY
70-061F000X116A	NE	HOSE
70-061H000A154A	NE	HOSE ASSY
70-061V000X270A	NE	HOSE
7006-9224-081	OH	RATE GYRO
70070-55075-103	OH	CAUTION ADVISORY PANEL
70072-15001-030	NE	KIT
70084-1713-111	OH	SENSOR
7008471-802	OH	WEATHER RADAR CONTROLLER
7009330-901	OH	RADAR SENSOR
700-HA32224	OH	RELAY
70103-08005-041	OH	NUT, MAIN ROTOR
70103-08005-104	OH	NUT, MAIN ROTOR

70104-08000-049	OH	SWASHPLATE ASSY
70104-08000-049	OH	SWASHPLATE ASSY
70104-08000-049	OH	SWASHPLATE ASSY
70104-08020-045	OH	SWASHPLATE, CONTROL
70104-08020-045	OH	SWASHPLATE, CONTROL
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08021-043	OH	LINK ASSY, SCISSORS
70104-08223-041	OH	CLEVIS, ROD END, ROTATING SCISSORS
70105-08157-041	OH	PIN ASSY, HEATED
70106-08105-101	AR	WEIGHT, M/R
70108-28103-101	OH	GRIP ASSY
701-2042	NE	LAMP
7012100-804	RP	RMU
7012100-954	OH	RADIO MANAGMENT UNIT
7012100-954	OH	RADIO MANAGMENT UNIT
70161-001	OH	HEAT SENSOR
7018083-901	AR	TUBE ASSY
70201-07051-115	OH	COVER STABILATOR
70201-07056-120	OH	WASHER FLAT
70202-01008-102	NS	SILL
70202-01008-102	NS	SILL
70202-01008-102	NS	SILL
70202-01008-102	NS	SILL
70202-01008-102	NS	SILL
70202-01008-102	NS	SILL
70203-22300-142	NE	SPLICE
70205-06052-067	OH	FAIRING ASSY
70205-06055-107	OH	COVER PLATE
70205-26002-041	OH	COWLING FOR PYLON
70206-01003-044	NE	WINDSHIELD PANEL, MAIN R/H
70206-01003-045	NE	WINDSHIELD PANEL L/H
70206-01003-101	OH	WINDSHIELD-HEATED L/H
70206-01003-102	OH	WINDSHIELD-HEATED R/H
70207-01005-130	SV	PLATE
70207-06051-047	OH	STEPS
70207-06051-058	NS	STEP ASSY
70207-06051-058	NS	STEP ASSY
70207-06051-058	SV	STEP ASSY
70207-06051-062	OH	STEPS
70207-06051-106	OH	STEPS
70207-06052-101	OH	STEP
70207-06071-058	OH	TUBE ASSY
70207-22210-041	OH	PANEL ASSY

70207-22210-106	OH	PANEL
70209-02520-044	OH	COVER BATTERY
70209-03003-012	OH	DOOR INSTL
70209-05006-101	NS	PIN TAPERED
70209-05006-102	NE	BUSHING
70209-07051-052	OH	LIFT LINK
70212-01004-114	NE	ACCESS PANEL
70212-01010-000	OH	NOSE COWEL
70212-02517-102	OH	SKIN
70212-03003-041	OH	FRAME ASSY
70212-03007-042	OH	PANEL ASSY
70213-05011-044	OH	SUPPORT
70214-02555-047	OH	MID FLOOR BOARD
70214-02556-013	OH	DOOR INSTALL
70214-02556-042	AR	PAN ASSY
70214-02556-042	AR	PAN ASSY
70214-02556-042	AR	PAN ASSY
70214-02556-042	AR	PAN ASSY
70214-02556-044	OH	FLOOR ASSY AIRCRAFT
70214-02556-048	OH	FLOOR ASSY BOARD
70214-02555-047	OH	FLOOR PANEL, CENTER
70214-20556-048	NE	MAIN CABIN FLOOR PANEL
70214-20556-048	OH	MAIN CABIN FLOOR PANEL
70215-02313-102	OH	BRACKET
70215-02531-051	OH	FAIRING FUSELAGE
70215-02531-058	OH	FAIRING, FUSELAGE
70215-42401-042	OH	FAIRING ASSY R/H
70215-42408-180	NS	WASHER
70215-42410-042	OH	FAIRING ASSY
70215-42410-050	OH	FAIRING ASSY RH
70216-01007-136	NS	DOUBLER
70216-01009-101	NE	WINDSHIELD, CENTER
70216-02401-049	OH	GUNNERS WINDOW
70216-02401-050	OH	GUNNERS WINDOW
70216-02401-051	OH	GUNNERS WINDOW L/H
70216-02401-052	OH	GUNNERS WINDOW R/H
70216-02402-045	OH	WINDOW
70216-02402-049	OH	GUNNERS WINDOW (AFT)
70216-02402-050	OH	GUNNERS WINDOW (AFT)
70216-02402-051	OH	GUNNERS WINDOW
70216-02403-045	OH	WINDOW
70216-02405-045	OH	BRACKET
70216-02405-045	NS	BRACKET
70216-02405-046	OH	BRACKET
70216-02407-048	OH	HANGER, SLIDING DOOR
70216-02407-112	NE	SUPPORT ASSY
70216-02407-121	OH	WINDOW TRACK R/H

7021701003-061	OH	CREW DOOR, LH
70217-01004-045	NS	FITTING ASSY
70217-01004-047	NS	FITTING ASSY
70217-01005-107	SV	SHIM
70217-01005-108	SV	PLATE
70217-01010-044	OH	NOSE DOOR
70217-01010-045	OH	NOSE DOOR
70217-01024-105	NS	CHECK FITTING
70217-02501-005	OH	STEP
70217-02717-042	OH	SUPPORT
70217-02717-042	NS	SUPPORT
70217-02717-101	OH	SUPPORT
70217-02718-116	OH	LATCH
70217-02732-112	OH	SIDE PLATE, R/H
70219-01008-041	OH	LOWER AIRFRAME HINGE
70219-01023-041	OH	COVER ACCESS
70219-01023-042	OH	COVER ACCESS
70219-01023-042	OH	COVER ACCESS
70219-01041-041	OH	ABSORBER ASSY, VIB
70219-01045-102	NS	WEIGHT BALANCE
70219-01045-103	NS	WEIGHT BALANCE
70219-01045-104	NS	WEIGHT BALANCE
70219-02107-044	OH	VIBRATION ABSORBER
70219-02115-042	OH	VIBRATION ABSORBER
70219-02313-101	NS	"D" RING
70219-03013-104	SV	PLATE RH DOOR TRACK
70219-03013-116	NS	SHIM
70219-04200-049	NS	SUPPORT ASSY
70219-04200-056	AR	FAIRING ASSY, PYLON
70219-04200-056	AR	FAIRING ASSY, PYLON
70219-04300-053	OH	BRACKET ASSY, L/H UP
70219-04300-069	OH	FAIRING, LH
70219-04400-041	OH	COVER ASSY
70219-04500-041	OH	ACCESS DOOR L/H
70219-04500-042	OH	ACCESS DOOR RH
70219-06000-104	NS	SHIM
70219-06000-112	NS	SHIM
70219-42430-047	NS	STRUCTURAL ASSY, SUPPORT
70219-42430-049	OH	SUPPORT STRUT
70219-42430-049	OH	SUPPORT STRUT
70250-01001-102	OH	MASTER CYLINDER
70250-01001-102	OH	MASTER CYLINDER
70250-01004-101	OH	VALVE ASSY
70250-01004-101	OH	VALVE ASSY
70250-01004-101	OH	VALVE ASSY
70250-01005-041	OH	BRACKET ASSY
70250-01053-044	OH	TUBE ASSY



70250-01053-049	OH	TUBE ASSY
70250-01053-058	OH	TUBE ASSY
70250-02301-101	OH	VALVE, SLAVE BRAKE
70250-12036-109	NS	PLATE, DATA
70250-12051-044	OH	STRUT, AIR-OIL
70250-12053-102	OH	PIN, GROOVED
70250-12060-103	OH	WHEEL ASSY
70250-12060-103	OH	WHEEL ASSY
70250-12060-103	OH	WHEEL ASSY
70250-12097-101	OH	AXLE 'A' MODEL
70250-13006-103	OH	ACTUATOR, ELECTRO-MECH
70250-13006-103	NS	ACTUATOR, ELECTRO-MECH
70250-13006-103	OH	ACTUATOR, ELECTRO-MECH
70250-13025-102	NS	PLATE
70250-13103-041	OH	FORK ASSY, LANDING GEAR TAIL
70250-13103-041	OH	FORK ASSY, LANDING GEAR TAIL
70250-13122-041	OH	FORK, LANDING
70250-13770-101	OH	SPACERS
70250-22010-041	OH	DRAG BEAM/AXLE ASSY LH
70250-22010-042	OH	DRAG BEAM/AXLE ASSY RH
70250-22010-042	OH	DRAG BEAM/AXLE ASSY RH
70250-22010-042	OH	DRAG BEAM/AXLE ASSY RH
70250-22010-042	OH	DRAG BEAM/AXLE ASSY RH
70250-22010-042	OH	DRAG BEAM/AXLE ASSY RH
70250-33900-001	OH	STRUT ASSY NLG
70301-01040-047	SV	QUADRANT COVERS
70301-01040-047	SV	QUADRANT COVERS
70301-01040-047	SV	QUADRANT COVERS
70301-01040-047	SV	QUADRANT COVERS
70301-01040-047	SV	QUADRANT COVERS
70301-01040-047	SV	QUADRANT COVERS
70301-01040-047	SV	QUADRANT COVERS
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-01042-041	OH	QUADRANT CENTER
70301-02101-102	OH	BELLCRANK
70301-02109-101	SV	SERVO ASSY
70301-02109-102	OH	SPEED CONTROL
70301-02115-102	OH	ADAPTER
70302-02137-102	OH	SUPPORT

70302-02147-041	OH	FITTING ASSY, ENG COWL
70302-02157-041	OH	FITTING ASSY, ENG COWL
70302-02157-042	OH	FITTING ASSY, ENGINE
70302-02157-042	OH	FITTING ASSY, ENGINE
70302-02157-101	OH	FITTING ENGINE COWL
70302-10013-118	NS	SEAL
70303-03023-045	OH	HEAT SHEILD ASSY
70303-03029-044	OH	SUPPORT STRUCTURAL
70303-03029-044	OH	SUPPORT STRUCTURAL
70303-03201-041	OH	FIRE WALL SECTION
70303-03201-041	OH	FIRE WALL SECTION
70304-02115-160	OH	FIREWALL
70304-02116-016	OH	FIREWALL INSTL EXH
70304-02200-011	OH	FIREWALL INSTL LONGITUDINAL LH
70304-02200-012	OH	FIREWALL INSTL LONGITUDINAL RH
70305-02110-043	OH	INBD FITTING
70305-02111-042	OH	BRACKET
70305-02111-043	OH	BRACKET ASSY
70305-02115-103	OH	AFT ENG MOUNT
70305-02115-103	NS	AFT ENG MOUNT
70306-007102-105	OH	ENGINE START VALVE
70306-03005-101	OH	VALVE ASSY
70306-03007-101	OH	VALVE
70306-10012-107	OH	VALVE, REGULATOR
70306-10012-107	OH	VALVE, REGULATOR
70306-10012-107	OH	VALVE, REGULATOR
70306-10012-107	OH	VALVE, REGULATOR
70306-12102-105	OH	ENGINE START VAVLE
70306-23102-041	OH	DUCT ASSY UNIT
70307-02116-101	NS	BRACKET
70307-03004-109	OH	SIGNAL CON. FUEL QTY
70307-03004-110	OH	LOW LEVEL WARNING
70307-03006-103	NE	VALVE, BREAKAWAY
70307-03015-101	SV	FLANGE, BREAKAWAY
70307-03024-101	OH	SOLENOID VALVE
70307-03025-101	OH	CHECK VALVE
70307-03026-101	NE	VALVE, FUEL/DEFUEL
70307-03031-104	OH	VALVE VENT
70307-03036-043	OH	PLATE ASSY, FUEL
70307-03036-049	OH	PLATE
70307-03042-050	SV	TUBE ASSY, FIRE EXTINGUISHER
70307-03042-066	OH	TUBE ASSY
70307-03042-076	OH	TUBE ASSY DRAIN
70307-23023-1083	OH	BRACKET
70307-23908-101	OH	PUMP DUMP FUEL SYSTEM
70307-42418-101	SV	ADAPTER
70307-42418-103	NS	SPACER

70307-42800-102	OH	VALVE, SOLENOID
70307-42803-101	AR	VALVE, SELF SEAL
70307-42804-101	OH	CAP & HALF ASSY
70307-42804-101	NE	CAP & HALF ASSY
70307-42804-102	SV	CAP ASSY QUICK DISC
70308-03008-043	OH	DUCT EXHAUST ASSY, LH
70308-03008-044	OH	PIPE, EXHAUST
70308-03008-047	OH	DUCT EXHAUST ASSY, L/H
70308-03008-047	OH	DUCT EXHAUST ASSY, L/H
70308-03008-048	OH	PIPE, EXHAUST
70308-03010-041	OH	BULKHEAD ASSY, EXHAUST FAIRING LH
70308-03010-041	OH	BULKHEAD ASSY, EXHAUST FAIRING LH
70308-03010-042	OH	BULKHEAD ASSY. E EXHAUST FAIRING RH
70308-03012-041	OH	SKIN ASSY, FAIRING LH
70308-03012-041	OH	SKIN ASSY, FAIRING LH
70308-03012-042	OH	SKIN ASSY, FAIRING RH
70308-03017-043	OH	FAIRING LH
70308-03017-043	OH	FAIRING LH
70308-03603-044	OH	FAIRING PANEL
70308-03603-103	OH	PANEL
70308-03603-104	OH	PANEL
70308-03603-110	OH	FAIRING LH
70308-03603-111	OH	FAIRING RH
70308-03603-547	NE	PANEL
70308-03607-041	OH	DUCT ASSY
70308-03607-101	OH	DUCT
70308-03608-101	OH	DUCT
70308-03611-041	OH	EXTNDR ASSY LH
70308-03612-043	OH	FAIRING ASSY L/H
70308-03612-104	NS	FAIRING
70308-03613-043	OH	ANGLE ASSY
70308-03613-044	OH	ANGLE ASSY
70308-03801-114	OH	PIPE, EXHAUST
70308-03801-114	OH	PIPE, EXHAUST
70308-03801-114	OH	PIPE, EXHAUST
70308-03801-115	OH	BULK HEAD, AIRCRAFT LH
70308-03801-116	OH	BULKHEAD RH
70308-03801-125	OH	BAFFLE, AIRFLOW
70308-63612-044	NE	COLLINGS
70309-02106-101	OH	FAN, AXIAL FLOW
70309-02113-102	OH	TEMP SENSOR
70309-23800-101	OH	VALVE TEMP CONTROL
70309-23903-101	NS	COUPLING
70309-23905-101	OH	VALVE ASSY
70-32	SV	SENDER/FUEL GAUGE
70351-05020-101	NE	SHIM
70351-08001-049	OH	INPUT MODULE ASSY

70351-08022-102	OH	ADAPTOR
70351-08080-043	OH	MODULE-ACCESSORY, MGB
70351-08164-103	SV	DIP STICK, GAUGE
70351-08227-041	OH	SWASHPLATE, GUIDE
70351-08249-103	NE	CHIP DETECTOR
70351-28159-101	OH	SHAFT ROTOR BRAKE
70351-28501-102	OH	DISK, ROTOR BRAKE
70351-28501-103	OH	HOUSING HALF
70351-38065-042	NS	TUBE ASSY
70351-38108-101	NS	SPACER PLATE
70351-38801-101	OH	FILTER BODY, FLUID
70357-00303-102	OH	HOUSING ASSY IGB
70357-00303-102	OH	HOUSING ASSY IGB
70357-06116-101	OH	D/S FLANGE, COUPLING
70357-06116-102	OH	FLANGE, DRIVE SHAFT
70357-06116-102	OH	FLANGE, DRIVE SHAFT
70357-06303-041	OH	HOUSING ASSY
70357-06304-041	OH	HOUSING ASSY
70357-06304-041	OH	HOUSING ASSY
70357-06310	OH	SPIRAL ASSY
70357-06321-102	NS	SHIM, OUTPUT
70357-38466-101	NE	FITTING
70358-06324-102	OH	NUT, PLAIN, ROUND
70358-06330-101	NS	NUT
70358-06600-046	OH	GEAR BOX, TAIL ROTOR
70358-06609-042	OH	HOUSING AND LINER ASSY
70358-06612-042	OH	PLATE ASSY, T/R
70358-06612-102	OH	PLATE, TAIL ROTOR
70361-03001-046	OH	SUB ASSY
70361-03004-102	OH	HEAT EXCHANGER
70361-03005-105	OH	AXIAL FLOW FAN
70361-03006-049	OH	DUCT ASSY
70361-03009-045	OH	SHAFT ASSY, FAN
70361-05001-049	OH	DRIVE SHAFT
70361-05001-052	OH	SHAFT ASSY, DRIVE
70361-05001-052	OH	SHAFT ASSY, DRIVE
70361-05005-102	OH	SHAFT ASSY, FAN
70361-05060-011	OH	TAIL ROTOR D/S
70361-05061-041	OH	BEARING HOUSING
70361-05061-102	OH	HOUSING, TAIL SUPPORT
70361-05062-101	OH	RING
70361-06002-044	OH	DRIVE SHAFT
70361-06002-048	OH	SHAFT ASSY, DRIVE
70361-10003-043	OH	TUBE ASSY, SUPPORT
70361-10003-043	OH	TUBE ASSY, SUPPORT
70361-10003-043	OH	TUBE ASSY, SUPPORT
70361-10005-101	OH	FLANGE

70361-65061-101	OH	BEARING HANGER
704.A.47612.061	OH	TRIPLE TACH
70400-00641-117	OH	ACTUATOR
70400-01201-043	OH	YOKE & HOUSING, CO-PILOT
70400-01201-044	OH	YOKE & HOUSING ASSY, PILOT
70400-01208-045	OH	YOKE ASSY
70400-01210-041	OH	BELLCRANK
70400-01210-042	OH	BELLCRANK, LATERAL RH
70400-01212-042	OH	BELLCRANK, LONGITUDINAL
70400-01213-043	OH	SUPPORT, LATERAL LH
70400-01213-044	OH	SUPPORT HOSE, LATERAL
70400-01226-041	OH	STICK ASSY, CYCLIC
70400-01250-041	OH	CONNECT LINK
70400-01250-042	OH	CONNECT LINK
70400-01250-043	OH	CONNECTING LINK
70400-01250-052	OH	CONNECTING LINK
70400-01260-102	OH	GRIP ASSY
70400-01401-066	OH	COLLECTIVE STICK, PILOTS
70400-01401-066	OH	COLLECTIVE STICK, PILOTS
70400-01402-059	OH	COLLECTIVE STICK, COPILOTS
70400-01404-042	OH	SUPPORT ASSY
70400-01405-103	OH	COLLECTIVE GRIP PILOT
70400-01405-104	OH	COLLECTIVE GRIP PILOT
70400-01411-043	OH	SOCKET ASSY
70400-01412-042	OH	BELLCRANK, COLLECT
70400-01413-042	OH	BELLCRANK
70400-01414-042	OH	SUPPORT HOSE, COLLECTIVE
70400-01418-043	OH	SUPPORT, COLLECTIVE
70400-01419-041	OH	BRACKE, COLLECTIVE RH
70400-01420-043	OH	TUBE ASSY, COPILOT COLLECTIVE
70400-01421-043	OH	TUBE, COLLECTIVE
70400-01433-053	NS	COVER ASSY
70400-01612-101	OH	SUPPORT
70400-01614-043	OH	CONNECTING LINK, RIG
70400-01615-042	OH	SUPPORT ASSY
70400-01620-106	OH	ACTUATOR TRIM R/H
70400-02101-013	OH	BELLCRANK ASSY, LH
70400-02108-043	OH	TORQUE SHAFT
70400-02108-044	OH	TORQUE SHAFT
70400-02108-050	OH	SHAFT ASSY, CAM
70400-02118-101	OH	BRACKET
70400-02123-042	OH	LEVER
70400-02126-044	OH	LEVER
70400-02128-046	OH	SUPPORT
70400-02135-104	OH	SPACER
70400-02139-109	OH	BRACKET ASSY, BALANCE SPRING
70400-02175-105	OH	SUPPORT

70400-02200-106	SV	PBA ACTUATOR
70400-02200-106	OH	PBA ACTUATOR
70400-02200-106	RP	PBA ACTUATOR
70400-02200-107	OH	LINEAR PITCH CONTROL
70400-02200-108	OH	PBA ACTUATOR
70400-02250-130	OH	CONNECTING LINK
70400-02252-120	OH	CONNECTING LINK
70400-02252-132	OH	CONNECTING LINK
70400-02252-133	OH	CONNECTING LINK
70400-02257-101	OH	CLEVIS
70400-02259-102	OH	FITTING/ BRACKET
70400-02260-111	OH	TRIM SERVO ROLL
70400-02260-116	OH	TRIM SERVO ROLL
70400-02261-101	OH	BRACKET
70400-02263-102	OH	BRACKET, LONGITUDINAL RIGGING
70400-02270-048	OH	LINK ASSY
70400-02300-044	OH	MIXING UNIT ASSY
70400-02501-045	OH	BELLCRANK CONTROL, RH
70400-02501-045	OH	BELLCRANK CONTROL, RH
70400-02502-044	OH	BELLCRANK, LATERAL LH
70400-02502-045	OH	BELLCRANK, LATERAL RH
70400-02503-044	OH	BELLCRANK, LONGITUDINAL RH
70400-02504-043	OH	BELLCRANK COLLECTIVE
70400-02622-043	OH	ROD ASSY, DIRECTIONAL
70400-02622-048	OH	ROD ASSY, DIRECTIONAL CONTROL
70400-03610-054	NE	GUARD ASSY
70400-06100-042	OH	SHAFT, PITCH CHANGE
70400-06641-117	OH	ACTUATOR
70400-06641-117	OH	ACTUATOR
70400-06641-117	OH	ACTUATOR
70400-06641-117	OH	ACTUATOR
70400-06660-045	OH	BUNGEE SPRING
70400-06661-104	NE	WASHER
70400-06698-047	OH	ROD ASSY
70400-06712-042	OH	SENSOR ASSY
70400-06719-101	NE	ROD END
70400-08101-046	OH	BELLCRANK ASSY
70400-08107-110	NS	BUSHING
70400-08107-110	NS	BUSHING
70400-08111-042	OH	TIE ROD ASSY
70400-08112-045	OH	SUPPORT
70400-08114-51	OH	RIGHT TIE ROD ASSY
70400-08115-046	OH	TIE ROD ASSY
70400-08116-048	OH	SUPPORT ASSY, BELLCRANK
70400-08118-108	NE	BUSHING
70400-21613-042	OH	ADJUSTER, PEDAL
70400-21613-043	OH	ADJUSTER, PEDAL

70400-21613-044	OH	ADJUSTER, PEDAL ASSY
70400-21621-045	OH	COVER
70400-31621-045	OH	COVER
70410-02757-107	OH	SERVO PLATE
70410-02760-047	SV	ACTUATOR ASSY, TRIM TAB, PITCH
70410-02760-047	OH	ACTUATOR ASSY, TRIM TAB, PITCH
70410-02760-047	SV	ACTUATOR ASSY, TRIM TAB, PITCH
70410-02820-054	OH	MAIN ROTOR SERVO
70410-02820-054	OH	MAIN ROTOR SERVO
70410-02920-053	OH	SERVO ASSY-BOOST
70410-02920-053	OH	SERVO ASSY-BOOST
70410-06520-044	OH	SERVO, TAIL ROTOR
70410-06520-046	OH	SERVO, TAIL ROTOR
70450-01010-035	OH	CONSEL ASSY
70450-01040-112	OH	IND, VERTICAL SITUATION
70450-01040-113	OH	IND, HORIZONTAL SITUATION
70450-01043-121	OH	PILOT DISPLAY UNIT
70450-01043-121	OH	PILOT DISPLAY UNIT
70450-01053-105	OH	SWITCH POSITION LIMI
70450-01053-105	OH	SWITCH POSITION LIMI
70450-01078-103	SV	SUPPORT
70450-01081-105	OH	AIR DATA TRANSDUCER
70450-01090-045	OH	MISC. SWITCH PANEL
70450-01903-101	OH	PLATE ASSY
70450-41901-102	AR	ACCELOMETER
7045M66G01	OH	HISTORY RECORDER
7045M66G01	OH	HISTORY RECORDER
704A33-220-010	OH	OIL COOLER
704A33633217	NE	THREAD ADAPTERS, L/H
704A33633218	NE	THREAD ADAPTERS, R/H
704A33-640-016	NE	ADAPTER
704A34-114-011F	NS	ROD END ASSY
704A-34-130-061-C	OH	CONTROL ASSY
704A34-130-079A	SV	CABLE ASSY.
704A-34-130-079-A	OH	CONTROL ASSY
704A-34-130-087-C	OH	CONTROL ASSY
704A37-612-047	OH	INDICATOR, TACH
704A37721026D	OH	PRESSURE TRANSMITTER
704A44-2410-01	OH	SHOCK ABSORBER
704A44242004	OH	DAMPER, TAIL SKID
704A44-620-019	OH	FILTER ASSY FUEL
704A-47-612-047	OH	TACHOMETER
704A-47-707-101	OH	INSTRUMENT CLUSTER
704A47-730-007	OH	PITCH IND.
70500-01055-044	OH	VENT
70500-01152-015	OH	WING INSTL, COCKPIT ARMORED LH
70500-01152-015	OH	WING INSTL, COCKPIT ARMORED LH

70500-01152-016	OH	WING INSTL COCKPIT ARMORED RH
70500-01152-016	OH	WING INSTL COCKPIT ARMORED RH
70500-01152-093	OH	ARMORED WING ASSY, COCKPIT LH
70500-01152-093	OH	ARMORED WING ASSY, COCKPIT LH
70500-01152-094	OH	ARMORED WING ASSY, COCKPIT RH
70500-01153-045	OH	ARMORED WING PANEL AFT
70500-01153-045	OH	ARMORED WING PANEL AFT
70500-02057-082	OH	BRACKET/CLAMP
70500-02057-083	OH	PLENUM ASSY, CABIN HEAT
70500-02057-083	OH	PLENUM ASSY, CABIN HEAT
70500-02057-084	OH	PLENUM ASSY, CABIN HEAT
70500-02057-085	OH	PLENUM ASSY
70500-02058-054	NS	SHAFT ASSY
70500-02063-056	SV	BRACKET ASSY
70500-02070-042	OH	DRIP PAN ASSY
70500-02151-041	OH	SEAT COVER
70500-02151-041	OH	SEAT COVER
70500-02157-046	OH	ATTEN ASSY
70500-02160-063	OH	SUPPORT
70500-02160-101	SV	BRACKET
70500-02160-102	SV	RING
70500-02160-138	OH	SUPPORT
70500-02160-516	OH	TUBE
70500-03006-052	NS	PANEL ASSY RH
70500-03050-060	OH	PANEL ASSY
7050A	OH	VALVE, PRESS REG
70550-00800-103	NS	FILTER ADAPTER
70550-00800-104	NE	FILTER ADAPTER
70550-00800-107	NS	FILTER ADAPTER
70550-00800-109	NS	FILTER ADAPTER
70550-00801-103	NS	FILTER ADAPTER
70550-00801-107	NS	FILTER ADAPTER
70550-01008-042	OH	RADIO RETRANS
70550-01017-101	OH	DIMMING CONTROL
70550-01017-102	SV	DIMMING CONTROL
70550-01017-102	SV	DIMMING CONTROL
70550-01017-104	OH	TRANSFORMER
70550-01034-108	NS	CABLE CLAMP
70550-01080-042	OH	IBF CONTROL PANEL
70550-01102-106	OH	PNL INDICATOR RH
70550-01102-108	OH	PNL INDICATOR LH
70550-01107-107	OH	CAUTION ADVISORY PANEL
70550-01108-102	OH	PANEL, CPLTS MASTER WARNING
70550-01112-041	OH	UTILITY LIGHT BRACKET
70550-01115-101	OH	PLATE
70550-01115-101C	OH	PLATE
70550-01115-101C	OH	PLATE



70550-01115-101G	OH	PLATE
70550-01115-102	OH	PLATE
70550-01115-102C	OH	PLATE
70550-01115-102D	OH	PLATE
70550-01115-102E	OH	PLATE
70550-01115-102G	OH	PLATE
70550-01115-102H	OH	PLATE
70550-01115-103	OH	PLATE
70550-01115-103C	OH	PLATE
70550-01115-103C	OH	PLATE
70550-01115-103E	OH	PLATE
70550-01115-103G	OH	PLATE
70550-01115-103G	OH	PLATE
70550-01115-107	OH	PLATE
70550-01117-103	OH	DIMMING CONTROL
70550-01124-106	OH	ICING RATE METER, DE-ICE
70550-02024-103	OH	TEMPR. CONTROLLER
70550-02024-103	OH	TEMPR. CONTROLLER
70550-02024-104	SV	WINDSHIELD ANTI-ICE UNIT
70550-02027-104	OH	CONTACTOR
70550-02027-104	OH	CONTACTOR
70550-02027-104	NS	CONTACTOR
70550-02028-101	OH	CONTACTOR, MAGNETIC
70550-02031-110	OH	CONTROL, GENERATOR
70550-02102-049	AR	RELAY PANEL, RH
70550-02102-049	OH	RELAY PANEL, RH
70550-02105-050	AR	LEFT HAND RELAY PANEL
70550-02105-050	OH	LEFT HAND RELAY PANEL
70550-02126-108	OH	CONTROLLER, DE-ICE
70550-02127-104	OH	DISTRIBUTOR, BLADE DE-ICE
70550-02128-041	OH	SLIP RING ASSY
70550-02128-042	OH	SLIP RING ASSY
70550-02128-043	OH	SLIP RING ASSY
70550-02128-043	OH	SLIP RING ASSY
70550-02129-044	OH	T/R SLIP RING, DE-ICE
70550-02131-042	OH	JUNCTION BOX
70550-02131-051	OH	JUNCTION BOX
70550-02137-045	OH	AC/DC JCT BOX
70550-0246-106	OH	AC HYD MOTOR
70550-02804-101	OH	SLIP RING ASSY
70550-02804-103	OH	T/R DE-ICE ROTOR
70550-06102-108	NE	CABLE ASSY
70550-08800-101	SV	CABLE ASSY, DE-ICE
70551-01005-041	OH	L/H SHEILD ASSY
70551-01005-042	OH	R/H SHIELD ASSY
70551-02001-054	OH	BRACKET
70551-02001-128	OH	COVER

70552-02116-041	OH	POWER CABLE, M/R DE-ICE
70552-10101-101	OH	ENGINE HARNESS ASSY
70553-01007-105	OH	SEARCHLIGHT
70553-01007-105	NS	SEARCHLIGHT
70553-01007-105	NS	SEARCHLIGHT
70553-01007-105	NS	SEARCHLIGHT
70553-01007-105	NS	SEARCHLIGHT
70553-01007-105	NS	SEARCHLIGHT
70553-01008-102	OH	COCKPIT FLOOD LIGHT
70553-01104-102	OH	LANDING LIGHT ASSY
70562-02251-057	OH	TUBE
70600-01019-104	OH	PANEL
70600-01038-104	OH	CISP MOUNTING RACK
70600-01441-041	OH	ANGLE ASSY
70600-02004-045	OH	ICE-SWITCH BRACKET
70600-02010-103	OH	ANTENNA
70600-02011-103	OH	MARKER BEACON, ANTENNA
70600-05002-101	OH	ANTENNA, VOR
70600-06001-104	OH	FAIRING ANTENNA
70602-01114-043	OH	GLARE SHIELD HARNESS
70651-02710-102	OH	VALVE ASSY HYDRA AIR
70651-02710-102	OH	VALVE ASSY HYDRA AIR
70651-03201-102	OH	ACCUMULATOR
70651-03300-102	OH	VALVE ASSY
70651-03300-102	OH	VALVE ASSY
70651-03300-102	OH	VALVE ASSY
70651-21110-004	OH	MASTER CYLINDER
70652-02250-049	OH	TUBE ASSY
70652-02250-050	OH	TUBE ASSY
70652-02250-051	OH	TUBE
70652-02250-052	SV	TUBE ASSY
70652-02250-057	NS	TUBE ASSY
70652-02251-057	NS	TUBE ASSY
70652-02251-057	NS	TUBE ASSY
70652-02252-041	SV	TUBE
70652-02252-044	AR	TUBE ASSY
70652-02252-045	SV	TUBE ASSY
70652-02252-050	SV	TUBE
70652-02252-053	NS	TUBE ASSY
70652-02252-054	SV	TUBE ASSY
70652-02252-057	OH	TUBE ASSY
70652-02252-062	NS	TUBE ASSY
70652-02252-171	OH	TUBE ASSY
70652-02450-108	OH	VALVE
70652-02455-047	OH	TRANSFER MODULE ASSY
70652-06255-101	OH	COUPLING

70-6533-00	NE	PANEL ASSY
70662-06211-041	OH	T R TUBE
70737-23018-041	OH	ELBOW
707650-801	OH	RECEIVER TRANSMITTER
7080-186-01	OH	WASHER
70802-12215-040	OH	BASE PLATE
7084M83G02	OH	HISTORY RECORDER
7084M83G02	OH	HISTORY RECORDER
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
70850-02011-041	OH	SUPPORT ASSY
709001-102	OH	PANEL L/G CONTROL
70901-02907	OH	TRANS,IND AIRSPEED
709012-1	NE	LEVER
70902-01099-045	OH	CONTROL PANEL, DE-ICE
70902-01110-044	OH	FAULT MONITOR, DE-ICE
70902-01801-101	OH	PANEL ASSY
70902-01972-102	SV	PANEL ASSY
70902-01972-102	SV	PANEL ASSY
70902-01972-102	SV	PANEL ASSY
70902-22001-041	OH	STABILATOR AM
71117-1	OH	INDICATOR, PRESSURE
71-122-1	AR	FUEL TRANSMITTER
7112MT2N	NE	BACK UP RING
711311-132	SV	PRESSURE SWITCH
7-117700105-9	OH	TUBE ASSY, CONTROL
711D627G1	SV	REGULATOR, 12 VDC
7125-1	OH	GYRO,RATE XMIT
7125-1	OH	GYRO,RATE XMIT
7125-2	OH	RATE GYRO
7125-2	OH	RATE GYRO
713100-01	OH	INDICATOR/COMPUTER
7-1412268	NE	CAP, FILLER
71701-53	OH	INDICATOR, TEMP.
7204-1A-4-A1	OH	COURSE IND
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY

7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
7-211112067	NS	LEVER, RELEASE, CANOPY
72293-1	OH	PRESS SWITCH A/S
725725-5	OH	FUEL CONTROL
725725-5	OH	FUEL CONTROL
725725-6	OH	FUEL CONTROL
725725-6	OH	FUEL CONTROL
7265-35A	OH	RELAY
7301-12AF	OH	VALVE, BALL
730-6002	OH	THROTTLE GRIP
7-311172023	OH	PANEL ASSY., CONS.
7-311350014-7	OH	BRACKET
7-311642551	NS	FUEL TRANSFER LIGHT
732021-3	—	WASHER, FLAT
7329726-1	OH	MANIFOLD
7329726-1	OH	MANIFOLD
73340-8	OH	ANTI-ICING VALVE
7350721-7	NS	ISOLATOR ASSY
7-353-61	OH	VALVE
736-840080-1	OH	BOX ASSY, PMG SIGNAL COND. HEEL
73C65	OH	PUMP AND MOTOR
7410-DOS	OH	PANEL, C OVERHEAD CONSOLE
744206-3	SV	SUMP, OIL

744229-14	OH	ROTOR
744238-1	OH	DRIVE SHAFT
744238-1	SV	DRIVE SHAFT
744243-4	OH	DIFFUSER
744249-3	AR	SHIELD, HEAT
749012-2	SV	SEAT, SPRING
749013-2	SV	SEAT, SPRING
74D741249-101	OH	POWER SUPPLY
74D741249-101	OH	POWER SUPPLY
75-0074-213	OH	ADVISORY PANEL
75-0074-213	OH	ADVISORY PANEL
75-0074-217	OH	ADVISORY PANEL
75-0074-217	OH	ADVISORY PANEL
75-0285-13	OH	PANEL ASSY
75-0285-3	OH	CAUTION PANEL ASSY
7509-0100-1	OH	COUPLER
7513000-902	OH	CLR DLY CONTROL HEAD
7514-5013	NS	LE162-00025013
7514-5013A	NS	LINK, CONNECTING
75-258V2M1	OH	COMPUTER
75-258V2M1	OH	COMPUTER
753355-5	OH	HEAT EXCHANGER
75-4001	OH	MIRROR
754661-4	OH	CABIN TEMP CONTR.
754751-2	NE	VALVE ASSY, ANTI-ICE
754751-2	OH	VALVE ASSY, ANTI-ICE
754-800-4	SV	CONTROL/UNIT
754836-3	SV	CONTROL/NAV
754920-1	SV	RNAV
7549-30-1	SV	RECEIVER-NAV
7549-401	SV	R/NAV
7587-9-14-5	OH	BUSHING
7592-175-00-12X	OH	CONTROLLER
75B6-7-11	OH	BUSHING,SLEEVE
75B8-12-16	OH	BUSHING, SLEEVE
75B8-12-24	OH	BUSHING
7600-00191-101	OH	QUADRANT FORWARD
76000-02000-041	AR	TAIL BOOM
76000-04000-041	OH	TAIL BOOM
76000-04000-041	AR	TAIL BOOM
76000-05100-043	NS	SHAFT PITCH CONTROL
7600-03014-121	OH	ANGLE
76010-00105-106	NE	DECAL
76070-10005-011	NE	KIT
76070-10005-012	NE	KIT
76070-20005-042	NE	ROD
76070-20005-042	NE	ROD

76070-20005-042	NE	ROD
76070-20005-042	NE	ROD
76070-20005-042	NE	ROD
76070-20005-043	NE	SUPPORT ASSY
76070-20005-043	NE	SUPPORT ASSY
76070-20005-101	NE	BRACKET L/H
76070-20005-101	NE	BRACKET L/H
76070-20005-102	NE	BRACKET
76070-20005-102	NE	BRACKET
76070-20005-102	NE	BRACKET
76070-20005-112	NE	PIN
76070-20005-112	NE	PIN
76070-20005-112	NE	PIN
76070-20005-112	NE	PIN
76070-20005-113	NS	BEAM
76070-20005-113	NS	BEAM
76070-20005-113	NS	BEAM
76070-20005-114	NE	ANGLE
76070-20006-041	SV	MOUNT
76070-20008-041	NE	HONEY COMB ASSY
76070-20008-042	NE	INSERT ASSY
76070-20009-012	NE	KIT
76070-20015-101	NE	DOUBLER
76070-20016-011	OH	KIT
76070-20020-043	NE	FITTING, RETENTION
76070-20020-044	NE	FITTING, RETENTION
76070-20025-013	NE	KIT
76070-20025-014	NE	KIT
76070-20025-015	NE	KIT
76070-20025-101	NE	COVER
76070-20025-102	NE	COVER
76070-20025-104	NE	DOUBLER
76070-20025-104	NE	DOUBLER
76070-20025-105	NE	DOUBLER
76070-20025-105	NE	DOUBLER
76070-20025-106	NE	DOUBLER
76070-20025-106	NE	DOUBLER
76070-20028-101	NE	COVER
76070-20028-103	NE	DOUBLER
76070-20030-012	NE	KIT
76070-20031-011	NE	KIT/DUCT & HEADLINER
76070-20034-011	NE	CAMLOCK SEAL
76070-20035-011	NE	DRIP PIN
76070-20042-011	NE	SEAL
76070-20044-011	NE	KIT
76070-20047-054	OH	DOOR ASSY
76070-20055-041	OH	ADAPTER ASSY

76070-20057-041	OH	FIREWALL ASSY
76070-20057-041	OH	FIREWALL ASSY
76070-20057-042	OH	FIREWALL
76070-20057-042	OH	FIREWALL
76070-20057-044	OH	FIREWALL ASSY
76070-20057-047	OH	FIREWALL ASSY
76070-20066-044	OH	FIN, TAIL
76070-20078-011	NE	KIT, RETROFIT
76070-20078-013	NE	KIT, RETROFIT
76070-20084-012	NE	KIT/SLIDING RH
76070-20092-103	OH	FAIRING
76070-20092-104	OH	FAIRING
76070-25007-011	NE	KIT
76070-30005-011	NE	KIT
76070-30016-012	NE	TUBE ASSY/LUBE VENT
76070-30018-050	OH	STRUT ASSY
76070-30019-105	OH	CLAMP
76070-30024-102	NE	GASKET
76070-30025-011	NE	KIT, MOD
76070-30031-043	OH	CENTER FIREWALL
76070-30031-047	OH	FIREWALL
76070-30031-047	OH	FIREWALL
76070-30031-048	OH	CENTER F/WALL ASSY
76070-30031-048	OH	CENTER F/WALL ASSY
76070-30031-056	OH	CHANNEL ASSY
76070-30057-048	OH	FIREWALL
76070-30515-064	OH	EJECTOR ASSY
76070-30515-065	OH	EJECTOR ASSY
76070-30515-066	OH	EJECTOR ASSY
76070-35046-103	OH	BRACKET
76070-40002-101	NE	BRACKET
76070-40005-011	NE	KIT, RETROFIT
76070-55002-012	OH	PALLET INSTL
76070-55002-041	OH	PALLET ASSY
76070-55002-041	OH	PALLET ASSY
76070-55003-041	NE	STRIP
76070-55004-011	NE	KIT/WIRING MOD
76070-55008-011	NE	KIT/#2 RELAY PNL
76070-55010-011	NE	KIT RED HOIST
76070-55018-011	NE	KIT/MOD CONTROL PNL
76070-55019-011	NE	KIT/HARNESS EXTERIOR
76070-55023-011	NE	KIT/ROTOR BRAKE ELEC
76070-55027-011	SV	PBA KIT
76070-55035-011	NE	KIT
76070-55046-045	SV	JUNCT.BOX/AUX POWER
76070-60001-041	NE	KIT, 76-23-2
76070-65008-011	NE	KIT

76072-15001-016	NE	KIT, BLADE REPAIR
76072-15001-017	NE	PLUG
76072-15001-030	NE	KIT, BLADE REPAIR
76076-20035-104	NE	GASKET
76076-55021-041	NE	BRACKET
76076-55021-041	OH	BRACKET
76076-55021-106	OH	SWEEP
76076-55026-041	NE	RELAY BRACKET
76076-60035-050	OH	SHELF ASSY
76076-60035-051	OH	SHELF ASSY
76076-60035-054	OH	SHELF ASSY
76076-60035-054	OH	SHELF ASSY
76076-60035-055	OH	SHELF ASSY
76076-60035-129	OH	BRACKET
76076-60035-130	OH	BRACKET
76076-65003-011	NE	VALVE, SHUTOFF
76078-60035-048	OH	PANEL ASSY
76080-15002-011	NE	KIT
76080-20038-041	OH	ROD ASSY
76080-20038-103	OH	FITTING
76080-20038-104	NE	ROD
76080-20039-045	OH	BELLCRANK
76080-20039-122	NE	SPRING
76080-20039-130	NE	ZEE BRACKET
76080-20039-137	NE	SPRING
76080-20039-147	NE	CAM
76080-20041-107	NE	BRACKET
76080-20052-106	NE	PLATE
76080-20052-110	NE	PLATE
76080-30008-011	OH	KIT, SNOW PROTECTION
76080-30009-047	OH	BRACKET
76080-30009-048	OH	FORWARD BRACKET
76080-30501-103	OH	DUCT
76080-55005-042	NE	PLATE ASSY
76080-55005-053	OH	CLUSTER ASSY
76080-55005-103	NE	BRACKET
76088-20016-051	NE	LEVER ASSY
76088-20016-051	NE	LEVER ASSY
76088-20016-051	NE	LEVER ASSY
76088-20016-106	OH	BELLCRANK
76088-20016-107	OH	ROD
76088-20016-107	NE	ROD
76088-20016-107	NE	ROD
76088-20016-107	NE	ROD
76088-20020-042	OH	ROD ASSEMBLY
76088-20041-041	SV	CABLE ASSY
76088-45034-043	OH	PANEL ASSY



76088-45082 041	SV	PANEL, CONTROL
76088-50061-041	OH	PANEL ASSY
76088-50077-102	OH	PANEL ASSY
76088-50087-105	OH	BRACKET
76088-55005-053	OH	PANEL ASSY
76088-61043-050	SV	PANEL, CONTROL
76088-61043-051	SV	SELECTOR PANEL
7609-37-D5-2	OH	XMTR, PRESSURE HYD
7609-37M5-2	OH	XMTR, HYD PRESS
76101-05001-044	OH	PADDLE ASSY T/R
76101-05042-101	NE	CLIP
76101-05042-101	NE	CLIP
76101-05044-041	NE	BRACKET
76101-05044-041	NE	BRACKET
76101-05044-041	NE	BRACKET
76101-05044-041	NE	BRACKET
76101-05101-041	OH	PADDLE ASSY, T/R
76101-05101-041	OH	PADDLE ASSY, T/R
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08000-043	OH	CONTROL ROD ASSY
76101-08001-047	NE	ROD END ASSY
76101-08001-048	NE	ROD END ASSY
76101-08004-103	OH	NUT
76101-08004-103	OH	NUT

76101-08004-104	OH	NUT
76102-05001-047	OH	PLATE ASSY
76102-05001-047	OH	PLATE ASSY
76102-05001-047	OH	PLATE ASSY
76102-08001-042	OH	CAM ASSY
76102-08011-048	OH	PITCH HORN
76102-08050-107	OH	WEIGHT
76102-08050-107	OH	WEIGHT
76102-08055-103	NS	SLEEVE STRAP
76103-05002-041	NS	ROD END ASSY, T/R
76103-05002-041	NS	ROD END ASSY, T/R
76103-05002-041	NS	ROD END ASSY, T/R
76103-05002-041	NE	ROD END ASSY, T/R
76103-05002-042	NS	ROD END ASSY, T/R
76103-05002-042	OH	ROD END ASSY, T/R
76103-05002-044	OH	ROD END ASSY, T/R
76103-05002-102	NE	ROD END
76103-05003-041	OH	PITCH ROD ASSY
76103-05003-041	NE	PITCH ROD ASSY
76103-05003-042	OH	PITCH ROD ASSY
76103-05003-042	NE	PITCH ROD ASSY
76103-05003-042	OH	PITCH ROD ASSY
76103-05003-042	NS	PITCH ROD ASSY
76103-05003-042	NS	PITCH ROD ASSY
76103-05003-042	NS	PITCH ROD ASSY
76103-05003-042	OH	PITCH ROD ASSY
76103-05003-042	OH	PITCH ROD ASSY
76103-05003-042	OH	PITCH ROD ASSY
76103-05003-042	OH	PITCH ROD ASSY
76103-05014-101	OH	RETAINING NUT
76103-05014-101	OH	RETAINING NUT
76103-05016-101	OH	LINK
76103-08005-101	NE	BUSHING
76103-08005-101	NE	BUSHING
76103-08005-101	NE	BUSHING
76103-08010-050	OH	M/R HUB
76103-08011-101	NE	WASHER
76103-08012-102	NE	BUSHING
76103-08012-103	NE	BUSHING
76103-08012-105	NE	BUSHING
76103-08013-101	NE	SPACER
76103-08014-101	NE	WEIGHT/BALANCE
76103-08014-102	SV	BRACKET
76104-00701-101	NE	BOLT
76104-08012-101	NE	LINER
76104-08014-101	OH	RETAINER
76104-08014-102	OH	RETAINER
76104-08015-102	NS	EXPANDABLE PIN

76104-08021-045	NE	LINK ASSY/UPPER
76104-08040-042	OH	SCISSORS ASSY, STATIONARY
76104-08043-041	OH	LINK ASSY-UPPER
76104-08048-041	OH	BRACKET ASSY
76104-08500-041	OH	SWASHPLATE ASSY
76104-08520-041	OH	SCISSORS ASSY, ROTATING
76104-08520-041	OH	SCISSORS ASSY, ROTATING
76105-08000-042	OH	STOP ASSY
76105-08000-042	OH	STOP ASSY
76105-08001-041	OH	CAM ASSY
76105-08003-101	NE	BUSHING
76105-08004-103	OH	DROOP STOP
76105-08005-101	NS	BUSHING
76105-08051-041	NE	CAM ASSY
76105-08054-103	NE	SPRING CLIP
76105-08062-101	NE	WASHER
76106-08000-049	OH	DAMPER, M/R
76106-08000-050	OH	M/R DAMPER ASSY
76106-08000-050	OH	M/R DAMPER ASSY
76106-08000-050	OH	M/R DAMPER ASSY
76106-08000-050	OH	M/R DAMPER ASSY
76106-08000-050	OH	M/R DAMPER ASSY
76106-08005-041	NS	CAP ASSY
76106-08005-101	OH	COVER
76106-08016-102	NE	WASHER
76106-08016-103	NE	WASHER
76106-08105-101	SV	WEIGHT
76107-08001-045	OH	SUPPORT ASSY, LOWER
76107-08001-046	OH	SUPPORT ASSY, UPPER
76107-08001-046	OH	SUPPORT ASSY, UPPER
76107-08004-057	OH	WEIGHT ASSY, LOWER
76107-08004-058	OH	WEIGHT ASSY, UPPER
76107-08004-058	OH	WEIGHT ASSY, UPPER
76107-08004-058	OH	WEIGHT ASSY, UPPER
76107-08004-058	OH	WEIGHT ASSY, UPPER
76107-08004-107	OH	WEIGHT
76107-08004-117	OH	PLATE
76107-08004-118	OH	WEIGHT
76107-08006-137	NE	PIN
76107-08006-138	NE	PIN
76107-08007-104	OH	WASHERS
76107-08008-102	OH	SPACER
76107-08009-101	NE	BUSHING
76107-08100-041	OH	BIFILAR ASSY, LOWER
76107-08100-042	OH	BIFILAR ASSY
761110-1	OH	AFCS
761111-2	OH	YAW SLICE

761111-2	OH	YAW SLICE
761111-3	OH	YAW SLICE AMP.
761112-1	OH	PITCH SLICE
761112-2	OH	PITCH SLICE
761112-3	OH	PITCH SLICE
761113-1	OH	ROLL SLICE
761113-1	OH	ROLL SLICE
761113-2	OH	ROLL SLICE
761113-3	OH	ROLL SLICE
761115-1	SV	COVER ASSY
761115-2	SV	COVER ASSY
76150-09012-107	NE	BUSHING
76150-09030-105	NE	PLATE-TIP
76150-09034-103	NE	WASHER
76150-09124-041	NE	PLATE ASSY
76200-01001-055	NE	TUBE ASSY
76200-01001-056	NE	TUBE ASSY
76200-01001-230	NE	TUBE ASSY
76200-01001-401	SV	SKIM WIPER
76200-01006-012	OH	FLEXIBLE DRIVESHAFT
76200-01007-044	NE	TUBE ASSY
76200-01007-046	OH	RESOVOIR,WINDSHIELD
76200-01007-046	OH	RESOVOIR,WINDSHIELD
76200-01011-104	OH	GEARCASE, WINDSHIELD WIPER
76200-01011-104	OH	GEARCASE, WINDSHIELD WIPER
76200-01011-104	OH	GEARCASE, WINDSHIELD WIPER
76200-01012-101	NE	HOUSING
76200-01012-112	NE	TUBE
76200-01901-104	OH	WIPER BLADE
76200-01901-105	OH	ARM DRIVE
76200-03002-107	NE	SUPPORT
76200-06000-048	OH	STABILIZER, HORIZ
76200-06000-060	NE	CONTAINER ASSY
76200-06000-064	NE	ROD ASSY
76200-06000-152	NE	LINER
76200-06002-043	NE	CONTAINER ASSY
76201-01003-101	OH	TUBE ASSY
76201-02005-543	OH	PANEL, LH
76201-02005-544	OH	PANEL, RH
76201-02015-101	OH	PANEL ASSY
76201-03005-016	OH	STRIKER ASSY
76201-03017-041	OH	TUBE ASSY
76201-08001-101	OH	FRAME ASSY
76201-08002-045	OH	FRAME
76201-08002-101	OH	COVER
76201-23008-056	NS	BRACKET ASSY
76202-02002-045	OH	PANEL ASSY

76202-02002-046	OH	COVER ASSY
76202-02002-069	SV	SUPPORT ASSY
76202-02002-079	OH	PLATE ASSY
76202-02005-115	OH	FILLER
76202-02012-050	SV	PAD, SUMP
76202-02012-050	SV	PAD, SUMP
76202-02012-052	OH	PAD, SUMP
76202-02012-054	OH	PAD, SUMP
76202-02012-056	OH	SUMP PAD
76202-02012-057	OH	PAD, SUMP
76202-02012-058	SV	PAD ASSY, SUMP RH
76202-02012-059	SV	SUMP PAD
76202-02012-060	OH	SUMP PAD ASSY
76202-02012-061	OH	SUMP ASSY
76202-02012-061	OH	SUMP ASSY
76202-02012-061	OH	SUMP ASSY
76202-02012-062	OH	PAD, SUMP
76202-04004-042	NE	STRINGER R/H
76202-04014-101	OH	COVER
76202-04014-102	OH	COVER
76203-02006-045	OH	PANEL ASSY
76203-03003-130	NS	WINDOW
76203-03014-047	OH	SHROUD
76203-03014-055	OH	SHROUD
76203-03014-106	OH	SHROUD
76203-03014-107	OH	SHROUD LH
76203-03014-108	OH	SHROUD RH
76203-03014-112	OH	SHROUD
76203-03021-041	OH	PANEL
76203-03021-042	OH	PANEL
76203-03021-103	OH	PANEL
76203-03022-014	OH	PANEL
76203-03022-042	OH	PANEL
76203-03022-102	OH	COVER, RH
76203-04000-124	NE	TRIM PLATE
76203-04000-125	NE	TRIM
76203-05002-048	OH	TAIL FIN, RH
76203-05002-049	OH	TAIL FIN SKIN
76203-05002-051	OH	FIN, TRAILING EDGE
76204-02002-043	OH	FLOOR PANEL
76204-02002-049	OH	FLOOR PANEL
76204-02002-050	OH	PANEL ASSY
76204-02002-051	SV	FLOOR PANEL ASSY
76204-02002-052	SV	FLOOR PANEL ASSY
76204-02005-041	SV	PANEL ASSY
76204-02005-042	OH	PANEL ASSY R/H
76204-02005-043	OH	COVER

76204-02005-043	OH	COVER
76204-02005-043	OH	COVER
76204-02005-043	OH	COVER
76204-02005-044	OH	PANEL ASSY
76204-02005-044	OH	PANEL ASSY
76204-02005-044	OH	PANEL ASSY
76204-02006-047	OH	PANEL ASSY
76204-02006-048	OH	PANEL, FLOOR R/H
76204-02007-042	SV	PANEL ASSY
76204-02021-041	OH	PANEL ASSY
76204-03001-150	NE	CHANNEL
76204-03001-151	NE	CHANNEL, RH
76205-04001-011	OH	COVER ASSY
76205-04001-041	OH	COVER ASSY
76205-04001-042	OH	COVER ASSY
76205-04002-041	OH	FAIRING ASSY
76205-04002-041	OH	FAIRING ASSY
76205-04004-041	OH	DUCT ECU EXHAUST
76205-04004-042	SV	PANEL ASSY
76205-05002-045	OH	FAIRING ASSY, TAIL
76205-08001-048	OH	DOOR ASSY
76205-08001-068	OH	FAIRING ASSY RH
76205-08001-069	OH	TRANSMISSION COWL.
76205-08001-071	SV	COWLING, TRANS. FWD
76205-08001-071	OH	COWLING, TRANS. FWD
76205-10001-046	OH	NOSE CONE
76206-01001-101	OH	WINDSHIELD GLASS
76206-01001-111	NE	WINDSHIELD
76206-01001-111	SV	WINDSHIELD
76206-01001-111	OH	WINDSHIELD
76206-01001-112	OH	WINDSHIELD
76206-01001-112	SV	WINDSHIELD
76206-10001-050	SV	WINDOW, OPENABLE
76206-10001-106	NE	STOP
76207-01009-141	OH	ESCUTCHEON LH
76207-02002-011	OH	DOOR ASSY
76207-02002-011	OH	DOOR ASSY
76207-02002-012	OH	DOOR ASSY
76207-02002-012	OH	DOOR ASSY
76207-02002-043	OH	PANEL ASSY
76207-02002-043	OH	PANEL ASSY
76207-02002-043	OH	PANEL ASSY
76207-02002-044	OH	PANEL ASSY
76207-02002-044	OH	PANEL ASSY
76207-02002-051	OH	DOOR ASSY
76207-02002-051	OH	DOOR ASSY
76207-02002-051	OH	DOOR ASSY

76207-02002-052	OH	DOOR ASSY
76207-03002-011	NE	DOOR INSTALL
76207-03002-041	OH	DOOR ASSY
76207-03002-041	OH	DOOR ASSY
76207-03002-043	OH	DOOR ASSY
76207-03002-043	OH	DOOR ASSY
76207-03002-104	NE	COVER
76207-03010-048	OH	DOOR ASSY
76207-03011-142	OH	PANEL
76207-03017-042	OH	LOWER DOOR SILL
76207-03019-102	OH	COVER
76207-03020-101	NE	BASE PLATE
76207-03020-104	OH	FITTING
76207-03022-101	NE	CLIP
76207-03022-102	NE	CLIP
76207-03023-041	NE	WEDGE
76207-03023-101	NE	WEDGE
76207-03023-106	NE	PLATE
76207-03024-041	NE	BRACKET
76207-03024-043	NE	HANDLE ASSY
76207-03025-101	NE	DOOR FITTING
76207-03025-102	NE	DOOR FITTING ASSY
76207-04001-041	OH	PANEL ASSY
76207-10002-049	OH	STRICKER ASSY
76207-10002-050	OH	STRIKER ASSY
76207-10002-103	NE	INTERCOSTAL
76207-10002-111	OH	DOOR, CREW LH
76207-10002-127	OH	COVER
76207-10002-128	OH	COVER
76207-10004-051	OH	BAY DOOR
76207-10004-058	OH	DOOR ASSY LH
76207-10004-059	OH	DOOR ASSY
76207-10004-069	OH	DOOR ASSY LH
76207-10004-069	OH	DOOR ASSY LH
76207-10004-130	NE	SEAL
76207-10004-134	NE	RETAINER PLATE
76207-10005-045	OH	DOOR ASSY
76207-10005-045	OH	DOOR ASSY
76207-10005-045	OH	DOOR ASSY
76207-10005-046	OH	DOOR ASSY
76207-10005-046	OH	DOOR ASSY
76207-10005-046	OH	DOOR ASSY
76207-10005-107	NE	BRACKET LH
76207-10005-108	NE	CABLE RH
76207-10009-014	OH	DOOR ASSY
76207-10009-055	OH	MECHANISM ASSY
76207-10009-061	SV	HANDLE ASSY

76207-10009-062	SV	HANDLE ASSY
76207-10009-075	OH	ROD
76207-10009-081	OH	DOOR ASSY
76207-10009-113	NE	DOUBLER
76207-10009-115	OH	BELLCRANK
76207-10009-127	OH	BEAM
76207-10009-150	OH	ROD
76207-10009-154	OH	LINK
76207-10009-187	OH	ROD
76207-10009-188	OH	ROD
76207-10009-193	OH	ROD
76207-10009-201	OH	PIN CREW DOOR
76207-10009-213	OH	PIN
76207-10106-042	OH	DOOR ASSY, MLG RH
76209-01001-043	OH	BRACKET ASSY
76209-01001-043	OH	BRACKET ASSY
76209-01001-044	OH	BRACKET ASSY
76209-01001-046	OH	BRACKET ASSY
76209-02019-043	NE	FITTING ASSY
76209-02019-043	OH	FITTING ASSY
76209-02019-043	OH	FITTING ASSY
76209-02019-044	OH	FITTING ASSY
76209-02019-044	OH	FITTING ASSY
76209-02019-045	OH	FITTING ASSY
76209-02019-045	OH	FITTING ASSY
76209-02019-045	OH	FITTING ASSY
76209-02019-045	OH	FITTING ASSY
76209-02019-048	OH	DOOR FITTING
76209-02020-052	AR	FITTING ASSY
76209-03003-042	OH	HINGE ASSY
76209-03003-043	OH	LWR HINGE ASSY
76209-03003-103	OH	HINGE
76209-03003-104	OH	HINGE
76209-03004-051	SV	FITTING ASSY
76209-03004-118	OH	PLATE
76209-03004-118	NE	PLATE
76209-03005-043	OH	LINK ASSY
76209-03005-044	OH	HINGE ASSY
76209-03006-041	NE	FITTING
76209-03014-102	OH	SPRING
76209-03014-103	OH	SPRING
76209-03015-045	OH	PIVOT ASSY
76209-03015-050	OH	ROD ASSY
76209-03015-051	OH	ROD ASSY
76209-03015-056	OH	CABLE ASSY
76209-03015-057	OH	ROD ASSY
76209-03015-058	OH	ROD ASSY



76209-03015-074	OH	CRANK ASSY
76209-03015-075	OH	PIN ASSY
76209-03015-115	OH	BELL CRANK
76209-03015-116	OH	IDLER
76209-03015-124	OH	CLIP
76209-03015-126	OH	STOP
76209-03015-128	OH	BELLCRANK
76209-03015-146	NE	PIN
76209-03015-148	NE	BELLCRANK RH
76209-03015-234	OH	PIN
76209-03017-115	OH	FITTING
76209-03024-052	NE	FITTING ASSY
76209-03024-052	NE	FITTING ASSY
76209-04004-042	OH	FITTING ASSY
76209-04004-042	OH	FITTING ASSY
76209-04004-045	OH	FITTING ASSY
76209-04004-045	OH	FITTING ASSY
76209-10001-042	OH	HINGE ASSY
76209-10001-043	OH	HINGE ASSY
76209-10002-044	OH	ROD ASSY
76209-10002-050	OH	LEVER
76209-10002-101	OH	LEVER
76209-10002-103	OH	LINK
76209-10002-109	NE	CRANK
76209-10002-110	NE	CRANK
76209-10002-130	OH	ROD
76209-10002-131	SV	BELLCRANK
76209-10002-132	SV	BELLCRANK
76209-10002-135	OH	ROD
76209-10009-051	OH	WELD ASSY
76209-10009-203	OH	LINK
76209-24004-043	OH	S76C FITTING
76210-02001-103	SV	SEAT ASSY
76210-02001-106	SV	SEAT ASSY
76210-02002-103	OH	DIVAN SEAT
76210-02002-103	OH	DIVAN SEAT
76210-02003-042	OH	CREW SEAT ASSY
76210-02003-101	OH	STOP ASSY
76210-02010-101	SV	SEAT ASSY
76210-02010-101	OH	SEAT ASSY
76210-02010-102	SV	SEAT ASSY
76210-02020-042	SV	SEAT ASSY, DIVAN
76210-02020-110	OH	SEAT ASSY
76211-03011-462	OH	SEAT RAIL
76211-03012-047	NE	PANEL
76211-03012-048	NE	PANEL
76211-03012-104	OH	DUCT ASSY

76211-03023-154	OH	DUCT ASSY RH
76211-03041-046	OH	WINDOW
76211-03041-160	NE	COVER
76211-03043-046	NE	SUPPORT ASSY
76212-03001-044	OH	DUCT ASSY
76212-03003-042	OH	DUCT ASSY
76212-03003-107	OH	DUCT ASSY
76212-03004-044	OH	DUCT ASSY
76212-03004-101	OH	DUCT ASSY, LH
76212-03005-107	OH	TUBING
76212-03016-051	OH	DUCT ASSY
76212-03016-110	OH	DUCT ASSY
76212-03018-101	OH	DUCT ASSY
76212-03018-103	OH	TUBING
76212-03018-105	OH	DUCTING
76213-03010-118	NE	SILL
76217-03003-106	NE	COVER
76250-01000-109	SV	GEAR ASSY- NOSE LANDING
76250-01000-119	OH	GEAR ASSY, NOSE
76250-01008-041	OH	ROD ASSY
76250-01101-102	OH	CYLINDER, BRAKE
76250-01101-102	OH	CYLINDER, BRAKE
76250-01101-102	OH	CYLINDER, BRAKE
76250-01101-103	OH	CYLINDER, BRAKE
76250-01106-041	OH	HANDLE ASSY/BRAKE
76250-02000-113	OH	MAIN GEAR L/H
76250-02000-114	OH	LANDING GEAR INSTALL
76250-02101-041	NE	BELLCRANK ASSY
76250-02102-041	OH	TUBE ASSY
76250-02103-104	SV	DAMPER
76250-02103-104	SV	DAMPER
76250-02103-106	SV	DAMPER
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-041	OH	BELLCRANK ASSY
76250-02108-043	OH	BELLCRANK ASSY
76250-02500-101	OH	MLG ASSY LH
76250-02500-102	OH	MLG ASSY RH
76250-02502-041	OH	TUBE ASSY
76250-02502-041	OH	TUBE ASSY
76250-02502-041	OH	TUBE ASSY
76251-01101-101	OH	FLOAT ASSY
76251-01101-103	NE	FLANGE
76251-01101-104	OH	FLOAT FWD

76251-01101-104	OH	FLOAT FWD
76251-01101-104	OH	FLOAT FWD
76251-01101-105	OH	FLOAT ASSY
76251-01101-105	SV	FLOAT ASSY
76251-01101-105	SV	FLOAT ASSY
76251-01102-104	OH	COVER RH
76251-01102-104	OH	COVER RH
76251-01102-104	OH	COVER RH
76251-01102-108	OH	FLOAT ASSY MAIN RH
76251-01102-110	OH	FLOAT ASSY RH MAIN
76251-01105-102	OH	WASHER
76251-01105-106	NE	WASHER/STRIP
76251-01105-108	OH	WASHER
76251-01105-109	OH	WASHER
76251-01105-112	NE	FLOAT CABLE GUARD
76251-01108-101	NE	WASHERS
76251-01108-101	OH	WASHERS
76251-01108-159	NE	SPRING
76251-01108-164	OH	FITTING
76251-01108-165	SV	FITTING
76251-01108-169	SV	BLOCK
76251-01108-169	NE	BLOCK
76251-01108-170	OH	BLOCK
76251-01108-176	NE	WASHER
76251-01108-176	OH	WASHER
76251-01109-112	NE	GASKET,FLOAT
76251-01109-113	NE	SPACER
76251-01109-113	OH	SPACER
76251-01111-041	OH	RETAINER ASSY
76251-01111-041	OH	RETAINER ASSY
76251-01111-041	OH	RETAINER ASSY
76251-01112-042	OH	RING ASSY
76251-01112-043	OH	RING ASSY
76251-01112-043	OH	RING ASSY
76251-01112-104	OH	RING ASSY
76251-01113-043	OH	COVER ASSY
76251-01114-041	OH	COVER ASSY
76251-01114-041	OH	COVER ASSY
76251-01114-041	OH	COVER ASSY
76251-02702-043	NE	HOSE ASSY
76251-10002-047	OH	BRACKET
76255-02003-041	OH	FITTING ASSY.
76255-02003-042	OH	FITTING ASSY
76255-02003-043	OH	YOKE ASSY.
76255-02003-103	OH	RELEASE
76255-02003-104	SV	RELEASE CABLE
76300-07001-101	OH	FITTING

76300-07002-101	OH	COVER-POWER TAKE OFF
76300-07954-106	SV	BOLT
76301-01000-047	OH	QUADRANT ASSY
76301-01000-048	OH	QUADRANT ASSY
76301-01000-049	OH	QUAD ASSY
76301-01018-101	NE	ACTUATOR/ENG CONT QD
76301-01503-052	OH	LEVER ASSY
76301-01503-052	OH	LEVER ASSY
76301-01503-113	OH	LEVER ASSY
76301-01910-106	SV	CONTROL ASSY
76301-01910-106	SV	CONTROL ASSY
76301-01910-106	SV	CONTROL ASSY
76301-01910-107	SV	CONTROL ASSY
76301-01910-110	OH	CONTROL BOX
76301-01910-110	OH	CONTROL BOX
76301-01910-110	OH	CONTROL BOX
76301-01910-110	OH	CONTROL BOX
76301-01910-110	OH	CONTROL BOX
76301-01910-110	OH	CONTROL BOX
76301-01910-111	SV	CABLE
76301-01910-112	SV	CABLE
76301-01910-116	OH	CABLE ASSY
76301-03004-043	OH	SHAFT ASSY, TORQUE
76301-03005-001	OH	LEVER ASSY
76301-03027-102	OH	CAM
76301-03032-101	NE	WASHER
76301-03033-043	OH	IDLER ASSY
76301-03034-041	NE	ARM ASSY
76301-03034-042	OH	ARM ASSY
76301-03038-043	OH	PLATE ASSY, COLLECTIVE BIAS OVERRIDE
76301-03040-102	OH	LINK ASSY
76301-03040-104	OH	ARM ASSY.
76301-03043-101	OH	LINK ASSY
76301-03043-102	OH	LINK ASSY/LOAD BIAS
76301-03044-041	OH	BRACKET ASSY
76301-03045-101	OH	ARM ASSY
76301-03047-101	OH	SWITCH
76301-03901-102	OH	ROTARY ACTUATOR
76301-03901-102	OH	ROTARY ACTUATOR
76301-03902-102	OH	ACTUATOR, ROTARY
76301-03902-102	OH	ACTUATOR, ROTARY
76301-03902-102	AR	ACTUATOR, ROTARY
76301-03911-103	SV	CABLE ASSY, COLLECTIVE BIAS PUSH-PULL
76301-07001-001	OH	ENGINE CONTROL
76302-01500-052	OH	DOOR ASSY
76302-02502-125	OH	ROD ASSY
76302-03014-105	OH	COVER, RH

76302-03014-106	OH	COVER, LH
76302-07001-005	OH	COWL ASSY LH
76302-07001-055	OH	COWL ASSY LH
76302-07001-056	OH	COWL ASSY RH
76302-07007-049	OH	WALL ASSY, LH
76302-07007-050	OH	WALL ASSY RH
76302-07007-052	OH	WALL ASSY
76302-07007-124	NS	SEAL
76302-07007-125	OH	WALL LH
76302-07007-126	OH	WALL RH
76302-07007-145	OH	CLAMP
76302-07007-146	OH	CLAMP
76302-07007-147	OH	CLAMP
76302-07007-152	OH	CLAMP UPPER LH
76302-07007-153	SV	CLAMP
76302-07007-153	OH	CLAMP
76302-07007-154	SV	CLAMP
76302-07007-154	OH	CLAMP
76302-07007-156	OH	RETAINER ASSY
76302-07009-041	OH	PANEL L/H
76302-07009-041	OH	PANEL L/H
76302-07009-042	OH	PANEL, R/H
76302-07009-043	OH	PANEL ASSY
76302-07009-043	OH	PANEL ASSY
76302-07009-109	OH	PANEL ASSY
76302-07010-041	OH	COVER ASSY
76302-07010-042	OH	COVER ASSY
76302-07010-101	OH	COVER
76302-07010-101	OH	COVER
76302-07010-101	OH	COVER
76302-07010-102	OH	LOCKWASHER
76302-07010-102	OH	LOCKWASHER
76302-07010-102	OH	LOCKWASHER
76302-07014-059	OH	PANEL ASSY
76302-07018-045	OH	DUCT ASSY
76302-07021-042	OH	BRAKE ASSY
76302-07021-042	OH	BRAKE ASSY
76302-07021-043	SV	PANEL, ROTOR BRAKE
76302-07021-044	OH	PANEL, R/B
76302-07028-060	OH	SCREEN, INLET
76302-07033-107	SV	INDUCER BLEED DUCT
76302-07036-101	NE	BOLT
76302-07040-101	NE	NOZZLE
76302-0732-105	OH	DUCT ASSY
76302-07500-055	OH	COWL ASSY AIR INLET
76302-07500-170	OH	COVER
76302-07500-171	OH	COVER

76302-07501-059	OH	LINK END
76302-07501-062	OH	ROD ASSY
76302-07501-140	OH	LINK
76302-07502-048	OH	SUPPORT BRACKET
76302-07502-058	OH	BRACKET
76302-07502-059	OH	BRACKET
76302-07511-111	OH	SUPPORT BRACKET
76302-07511-111	OH	SUPPORT BRACKET
76302-07514-045	OH	ROD ASSY
76302-07514-048	OH	ROD ASSY
76302-07515-042	OH	LEVER ASSY
76302-07515-043	OH	LEVER ASSY
76302-07517-042	OH	LEVER ASSY
76302-07522-103	OH	VENT
76302-07527-110	OH	RECEPTACLE
76302-07532-106	OH	DUCT ASSY
76302-07534-011	OH	DUCT ASSY
76302-07950-102	OH	ACTUATOR-EAPS
76302-09672-101	OH	COVER PLATE
76303-07000-013	OH	COWLING INSTALLATION
76303-07002-048	OH	COWLING ASSY
76303-07002-048	OH	COWLING ASSY
76303-07008-041	OH	STRUT ASSY
76303-07008-044	OH	SUPPORT TUBE
76303-07009-049	OH	SUPPORT
76303-07009-049	AR	SUPPORT
76303-07010-005	NE	FITTING LH
76303-07016-003	OH	FITTING
76303-07016-004	OH	FITTING
76303-07601-041	OH	COWL ASSY, AFT
76303-07601-041	OH	COWL ASSY, AFT
76304-05704-115	OH	COVER
76304-07006-141	NS	CHANNEL
76304-07006-141	NS	CHANNEL
76304-07009-047	OH	COVER ASSY
76304-07009-047	OH	COVER ASSY
76304-07009-047	OH	COVER ASSY
76304-07009-047	OH	COVER ASSY
76304-07009-048	OH	COVER ASSY
76304-07009-113	OH	DUCT, INLET AIR
76304-07009-113	OH	DUCT, INLET AIR
76304-07009-113	OH	DUCT, INLET AIR
76304-07009-113	OH	DUCT, INLET AIR
76304-07009-113	OH	DUCT, INLET AIR
76304-07009-455	NE	DOUBLER
76304-07016-041	SV	TUBE ASSY
76304-07020-042	SV	SHIELD, SNOW

76304-07020-043	OH	SNOW SHIELD LH
76304-07020-044	OH	SNOW SHIELD RH
76304-07020-046	OH	SHIELD, SNOW
76304-07024-101	NE	GASKET
76304-07500-043	OH	duct
76304-07500-051	OH	FIREWALL ASSY LH
76304-07500-052	OH	FIREWALL ASSY RH
76304-07500-063	OH	BRACKET ASSY
76304-07500-158	OH	ANL BAR
76304-07504-115	OH	COVER
76304-07504-117	OH	COVER
76304-07504-119	OH	COVER, HMU
76304-07507-044	OH	DUCT ASSY
76304-07507-045	OH	DUCT ASSY
76304-07900-109	OH	HEATER, FIREWALL RH
76304-07900-109	OH	HEATER, FIREWALL RH
76304-07900-111	OH	HEATER, FIREWALL LH
76304-07900-113	OH	HEATER, INLET
76305-07001-044	OH	EXHAUST ASSY
76305-07003-044	OH	EXHAUST EJECTOR
76305-07500-042	OH	EXHAUST DUCT
76305-07500-042	OH	EXHAUST DUCT
76305-07500-042	OH	EXHAUST DUCT
76305-07500-042	OH	EXHAUST DUCT
76305-07501-044	OH	EXHAUST
76305-07501-049	OH	DEFLECTOR ASSY, EXHAUST
76306-07000-045	OH	TUBE ASSY
76306-07004-044	NE	TUBE ASSY
76306-07004-062	NE	TUBE ASSY
76306-07901-101	OH	FIRE BOTTLE
76306-07901-102	OH	ENGINE FIRE EXTINGUISHER
76306-07901-102	OH	ENGINE FIRE EXTINGUISHER
76306-07901-102	OH	ENGINE FIRE EXTINGUISHER
76307-02002-016	OH	FUEL TANK
76307-02003-089	SV	TUBE ASSY
76307-02003-090	SV	TUBE ASSY
76307-02005-103	NE	SUPPORT
76307-02008-043	OH	TANK COLLECTOR ASSY
76307-02008-044	OH	TANK COLLECTOR ASSY
76307-02009-101	OH	COLLECTOR
76307-02009-102	OH	COLLECTOR
76307-02009-102	OH	COLLECTOR
76307-02010-102	OH	SUPPORT
76307-02900-104	OH	TANK UNIT, FUEL QTY
76307-02900-104	OH	TANK UNIT, FUEL QTY
76307-02900-104	OH	TANK UNIT, FUEL QTY
76307-02900-104	OH	TANK UNIT, FUEL QTY

76307-02900-104	OH	TANK UNIT, FUEL QTY
76307-03002-119	NE	TUBE/UPPER
76307-03005-049	NE	TUBE ASSY
76307-03005-050	SV	TUBE ASSY
76307-03006-080	OH	TUBE ASSY
76307-03900-101	OH	VALVE CHECK
76307-07004-101	NE	ORIFICE
76307-07510-102	OH	SUPPORT BRACKET
76307-07901-102	OH	VALVE ASSY
76307-07901-102	AR	VALVE ASSY
76308-07000-101	NE	TUBE-SCUPPER DRAIN
76308-07001-101	OH	ADAPTER
76308-07001-102	OH	SPACER
76308-07004-101	NE	ADAPTER
76308-07005-101	OH	ADAPTOR
76308-07501-043	OH	OIL RESERVIOR
76308-07501-045	OH	OIL RESERVIOR ASSY
76308-07501-045	OH	OIL RESERVIOR ASSY
76308-07900-101	SV	SWITCH, PRESSURE
76308-07900-101	SV	SWITCH, PRESSURE
76308-07901-103	OH	RESERVOIR ASSY
76308-07901-104	OH	RESERVOIR
76308-07901-104	OH	RESERVOIR
76308-07901-104	OH	RESERVOIR
76308-07901-105	OH	COOLER, OIL
76308-07901-106	OH	OIL COOLER
76308-07901-106	OH	OIL COOLER
76308-07901-108	OH	OIL COOLER
76308-07902-104	OH	OIL COOLER BLOWER
76308-07902-105	OH	BLOWER ASSY
76308-07902-106	OH	BLOWER
76308-07902-106	OH	BLOWER
76308-07951-101	OH	TRANSMISSION OIL COOLER
76308-07951-101	OH	TRANSMISSION OIL COOLER
76308-07951-101	OH	TRANSMISSION OIL COOLER
76308-07951-101	OH	TRANSMISSION OIL COOLER
76308-07951-102	OH	MAIN GEARBOX OIL COOLER
76308-07951-102	OH	MAIN GEARBOX OIL COOLER
76308-07952-106	OH	BLOWER ASSY
76308-07952-106	OH	BLOWER ASSY
76308-07952-106	OH	BLOWER ASSY
76309-07002-109	OH	WASHER
76309-07002-115	NE	NUT/CHECK
76309-07002-119	OH	ROD END
76309-07007-047	OH	TUBE ASSY
76309-07007-048	OH	TUBE ASSY
76309-07007-048	OH	TUBE ASSY



76309-07007-048	OH	TUBE ASSY
76309-07007-049	OH	TUBE ASSY
76309-07007-049	OH	TUBE ASSY
76309-07007-050	OH	TUBE ASSY
76309-07007-050	OH	TUBE ASSY
76309-07007-050	OH	TUBE ASSY
76309-07007-053	OH	TUBE ASSY
76309-07007-054	OH	TUBE ASSY
76309-07013-101	OH	TRUNNION
76309-07013-101	AR	TRUNNION
76309-07015-101	OH	TRUNNION
76309-07015-102	OH	TRUNNION
76309-07017-041	AR	TRIPOD MOUNT/FWD LH.
76309-07017-042	AR	TRIPOD MOUNT/FWD RH.
76309-07017-043	OH	SUPPORT ASSY
76309-07017-043	OH	SUPPORT ASSY
76309-07017-043	OH	SUPPORT ASSY
76309-07017-043	OH	SUPPORT ASSY
76309-07017-043	OH	SUPPORT ASSY
76309-07017-044	OH	SUPPORT ASSY
76309-07017-044	OH	SUPPORT ASSY
76309-07504-101	OH	BRACKET ASSY
76309-07504-101	OH	BRACKET ASSY
76309-07506-043	OH	STRUT ASSY
76309-07506-043	OH	STRUT ASSY
76309-07507-102	OH	MOUNT
76309-07510-101	OH	MOUNT
76309-07510-101	OH	MOUNT
76309-07510-102	OH	BRACKET
76309-07510-102	OH	BRACKET
76309-07511-102	OH	MOUNT
76309-07512-043	OH	STRUT ASSY
76309-87510-101	OH	MOUNT
76310-07008-042	NE	DUCT HALF
76310-07503-041	OH	RH ENGINE SERVICE FAIRING
76350-01111-041	OH	VIBRATION ABSORBER
76350-01111-042	OH	VIBRATION ABSORBER
76350-01112-041	OH	BLOCK ASSY
76350-01112-041	OH	BLOCK ASSY
76350-01112-041	OH	BLOCK ASSY
76350-01113-Y-041	OH	GEAR ASSY
76350-01114-101	OH	ADAPTER
76350-01117-101	OH	ADAPTER
76350-01119-101	OH	SHAFT ASSY
76350-01120-101	NE	BUSHING
76351-09002-046	OH	HOUSING ASSY
76351-09004-122	NE	LINER

76351-09004-125	NE	LINER
76351-09008-050	OH	LOWER CASE MGB
76351-09008-053	OH	HOUSING ASSY
76351-09011-105	OH	GEAR, BEVEL
76351-09013-107	NE	SPACER
76351-09013-109	OH	SPACER
76351-09013-110	OH	SPACER
76351-09014-103	NE	PINION SHAFT NUT
76351-09014-103	OH	PINION SHAFT NUT
76351-09014-103	NE	PINION SHAFT NUT
76351-09018-045	OH	HOUSING
76351-09018-046	OH	INPUT PINION
76351-09024-104	OH	QUILL SHAFT
76351-09027-102	OH	RETAINER
76351-09029-101	OH	GUIDE
76351-09030-044	OH	SHAFT ASSY
76351-09032-042	OH	BULL GEAR ASSY
76351-09032-044	OH	BULL GEAR ASSY
76351-09035-102	OH	WEB
76351-09035-102	OH	WEB
76351-09035-102	OH	WEB
76351-09035-102	OH	WEB
76351-09041-043	OH	DRIVE ASSY
76351-09043-042	OH	FLANGE, OUTPUT
76351-09043-101	OH	SPACER
76351-09046-101	OH	SPACER
76351-09051-042	OH	COVER ASSY
76351-09051-042	OH	COVER ASSY
76351-09051-044	NE	COVER ASSY
76351-09053-102	OH	GEAR ASSY
76351-09055-102	OH	GEAR ASSY
76351-09056-101	NE	TUBE
76351-09057-041	OH	FLANGE ASSY TR
76351-09058-101	OH	GEAR ASSY
76351-09060-041	OH	FLANGE ASSY
76351-09060-101	OH	FLANGE
76351-09062-004	OH	HOUSING
76351-09062-041	OH	HOUSING ASSY
76351-09062-041	NE	HOUSING ASSY
76351-09064-101	OH	CAGES
76351-09065-101	NE	BUSHING
76351-09065-101	OH	BUSHING
76351-09067-101	OH	GEARSHAFT
76351-09070-101	OH	FLANGE
76351-09074-045	NE	JET
76351-09080-101	NE	SHIELD/GEN DRIVE
76351-09082-105	SV	DETECTOR, CHIP

76351-09085-101	OH	SHEILD
76351-09085-101	OH	SHEILD
76351-09086-101	NE	SHIM
76351-09087-102	NE	SUPPORT
76351-09102-102	NE	DECAL/CAUTION
76351-09138-101	NE	PLATE, LOCKING
76351-09143-101	NE	LOCKING PLATE
76351-09144-101	NE	SPACER
76351-09173-105	NE	NUT
76351-09174-104	NE	LOCK PLATE
76351-09500-043	OH	MAIN G/B
76351-09616-101	OH	NUT
76351-09617-101	OH	LOCKING PLATE
76351-09671-101	OH	COVER
76357-05000-041	OH	INTERMEDIATE GEARBOX
76357-05006-042	OH	FLANGE ASSY
76357-05006-101	OH	INPUT HOUSING FLANGE
76357-05015-101	NE	SPACER
76357-05600-041	OH	INTERMEDIATE GEARBOX
76357-05600-041	AR	INTERMEDIATE GEARBOX
76358-05100-046	OH	TAIL GEAR BOX
76358-05100-047	OH	TAIL GEAR BOX
76358-05102-041	OH	HOUSING ASSY.
76358-05102-041	OH	HOUSING ASSY.
76358-05102-042	OH	HOUSING ASSY
76358-05104-101	OH	GEAR, PINION
76358-05104-101	OH	GEAR, PINION
76358-05109-043	OH	CENTER HOUSING
76358-05109-044	OH	CENTER HOUSING
76358-05109-044	OH	CENTER HOUSING
76358-05112-041	OH	OUTPUT HOUSING
76358-05115-101	OH	INNER CONE
76358-05116-101	NE	CONE/OUTER
76358-05116-101	OH	CONE/OUTER
76358-05117-102	OH	NUT
76358-05119-101	NE	LOCK PLATE
76358-05119-101	OH	LOCK PLATE
76358-05120-101	NE	THRUST PLATE
76358-05120-101	OH	THRUST PLATE
76358-05121-042	OH	SHAFT, PITCH CHANGE
76358-05124-042	OH	SHAFT, OUTPUT
76358-05124-042	OH	SHAFT, OUTPUT
76358-05125-101	OH	NUT, PITCH CONTROL
76358-05600-042	AR	TAIL GEARBOX
76358-05604-101	OH	PINION
76358-05613-101	OH	GEAR BEVEL
76361-04002-101	OH	FLANGE

76361-04004-047	OH	SHAFT ASSY
76361-04007-041	OH	SUPPORT ASSY, BEARING
76361-04007-042	OH	SUPPORT ASSEMBLY
76361-04007-042	OH	SUPPORT ASSEMBLY
76361-04604-041	OH	TAIL DRIVE SHAFT
76361-04604-041	OH	TAIL DRIVE SHAFT
76361-04604-044	OH	#2 T/R DRIVE SHAFT
76361-05201-041	OH	SHAFT ASSY
76361-05201-044	OH	SHAFT ASSY
76361-05601-041	OH	TAIL DRIVE SHAFT, SECTION 5
76361-09101-041	OH	SHAFT ASSY
76361-09103-102	OH	SPACER
76361-09103-104	OH	ADAPTER FLANGE
76361-09103-104	OH	ADAPTER FLANGE
76361-09103-104	OH	ADAPTER FLANGE
76361-09202-055	AR	ENGINE DRIVESHAFT
76361-09202-055	AR	ENGINE DRIVESHAFT
76361-09202-055	AR	ENGINE DRIVESHAFT
76361-09202-055	AR	ENGINE DRIVESHAFT
76361-09202-055	AR	ENGINE DRIVESHAFT
76361-09203-101	OH	FLANGE
76362-09202-108	OH	IMPELLER
76362-09203-102	OH	OIL COOLER
76362-09203-102	OH	OIL COOLER
76362-09203-102	OH	OIL COOLER
76362-09205-101	OH	ADAPTOR
76362-09206-101	NE	SPACER
76362-09206-102	OH	SPACER
76362-09208-101	NE	WASHER/IMPELLER
76362-09210-041	OH	BLOWER ASSY
76362-09701-046	OH	IMPELLER
76362-09809-101	NE	ISOLATOR
76363-09101-102	OH	DISC
76363-09101-102	OH	DISC
76363-09101-108	OH	ROTOR BRAKE ASSY
76363-09103-101	AR	BRAKE ASSY
76363-09103-101	OH	BRAKE ASSY
76363-09103-101	AR	BRAKE ASSY
76363-09103-105	OH	ROTOR BRAKE DISC
76363-09104-041	NS	SHIM ASSY
76363-09105-044	OH	SHIELD ASSY
76363-09105-044	OH	SHIELD ASSY
76363-09105-044	OH	SHIELD ASSY
76363-09105-044	OH	SHIELD ASSY
763700-38	OH	AMU/FUEL CONTROL
763700-9	OH	HMU
76400-00014-043	OH	PUSHROD

76400-00014-043	OH	PUSHROD
76400-00014-043	OH	PUSHROD
76400-00014-048	OH	PUSHROD
76400-00014-049	OH	PUSHROD
76400-00014-053	OH	CONTROL ROD
76400-00014-053	OH	CONTROL ROD
76400-00014-055	OH	PUSHROD ASSY
76400-00014-056	OH	PUSHROD ASSY
76400-00014-058	OH	PUSH ROD ASSY
76400-00014-058	OH	PUSH ROD ASSY
76400-00014-059	OH	PUSH ROD ASSY
76400-00014-059	OH	PUSH ROD ASSY
76400-00014-063	OH	PUSH TUBE ASSY
76400-00014-063	OH	PUSH TUBE ASSY
76400-00014-068	OH	PUSHROD
76400-00014-071	OH	PUSH ROD
76400-00014-071	OH	PUSH ROD
76400-00014-071	OH	PUSH ROD
76400-00014-074	OH	PUSH ROD ASSY
76400-00014-074	OH	PUSH ROD ASSY
76400-00014-075	OH	PUSHROD
76400-00014-075	OH	PUSHROD
76400-00014-078	OH	ROD ASSY
76400-00014-128	OH	ROD ASSY
76400-00024-042	OH	PUSHROD
76400-00024-045	OH	PUSHROD ASSY
76400-00024-045	OH	PUSHROD ASSY
76400-00024-049	OH	PUSHROD
76400-00024-049	OH	PUSHROD
76400-00024-049	OH	PUSHROD
76400-00024-049	OH	PUSHROD
76400-00024-049	NE	PUSHROD
76400-00024-052	OH	PUSHROD
76400-00024-052	OH	PUSHROD
76400-00024-053	OH	PUSHROD ASSY
76400-00024-054	OH	PUSHROD
76400-00024-054	OH	PUSHROD
76400-00024-055	OH	PUSHROD ASSY
76400-00024-056	OH	ROLL PUSHROD
76400-00024-056	OH	ROLL PUSHROD
76400-00024-058	OH	ROD ASSY
76400-00024-058	OH	ROD ASSY
76400-00024-107	OH	ROD ASSY
76400-00024-116	OH	TUBE
76400-00024-116	OH	TUBE
76400-00024-120	OH	PUSH ROD ASSY
76400-00034-041	OH	PUSHROD

76400-00034-042	OH	PUSHROD
76400-00034-042	OH	PUSHROD
76400-00034-056	OH	ROD ASSY
76400-00034-057	OH	PUSH ROD ASSY
76400-00034-057	OH	PUSH ROD ASSY
76400-00034-059	OH	ROD ASSY
76400-00034-059	OH	ROD ASSY
76400-00034-059	OH	ROD ASSY
76400-00034-101	OH	ROD ASSY
76400-00034-112	OH	LINK ASSY
76400-00044-041	OH	PUSH ROD ASSY
76400-00044-101	OH	TUBE ASSY
76400-0014-072	OH	PUSHROD ASSY
76400-00191-101	OH	QUADRANT ASSY
76400-00191-101	OH	QUADRANT ASSY
76400-00191-101	OH	QUADRANT ASSY
76400-01001-041	OH	BELLCRANK
76400-01001-041	OH	BELLCRANK
76400-01001-041	OH	BELLCRANK
76400-01002-041	OH	BELLCRANK
76400-01002-041	OH	BELLCRANK
76400-01002-041	OH	BELLCRANK
76400-01003-042	OH	BELLCRANK ASSY
76400-01003-042	OH	BELLCRANK ASSY
76400-01003-043	OH	BELLCRANK ASSEMBLY YAW
76400-02101-041	OH	ROD ASSY
76400-02101-043	OH	ROD ASSY
76400-02900-101	OH	DAMPER ASSY
76400-02900-101	OH	DAMPER ASSY
76400-02900-101	OH	DAMPER ASSY
76400-02900-102	OH	DAMPER
76400-02900-102	OH	DAMPER
76400-02900-102	OH	DAMPER
76400-02900-103	OH	DAMPER
76400-03001-043	OH	BELLCRANK ASSY
76400-03001-043	OH	BELLCRANK ASSY
76400-03001-046	OH	BELLCRANK ASSY
76400-03001-046	OH	BELLCRANK ASSY
76400-03002-042	OH	IDLER ASSY
76400-03002-044	OH	IDLER
76400-03002-104	OH	IDLER
76400-03003-041	OH	BELLCRANK ASSY
76400-03003-041	OH	BELLCRANK ASSY
76400-03004-042	OH	BELLCRANK ASSY
76400-03004-042	OH	BELLCRANK ASSY
76400-03005-041	OH	LEVER ASSY
76400-03005-044	OH	LEVER ASSY

76400-03005-044	NE	LEVER ASSY
76400-03005-045	OH	LEVER ASSY
76400-03005-048	OH	LEVER ASSY
76400-03005-048	OH	LEVER ASSY
76400-03005-104	NE	LEVER SUB ASSY
76400-03005-106	OH	LEVER ASSY
76400-03006-047	NE	LINK ASSY
76400-03006-047	OH	LINK ASSY
76400-03006-048	OH	LINK ASSY
76400-03006-048	OH	LINK ASSY
76400-03006-048	NE	LINK ASSY
76400-03006-049	OH	IDLER LINK ASSY
76400-03006-050	OH	LINK ASSY
76400-03006-051	OH	LINK ASSY
76400-03006-051	OH	LINK ASSY
76400-03006-052	OH	LINK
76400-03006-054	OH	LINK
76400-03006-055	OH	LINK ASSY
76400-03006-055	OH	LINK ASSY
76400-03006-109	OH	LINK
76400-03006-110	OH	LINK
76400-03006-111	OH	LINK ASSY
76400-03006-114	NE	LINK
76400-03007-044	OH	SUPPORT ASSY
76400-03007-104	OH	SUPPORT
76400-03008-041	OH	SUPPORT ASSY
76400-03009-041	OH	BRACKET ASSY
76400-03009-042	OH	MOUNT
76400-03010-045	OH	SUPPORT ASSY
76400-03010-105	OH	SUPPORT
76400-03012-041	OH	FITTING ASSY
76400-03012-041	OH	FITTING ASSY
76400-03012-042	OH	FITTING ASSY
76400-03012-042	OH	FITTING ASSY
76400-03012-103	OH	FITTING
76400-03013-046	OH	CLEVIS ASSY
76400-03013-104	OH	SPACER
76400-03013-104	OH	SPACER
76400-03013-109	OH	ARM ASSY
76400-03013-110	OH	ARM ASSY
76400-03014-046	OH	BRACKET
76400-03014-106	OH	LINK ASSY
76400-03014-107	OH	ANGLE
76400-03014-114	OH	ANGLE ASSY
76400-03014-124	OH	LINK ASSY
76400-03014-124	OH	LINK ASSY
76400-03015-042	OH	BRACKET ASSY

76400-03191-048	SV	CABLE ASSY TAIL
76400-03192-117	NE	PACKING
76400-03201-041	OH	BELLCRANK
76400-03201-041	OH	BELLCRANK
76400-03202-042	OH	BELLCRANK ASSY
76400-03203-041	OH	BELLCRANK
76400-03203-041	OH	BELLCRANK
76400-03204-041	OH	BELLCRANK ASSY
76400-03205-041	OH	SUPPORT ASSY
76400-03205-041	OH	SUPPORT ASSY
76400-03206-041	OH	BELLCRANK ASSY
76400-03206-101	OH	BELLCRANK
76400-03206-101	OH	BELLCRANK
76400-03207-041	OH	BELLCRANK ASSY
76400-03207-041	OH	BELLCRANK ASSY
76400-03208-041	OH	BELLCRANK ASSY
76400-03208-041	OH	BELLCRANK ASSY
76400-03209-041	OH	BELLCRANK
76400-03210-043	OH	BELLCRANK ASSY
76400-03210-043	OH	BELLCRANK ASSY
76400-03211-041	OH	BELLCRANK
76400-03211-041	OH	BELLCRANK
76400-03212-044	OH	BELLCRANK ASSY
76400-03212-0454	OH	BRACKET ASSY
76400-03213-041	OH	BELLCRANK
76400-03213-041	OH	BELLCRANK
76400-03214-042	OH	SUPPORT ASSY
76400-03214-043	OH	SUPPORT ASSY
76400-03215-041	OH	SUPPORT ASSY
76400-03215-103	OH	SPACER
76400-03216-044	OH	SUPPORT ASSY
76400-03216-105	OH	SUPPORT BRACKET
76400-03217-041	OH	SUPPORT ASSY
76400-03217-041	OH	SUPPORT ASSY
76400-03217-101	OH	BRACKET ASSY
76400-03218-042	OH	SUPPORT ASSY
76400-03218-042	OH	SUPPORT ASSY
76400-03219-043	OH	BELLCRANK ASSY
76400-03219-043	OH	BELLCRANK ASSY
76400-03219-043	NE	BELLCRANK ASSY
76400-03220-041	OH	SUPPORT ASSY
76400-03220-041	OH	SUPPORT ASSY
76400-03221-101	OH	TUBE ASSY
76400-03222-041	OH	SUPPORT ASSY
76400-03222-041	OH	SUPPORT ASSY
76400-03222-043	OH	SUPPORT ASSY
76400-03222-101	OH	SUPPORT



76400-03222-104	OH	SUPPORT
76400-03222-105	OH	SHIM
76400-03223-043	NE	STOP ASSY
76400-03223-103	OH	STOP ASSY
76400-03223-104	OH	STOP ASSY
76400-03223-106	OH	STOP ASSY
76400-03223-109	OH	STOP ASSY
76400-03224-042	OH	FITTING
76400-03310-057	OH	ROD ASSY
76400-03310-060	OH	DAMPER ASSY
76400-03310-063	OH	DAMPER ASSY
76400-03310-064	OH	DAMPER ASSY
76400-03310-067	OH	CYL ASSY/GRAD DAMPER
76400-03310-069	OH	DAMPER ASSY
76400-03310-071	OH	DAMPER, ASSY CYCLIC
76400-03310-112	OH	ROD ASSY
76400-03310-114	OH	BRACKET ASSY
76400-03310-120	NE	ROD
76400-03312-101	NE	SPRING
76400-03662-042	OH	SUPPORT ASSY
76400-07504-044	OH	FITTING ASSY
76400-09501-042	OH	SUPPORT ASSY
76400-09501-042	OH	SUPPORT ASSY
76400-09501-042	OH	SUPPORT ASSY
76400-09502-044	OH	BELLCRANK ASSY
76400-09502-046	OH	BELLCRANK ASSY
76400-09502-046	OH	BELLCRANK ASSY
76400-09502-046	OH	BELLCRANK ASSY
76400-09503-103	OH	BRACKET
76400-09503-103	OH	BRACKET
76400-09503-104	OH	SUPPORT ASSY
76400-09504-041	OH	SUPPORT ASSY
76400-09504-041	OH	SUPPORT ASSY
76400-09504-042	OH	SUPPORT
76400-09504-044	OH	BELL CRANK ASSY
76400-09504-101	OH	SUPPORT
76400-09504-101	OH	SUPPORT
76400-09505-103	OH	SUPPORT ASSY
76400-09506-041	OH	BELLCRANK
76400-09506-041	OH	BELLCRANK
76400-09506-041	OH	BELLCRANK
76400-09506-041	OH	BELLCRANK
76400-09506-041	OH	BELLCRANK
76401-01101-042	OH	STICK ASSY, CYCLIC
76401-01101-043	OH	CYCLIC STICK ASSY
76401-01101-043	OH	CYCLIC STICK ASSY
76401-01101-046	OH	STICK ASSY

76401-01101-047	OH	STICK ASSY
76401-01104-043	OH	PUSHROD ASSY-ROLL
76401-01104-044	OH	PUSHROD ASSEMBLY-ROLL
76401-01104-045	OH	CRANK ASSY
76401-01105-041	OH	LEVER
76401-01105-041	OH	LEVER
76401-01105-101	OH	TUBE ASSY
76401-01106-042	OH	SUPPORT ASSY
76401-01106-042	OH	SUPPORT ASSY
76401-01106-043	OH	SUPPORT ASSY
76401-01106-044	OH	SUPPORT
76401-01106-046	OH	SUPPORT ASSY
76401-01107-101	OH	ROLL CRANK ASSY
76401-01107-101	OH	ROLL CRANK ASSY
76401-01108-042	OH	LEVER
76401-01108-043	OH	LEVER
76401-01109-041	OH	BEARING SUPPORT
76401-01113-102	OH	TORQUE TUBE
76401-01114-041	OH	ROD ASSY
76401-01115-108	OH	SLEEVE
76401-01123-045	OH	LEVER
76401-01123-046	OH	LEVER
76401-01123-105	OH	LEVER ASSY
76401-01124-041	OH	ROD ASSY
76401-01125-011	OH	CYCLE COVER
76401-01125-012	OH	CYCLE COVER
76401-01125-041	OH	COVER ASSY
76401-01125-041	OH	COVER ASSY
76401-01125-042	OH	COVER
76401-01125-044	OH	COVER
76401-01125-046	OH	COVER
76401-01125-101	OH	COVER ASSY
76401-01125-102	OH	COVER ASSY
76401-01125-110	OH	COVER
76401-01125-111	OH	COVER
76401-01126-044	NE	BOOT
76401-03103-042	OH	IDLER ASSY
76401-03104-042	OH	CRANK ASSY
76401-03104-042	OH	CRANK ASSY
76401-03105-044	OH	SUPPORT ASSY
76401-03105-044	OH	SUPPORT ASSY
76401-03106-041	OH	BELLCRANK ASSY
76401-03107-041	OH	BEAM-ANALOG MIXER
76401-03107-041	OH	BEAM-ANALOG MIXER
76401-03108-043	OH	BELLCRANK
76401-03108-101	OH	SUPPORT ASSY
76401-03501-104	NE	NUT

76401-03511-041	OH	IDLER
76401-03511-042	OH	SUPPORT ASSY
76401-03512-042	OH	IDLER ASSY
76401-03513-041	OH	SUPPORT ASSY
76401-03513-101	OH	SUPPORT
76401-03515-041	NE	ADAPTER ASSY
76401-03515-043	NE	ADAPTER
76401-03515-044	NE	NUT
76401-03515-102	OH	ROD ADAPTER
76401-03515-102	OH	ROD ADAPTER
76401-03515-104	OH	ROD ADAPTER
76401-03515-105	OH	ADAPTER ASSY
76401-03515-108	OH	ADAPTER ASSY
76401-03516-101	NE	SHIM SAS ACT
76401-08040-041	OH	SCISSORS ASSY
76402-01103-041	OH	LEVER ASSY
76402-01103-101	OH	SUPPORT ASSY
76402-01104-041	OH	SUPPORT ASSY
76402-01104-042	OH	SUPPORT ASSY
76402-01104-042	OH	SUPPORT ASSY
76402-01104-043	OH	SUPPORT ASSY TORQUE TUBE
76402-01111-109	OH	STICK ASSY, CO-PILOT
76402-01113-102	OH	FITTING, TORQUE TUBE
76402-01113-102	OH	FITTING, TORQUE TUBE
76402-01114-043	OH	COVER ASSY
76402-01115-101	OH	COVER
76402-01154-101	OH	SUPPORT ASSY
76402-01154-101	OH	SUPPORT ASSY
76402-01162-102	OH	SPACER
76403-01100-044	OH	PEDAL ASSY
76403-01101-049	OH	PEDAL ASSY
76403-01101-050	OH	PEDAL ASSY
76403-01103-106	OH	SHAFT ASSY
76403-01104-041	OH	ADJUSTER ASSY, PEDAL
76403-01105-045	OH	PEDAL ADJUSTER
76403-01107-042	OH	BELLCRANK
76403-01108-101	OH	KNOB
76403-01108-101	OH	KNOB
76403-01109-101	OH	SUPPORT-PEDAL ADJUST
76403-01109-102	OH	SUPPORT ASSY
76403-01110-041	OH	SUPPORT
76403-01111-041	OH	SUPPORT ASSY
76403-01111-041	OH	SUPPORT ASSY
76403-01111-041	OH	SUPPORT ASSY
76403-01112-101	OH	SUPPORT FITTING
76403-01113-041	OH	CRANK ASSY
76403-03001-041	OH	LINK ASSY

76403-03001-041	OH	LINK ASSY
76403-05108-044	OH	BRACKET ASSY
76403-05108-044	OH	BRACKET ASSY
76403-05108-044	OH	BRACKET ASSY
76403-05109-101	OH	SUPPORT, PITCH CONT.
76403-05109-102	NE	SPACER
76403-05110-042	OH	LINK ASSY
76403-05114-041	OH	CRANK ASSY, INNER
76403-05114-041	OH	CRANK ASSY, INNER
76403-05115-041	OH	IDLER ASSY
76403-05115-041	OH	IDLER ASSY
76403-05116-041	OH	LINK ASSY-T/R SERVO
76403-05116-041	OH	LINK ASSY-T/R SERVO
76403-05116-041	OH	LINK ASSY-T/R SERVO
76403-05116-041	OH	LINK ASSY-T/R SERVO
76403-05116-041	OH	LINK ASSY-T/R SERVO
76403-05117-101	SV	ADAPTER
76403-05118-104	OH	BRACKET
76403-05119-041	OH	SUPPORT ASSY
76403-05119-041	OH	SUPPORT ASSY
76403-05119-041	OH	SUPPORT ASSY
76403-05119-041	OH	SUPPORT ASSY
76403-05119-041	OH	SUPPORT ASSY
76403-05120-042	OH	CRANK ASSY
76403-05120-042	NE	CRANK ASSY
76403-05121-041	OH	CRANK ASSY
76403-05121-041	OH	CRANK ASSY
76403-05121-041	OH	CRANK ASSY
76403-05121-041	OH	CRANK ASSY
76403-05121-041	OH	CRANK ASSY
76403-05122-042	OH	BRACKET ASSY
76403-05122-042	OH	BRACKET ASSY
76403-05122-042	OH	BRACKET ASSY
76403-05122-042	OH	BRACKET ASSY
76403-05122-042	OH	BRACKET ASSY
76403-05123-041	OH	BRACKET ASSY
76403-05123-041	OH	BRACKET ASSY
76403-05123-041	OH	BRACKET ASSY
76403-05123-041	OH	BRACKET ASSY
76403-05125-043	OH	QUADRANT ASSY
76403-05125-043	OH	QUADRANT ASSY
76403-05125-043	OH	QUADRANT ASSY
76403-05125-043	OH	QUADRANT ASSY
76403-05125-043	OH	QUADRANT ASSY
76403-05130-105	OH	BRACKET
76403-05142-101	OH	QUADRANT
76450-00014-060	NE	STATIC LINE

76450-00014-064	OH	STATIC LINE
76450-00801-101	OH	AIRSPEED INDICATOR
76450-00801-101	OH	AIRSPEED INDICATOR
76450-00902-103	OH	IND. DUAL TORQUE
76450-00902-103	OH	IND. DUAL TORQUE
76450-00904-106	OH	INDICATOR, TEMP
76450-00905-101	OH	SENSOR, TRIPLE TACH
76450-00907-102	OH	INDICATOR
76450-00907-103	OH	INDICATOR, MAIN TXM OIL
76450-01001-511	OH	COMPASS INSTALLATION
76450-01005-101	OH	PANEL ASSY
76450-01005-101	OH	PANEL ASSY
76450-01005-102	OH	PANEL ASSY
76450-01007-041	OH	PLATE, FIRE EXT
76450-01013-042	AR	CONTROL, COMPASS
76450-01015-046	SV	MASTER SWITCH PANEL
76450-01016-047	SV	MASTER SWITCH PANEL
76450-01016-052	NE	PLATE ASSY
76450-01019-101	SV	TONE GENERATOR
76450-01019-101	OH	TONE GENERATOR
76450-01019-101	OH	TONE GENERATOR
76450-01026-043	SV	PANEL HEATER CONTROL
76450-01026-044	OH	PANEL ASSY
76450-01028-042	AR	PANEL, CONTROL
76450-01061-043	OH	PANEL ASSY
76450-01061-044	NE	PANEL
76450-01061-064	SV	PANEL ASSY
76450-01061-064	NS	PANEL ASSY
76450-01076-101	OH	INDICATOR, N1
76450-01076-101	OH	INDICATOR, N1
76450-01076-103	OH	TRIPLE TACH
76450-01076-105	OH	T5 REPEATER
76450-01076-105	OH	T5 REPEATER
76450-01076-106	OH	T5 INDICATOR
76450-01076-106	OH	T5 INDICATOR
76450-01076-110	OH	N1 INDICATOR
76450-01078-101	OH	INDICATOR, T/P
76450-01078-104	OH	INDICATOR, HYD PRESS
76450-01078-104	OH	INDICATOR, HYD PRESS
76450-01078-104	OH	INDICATOR, HYD PRESS
76450-01078-112	OH	INDICATOR T/P
76450-01078-118	SV	XMTR/PRESS
76450-01078-119	SV	TRANSMITTER, PRESSURE
76450-01078-119	NE	TRANSMITTER, PRESSURE
76450-01078-120	NE	XMTR/PRESS
76450-01078-121	NE	XMTR, PRESS
76450-01078-126	OH	INDICATOR

76450-01082-110	NE	PLACARD
76450-01082-121	NE	DECAL
76450-01082-122	NE	DECAL
76450-01082-123	NE	PLACARD
76450-01084-061	AR	GLARE SHIELD
76450-01096-108	SV	N1 INDICATOR
76450-02010-102	OH	GRIP ASSY
76450-02020-101	OH	COVER
76450-02030-011	OH	CONSOLE ASSY
76450-02030-043	OH	CONSOLE ASSY
76450-02101-042	OH	ACCUMULATOR
76450-02101-042	OH	ACCUMULATOR
76450-02107-102	OH	CHAMBER, BALANCE
76500-04004-041	OH	PIPING
76500-07054-041	OH	DUCT ASSY
76500-07068-042	AR	ADAPTER ASSY.
76500-07075-102	OH	DUCT
76500-07900-105	OH	MIXING VALVE
76500-07901-103	OH	BLOWER, HEAT/VENT
76500-07901-105	OH	BLOWER, HEAT/VENT
76500-07903-101	OH	VALVE, SHUTOFF
76500-07903-102	OH	VALVE ASSY
76500-07903-102	OH	VALVE ASSY
76500-07903-102	OH	VALVE ASSY
76500-07903-102	OH	VALVE ASSY
76500-07903-103	OH	VALVE
76500-07904-101	SV	LOW PRESSURE SWITCH
76500-07904-101	SV	LOW PRESSURE SWITCH
76500-07904-101	SV	LOW PRESSURE SWITCH
76500-07904-101	SV	LOW PRESSURE SWITCH
76500-07904-101	NS	LOW PRESSURE SWITCH
76500-07904-102	SV	SWITCH PRESSURE
76500-07906-101	OH	TUBE ASSY
76500-07908-102	OH	GEN OVER TEMP PROBE
76500-07908-102	OH	GEN OVER TEMP PROBE
76500-07909-101	OH	THERMAL SWITCH
76500-07910-107	SV	HOSE ASSY
76500-17901-101	OH	VALVE, REG. PRESS
76522-00904-043	OH	CABLE ASSY
765407-13	_	HOUSING
765407-4	OH	HOUSING, TURBINE
765410-1	OH	HOUSING
765410-10	OH	HOUSING
765410-40	OH	LINER
765410-900	OH	RING, CONTAINMENT
765411-1	OH	BEARING SLEEVE
765415-2	OH	BRACKET

76541-5-2	OH	BRACKET
765430-1	OH	FAN
76550-00902-101	NS	CONTACTOR
76550-00902-101	OH	CONTACTOR
76550-00902-101	OH	CONTACTOR
76550-00902-101	OH	CONTACTOR
76550-00902-101	OH	CONTACTOR
76550-00902-102	OH	CONTACTOR
76550-00902-103	OH	RELAY
76550-00902-103	OH	RELAY
76550-00902-103	OH	RELAY
76550-00902-103	OH	RELAY
76550-00902-103	OH	RELAY
76550-00902-103	OH	RELAY
76550-00902-103	OH	RELAY
76550-01001-103	OH	ADVISORY PANEL
76550-01001-149	OH	ADVISORY PANEL
76550-01008-101	OH	DIMMER CONTROL
76550-01008-101	OH	DIMMER CONTROL
76550-01008-101	OH	DIMMER CONTROL
76550-01008-102	OH	DIMMER CONTROL
76550-01008-102	OH	DIMMER CONTROL
76550-01008-103	OH	DIMMER CONTROL
76550-01010-101	SV	WINDSHIELD HEATER CONTROL UNIT
76550-01010-101	SV	WINDSHIELD HEATER CONTROL UNIT
76550-01010-101	SV	WINDSHIELD HEATER CONTROL UNIT
76550-01010-101	SV	WINDSHIELD HEATER CONTROL UNIT
76550-01013-103	OH	MOTOR, W/W
76550-01013-103	OH	MOTOR, W/W
76550-01013-103	OH	MOTOR, W/W
76550-01013-103	OH	MOTOR, W/W
76550-01015-042	OH	COVER
76550-01015-045	OH	PANEL, AFCS C/B
76550-02001-041	OH	PANEL ASSY
76550-02001-063	OH	PANEL ASSY
76550-02004-059	OH	PANEL ASSY, RELAY
76550-02005-101	OH	SEARCH LIGHT
76550-02005-103	OH	SEARCH LIGHT
76550-02005-104	OH	SEARCH LIGHT
76550-02005-104	OH	SEARCH LIGHT
76550-02009-012	OH	LANDING LIGHT
76550-02009-012	OH	LANDING LIGHT
76550-02009-012	OH	LANDING LIGHT
76550-02009-012	OH	LANDING LIGHT
76550-02015-047	OH	PANEL ASSY, RELAY
76550-02015-047	OH	PANEL ASSY, RELAY

76550-02016-048	OH	PANEL ASSY
76550-02017-057	NE	PANEL ASSY,UPPER
76550-02192-041	NE	SUPPORT ASSY
76550-02192-101	OH	SUPPORT ASSY
76550-02192-101	NE	SUPPORT ASSY
76550-02501-043	OH	PANEL ASSY
76550-02501-044	OH	PANEL ASSY
76550-02502-043	OH	PANEL ASSY
76550-02502-045	OH	PANEL ASSY
76550-03001-041	OH	LIGHT ASSY/ C/W BULB
76550-03004-042	OH	JUNCTION BOX
76550-03004-053	OH	DC JUNCTION BOX
76550-03004-108	NE	BUS BAR
76550-03006-041	OH	PANEL ASSY
76550-03006-043	NE	PANEL ASSY
76550-03007-101	OH	INVERTER
76550-03007-105	OH	INVERTER, 600VA
76550-03010-045	OH	ROD
76550-03033-042	OH	PALLET ASSY
76550-09005-102	OH	TRANSFORMER-CURRENT
76550-09005-102	OH	TRANSFORMER-CURRENT
76550-09005-102	OH	TRANSFORMER-CURRENT
76550-09005-104	OH	CONTROL, AC
76550-09005-105	OH	GENERATOR, A C
76550-09005-108	OH	AC GEN CONTROL
76550-09005-108	AR	AC GEN CONTROL
76550-09005-108	OH	AC GEN CONTROL
76550-09005-108	OH	AC GEN CONTROL
76550-09005-110	OH	GENERATOR, AC
76550-09005-111	OH	GENERATOR, AC
76550-09005-111	OH	GENERATOR, AC
76550-09006-106	OH	CONTROL UNIT, D.C.
76550-09006-106	OH	CONTROL UNIT, D.C.
76550-09006-106	OH	CONTROL UNIT, D.C.
76550-09006-106	OH	CONTROL UNIT, D.C.
76550-09006-107	OH	DC STARTER/GEN
76550-20700-101	OH	CAUTION PANEL
76552-00107-041	NE	HARNES ASSY
76552-00109-042	NE	CABLE
76552-00109-043	OH	CABLE
76552-00110-107	NS	CABLE ASSY.
76552-00110-107	OH	CABLE ASSY.
76552-00110-108	NS	CABLE ASSY.
76552-00110-108	SV	CABLE ASSY.
76552-00110-109	NE	CABLE ASSY.
76552-00110-109	SV	CABLE ASSY.
76552-00110-110	NE	CABLE ASSY.



76552-00110-110	SV	CABLE ASSY.
76552-00136-043	NE	HARNESS
76552-00192-041	NE	HARNESS
76552-00192-042	NE	HARNESS
76552-00192-043	NE	HARNESS
76552-00192-044	NE	HARNESS
76552-00192-045	NE	HARNESS
76552-00192-046	NE	HARNESS
76552-00192-047	NE	HARNESS
76552-00196-044	NE	HARNESS ASSY
76552-00227-046	NE	HARNESS ASSY
76552-00904-042	SV	CABLE ASSY
76552-00904-042	NS	CABLE ASSY
76552-00904-046	OH	CABLE SEGMENT
76552-00904-046	OH	CABLE SEGMENT
76552-00904-102	NE	CABLE ASSY
76552-00904-103	NE	CABLE ASSY
76552-00904-104	OH	CABLE ASSY.
765950-6	NE	ACTUATOR, AFCS
765950-6	NE	ACTUATOR, AFCS
765950-6	OH	ACTUATOR, AFCS
765950-6	NE	ACTUATOR, AFCS
76600-00133-051	NE	CONNECTOR
76600-00300-066	NE	CABLE ASSY
76600-02012-101	OH	ZEE AFT
76600-02012-102	OH	ZEE FORWARD
76600-02034-047	OH	SHELF ASSY LH
76600-02034-048	OH	SHELF ASSY RH
76600-02034-050	OH	SHELF ASSY RH
76600-02038-044	SV	BOX ASSY, MAMA
76600-02038-044	SV	BOX ASSY, MAMA
76600-02110-102	SV	RADOME
76600-02113-102	OH	GYRO, VERTICAL
76600-02113-103	OH	VERTICAL GYRO
76600-02113-103	OH	VERTICAL GYRO
76600-02165-041	SV	FILTER ASSY./RO.MOD
76649-1	OH	VALVE
76650-00901-101	OH	VALVE, SOLENOID
76650-00901-101	AR	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-00901-102	OH	VALVE, SOLENOID
76650-01801-103	OH	BOTTLE ASSY, LG

76650-01801-103	OH	BOTTLE ASSY, LG
76650-01801-103	OH	BOTTLE ASSY, LG
76650-01802-102	OH	ACTUATOR, VTA
76650-01901-101	OH	MASTER CYLINDER
76650-02001-141	OH	SUPPORT BRACKET ASSY
76650-02002-012	OH	ACTUATING MECHANISM
76650-02002-014	OH	RELEASE INSTALL
76650-02003-109	NE	ADAPTER
76650-02802-104	OH	CONTROL VALVE
76650-02802-104	OH	CONTROL VALVE
76650-02802-104	OH	CONTROL VALVE
76650-03003-041	NE	TUBE ASSY
76650-05801-112	OH	T/R SERVO
76650-05801-114	OH	TAIL ROTOR SERVO
76650-05803-102	OH	ACTUATOR, T/R SERVO
76650-09002-044	OH	SUPPORT ASSY
76650-09002-044	OH	SUPPORT ASSY
76650-09002-104	OH	ANGLE
76650-09003-047	OH	MANIFOLD ASSY
76650-09005-105	OH	AC GENERATOR
76650-09006-115	OH	STAND OFF
76650-09006-115	OH	STAND OFF
76650-09801-105	OH	MODULE, HYDRAULIC
76650-09803-103	OH	POWER PACK, R/B
76650-09805-109	OH	SERVO ACTUATOR
76650-09805-109	OH	SERVO ACTUATOR
76650-09805-109	OH	SERVO ACTUATOR
76650-09805-110	OH	SERVO ACTUATOR
76650-09805-110	OH	SERVO ACTUATOR
76650-09805-110	OH	SERVO ACTUATOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09805-111	OH	SERVO, MAIN ROTOR
76650-09806-102	OH	CABLE ASSY
76650-09807-101	OH	SERVO, MAIN
76650-09807-101	OH	SERVO, MAIN
76650-09807-101	OH	SERVO, MAIN
76650-09807-101	OH	SERVO, MAIN
76650-09807-101	OH	SERVO, MAIN
76650-09807-101	OH	SERVO, MAIN
76650-09808-101	OH	HYDRAULIC PUMP
76650-09808-101	OH	HYDRAULIC PUMP

76650-09808-102	OH	PUMP, HYDRAULIC
76650-09808-102	OH	PUMP, HYDRAULIC
76650-09808-102	AR	PUMP, HYDRAULIC
76650-09808-102	AR	PUMP, HYDRAULIC
76650-09808-102	AR	PUMP, HYDRAULIC
76650-09808-102	AR	PUMP, HYDRAULIC
76650-09808-102	AR	PUMP, HYDRAULIC
76650-09809-101	OH	ROTOR BRAKE ACCUMULATOR
76651-02005-070	NE	TUBE
76651-02005-071	NE	TUBE
76651-03002-042	NE	TUBE ASSY
76651-03002-045	NE	TUBE ASSY
76651-03002-047	NE	TUBE ASSY
76651-03002-048	NE	TUBE
76651-03002-069	NE	TUBE / PUMP SECTION
76651-03002-095	NE	TUBE ASSY
76651-03002-096	NE	TUBE ASSY
76651-03002-097	NE	TUBE
76651-03002-186	NE	TUBE
76651-03002-189	NE	TUBE ASSY
76651-03003-043	NE	TUBE ASSY
76651-03003-046	NE	TUBE ASSY
76651-03003-050	NE	LINE
76651-03003-051	NE	TUBE
76651-03003-053	OH	TUBE ASSY
76651-03004-049	NE	TUBE ASSY
76651-03004-050	NE	TUBE ASSY
76651-03004-055	NE	TUBE ASSY
76651-09002-044	NE	TUBE
76651-09002-045	NE	TUBE
76651-09002-046	NE	TUBE
76651-09002-048	OH	TUBE ASSY
76651-09002-048	NE	TUBE ASSY
76651-09002-052	NE	TUBE
76651-09002-053	NE	TUBE
76651-09002-054	NE	MANIFOLD ASSY
76651-09002-056	NE	TUBE ASSY
76651-09002-058	NE	TUBE ASSY
76651-09002-059	NE	TUBE
76651-09002-065	SV	TUBE ASSY.
76651-09002-073	OH	ROTOR BRAKE
76700-20032-104	NE	PIN
76700-20136-041	NS	PLUG EXHAUST
76703-03003-042	SV	PITCH BEAM
768857-002	OH	EJECTOR
76900-01802-106	OH	ACTUATOR, AFCS
76900-01802-106	OH	ACTUATOR, AFCS



76900-01821-103	SV	TRANSDUCER
76900-01821-103	AR	TRANSDUCER
76900-01822-103	OH	ACTUATOR
76900-01825-102	OH	AMPLIFIER, PBA
76900-01825-102	OH	AMPLIFIER, PBA
76900-01851-042	OH	AMP/VIB ABOSRB
76900-01880-106	OH	DCA AMPLIFIER
76900-01880-106	OH	DCA AMPLIFIER
76900-01880-106	OH	DCA AMPLIFIER
76900-01880-106	OH	DCA AMPLIFIER
76900-01880-106	OH	DCA AMPLIFIER
76900-01881-103	OH	VIB ABSORB AMPL.
76900-04004-044	OH	PANEL ASSY
76900-09505-103	OH	SUPPORT ASSY
76900-17901-101	OH	VALVE, REG. PRESS
769124-10	OH	NOZZLE
769125-2	SV	INSULATOR
769126-10	AR	PLATE
769127-2	OH	HOUSING
769130-2	OH	HEAT EXCHANGER
769190-001	OH	MUFFLER ASSY
7707-111A25-1	OH	TRANSMITTER
7707-111A25-1	OH	TRANSMITTER
7707-111A25-1	OH	TRANSMITTER
7707-111A25-1	OH	TRANSMITTER
7707-30-D5-1	OH	TRANSMITTER, PRESS.
7709-15-B5-1	OH	TRANSMITTER, PRESS
771523-2	OH	SLICE A, HEAD/HOLD
771524-2	OH	SLICE B, HEAD/HOLD
772947-1	OH	DUCKT ASSY
7740-00381	AR	FLOAT ASSY
775401-2	OH	SLICE C, HEAD/HOLD
780926-1	OH	AIRSPED HOLD AMP.
78286176304-07020	OH	SHIELD ASSY
783230-1	OH	ROTARY ACTUATOR
783230-1	OH	ROTARY ACTUATOR
785340-5-021	SV	ENGINE ELECTRONIC CONTROL UNIT
785340-5-021	OH	ENGINE ELECTRONIC CONTROL UNIT
787223-1	OH	ALTERNATOR, POWER
792-6216-001	SV	RECEIVER, ADF
7CI-10-W	NS	CAMLOC
7G304	OH	SWITCH
7U74-36-2	OH	HYD SOLENOID
7U7467	OH	VALVE SOLENOID
80-0093-1	OH	PANEL, MASTER WARN
80-0125-3	OH	LIGHT ASSY, CAUTION
8004230G1	OH	CAVITY ASSY

800496-8	NE	BTI INDICATOR
8014870-505	SV	CIRCUIT BOARD
8015263-501	SV	ANTENNA
8015263-503	SV	ANTENNA
8058-1	OH	AFT DIVISION SEAT
805D0770-05	OH	DME
805D0770-05	OH	DME
80742-01-003E	OH	NAVIGATION PROCESSOR
80792R08T090050	OH	NAVIGATION COMPUTER
810-371	NE	CUSHION
810-371A	NE	CUSHION
81-1543	SV	CIRCUIT BOARD
81-2102-3	OH	QUICKSTEP
814-16	OH	CLOCK
815MX5GL	NE	CLEANER
815MX5GL	NE	CLEANER
819140-16-024	NS	CONTROL, ELECTRONIC ENGINE
8193-1	SV	OIL SWITCH, PRSS
8195-1	OH	PRESSURE SNUBBER
8295C	OH	COMBUSTION HEATER
830147H-498-1-188-376	NE	TRIGGER LOCK
83-102-1	OH	FUEL QTY IND.
83311-49522	OH	IGNITION EXCITER
8415-13S	SV	ANTENNA
8423-030	OH	ACCUMULATOR
843420-5	OH	CAUTION ADVISORY PANEL
843785-1-G-37	NE	LEGEND
8503S20LW	OH	ALTIMETER
85141/021	OH	VOLTAGE REG
85141A	OH	VOLTAGE REGULATOR
85-31520-0100	OH	DRUMSHAFT ASSY
856LK-1	OH	PITOT STATIC TUBE
856LK-2	AR	PITOT STATIC TUBE
856LK-2	AR	PITOT STATIC TUBE
85812B31-26-28	OH	BUSHING
8584B10-16-12	OH	BUSHING
8586-15-24-16	OH	BUSHING
8586-15-34-16	OH	BUSHING
8586B15-32-16	OH	BUSHING
8587-19-27-18	OH	BUSHING
8588-24-19-20	OH	BUSHING
85B6-15-24-16	OH	BUSHING,SLEEVE
85B8-24-19-20	OH	BUSHING
860-1	OH	CONTROLLER
86410-2	OH	HYD PRESSURE IND
86410-2	OH	HYD PRESSURE IND
86410-2	OH	HYD PRESSURE IND

88535-8000A	OH	VALVE, AUTO-REGULATE
890-402	OH	LATCH MECH.
890540-03	OH	ACTUATOR, PNEUMATIC
891086-01	AR	VALVE CARTRIDGE 1 MALE OUTLET
891134-03	OH	FIRE BOTTLE
891134-03	OH	FIRE BOTTLE
891134-03	OH	FIRE BOTTLE
891134-03	OH	FIRE BOTTLE
8916K970	NE	SWITCH
89336-02	OH	FIRE EXTINGUISHER
895310-1	OH	FUEL PUMP
897326-1	NS	LEVER
8983140-320	SV	CIRCUIT BREAKER
898916-10-2	OH	VALVE REG. PRESS
89D17-1	OH	COMBUSTION HEAD
8A680-005	SV	THERMOSTAT
8A680-005	SV	THERMOSTAT
8A680-005	NS	THERMOSTAT
8A680-006	OH	VALVE, TEMP
8A680-006	NE	VALVE, TEMP
8D-005-1-8	SV	INSERT
8D105	OH	VALVE
8DJ100LAW1	OH	INDICATOR, ITT
8DJ131AAB1	OH	TRIPLE TACH
8DJ131AAB1	OH	TRIPLE TACH
8DJ131LAB1	OH	TACHOMETER
8DJ142LWA2	OH	INDICATOR, FUEL FLOW
8DJ142LWT4	OH	FUEL FLOW INDICATOR
8DJ67FBC-1	OH	DUAL TACH
8DJ81CAA4	OH	INDICATOR, TACH
8DJ81CDG	OH	TACH, N1
8DJ81LCA4	OH	TACHOMETER
8DJ81LWA4	OH	INDICATOR
8DJ81LZA4	OH	TACHOMETER IND
8DJ81LZA4	OH	TACHOMETER IND
8ES003417-00M01	OH	POWER SUPPLY UNIT
8F105	NS	VALVE ASSY
8G155	SV	SWITCH
8O15235	SV	RCV
8TJ88GAR1	OH	POWER SUPPLY
90-0092-13	OH	BLADE
90-0093-3	OH	GUIDE LINK
90-0096-3	NE	FLEX DRIVE
90-0097-11	OH	ARM DRIVE
9000N.1	OH	TURN COORDINATOR
90-0143-1	OH	LINK-GUIDE ARM
90-0143-1	OH	LINK-GUIDE ARM

90-0143-1	OH	LINK-GUIDE ARM
90-0163-1	OH	DRIVE ARM ASSY
90-0163-1	OH	DRIVE ARM ASSY
90-0163-1	OH	DRIVE ARM ASSY
90-0163-1	OH	DRIVE ARM ASSY
90-0163-1	OH	DRIVE ARM ASSY
90-0164-3	OH	BLADE ASSY W/W
90-0164-3	OH	BLADE ASSY W/W
90-026-327R1	NE	LIGHT TRAY
90-028-1	NE	LIGHT ASSY
90-032-327-R1	NS	LIGHT ASSY
9016-1017	OH	FUEL PRESS, IND.
90-4001	NE	SEAL KIT
906-1A	OH	TRANSFORMER
906-1A	OH	TRANSFORMER
906-1A	OH	TRANSFORMER
906-1A	OH	TRANSFORMER
90A30	RP	HEATER FUEL NOZZLE
91-0187-3	NE	SQUARE ADAPTER
9101PP	NS	BEARING
9103PP	NS	BEARING
91515-002	OH	PANEL, FUEL SWITCH
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-530021-17	NS	STRAP ASSY BELT BEIGE
91-8620	SV	STROBE LIGHT
919-0001-01A	SV	EPA INDICATOR
9200-M	SV	ALTITUDE SERIALIZER
9220-4402	NS	RELAY
92250-00801-102	NE	ROTOR BRAKE
9229-4459	NS	RELAY
9230-8665	NE	RELAY, 10 AMP
923V11	OH	HORIZON GYRO
92550-11803-101	NE	T/R HARNESS
92550-11803-101	SV	T/R HARNESS
927-024-026-13	OH	PANEL
92730-2	OH	SHUT OFF VALVE
92730-2	OH	SHUT OFF VALVE
927-C1	OH	ROD ASSY
92850-02805-104	OH	OPERATOR PANEL





9532425-3	OH	BRAKE ASSY
9599-607-42305	SV	RADIO-ALT
95-99895	NE	PLUG / BOLT
965-36502-002	AR	WIRE STRIKE UPPER
96B-1692-3	OH	COCKPIT DOOR
97153-420	OH	BLOCK, HYD. R/B
97536-01	SV	COURSE INDICATOR
97536-01	OH	COURSE INDICATOR
97733-100	OH	VHF CONTROL HEAD
978967-204G	SV	PRESS/SWITCH
978969-204	OH	PRESSURE SWITCH
978969-204-G	OH	PRESSURE SWITCH
978969-412	NE	PRESSURE SWITCH
979108-1-1	OH	VALVE-BYPASS
979108-2-1	OH	VALVE, BYPASS
97913755DX	OH	FILTER ASSY
979460-2-1	OH	VALVE ASSY
979734-2-2	OH	SHUTOFF VALVE, HOT AIR
9807-18	OH	INDICATOR,FUEL FLOW
98505-83222	OH	FLOW SWITCH & TUBE
98A173	NS	MOTOR DC
990-3338-000	OH	AUDIO AMPLIFIER
9904-4	OH	VALVE ASSY
9912053-7	OH	RETRACT ACTUATOR
9A1746	OH	CARTRIDGE
9BG401406-00	NS	LIGHT ASSY